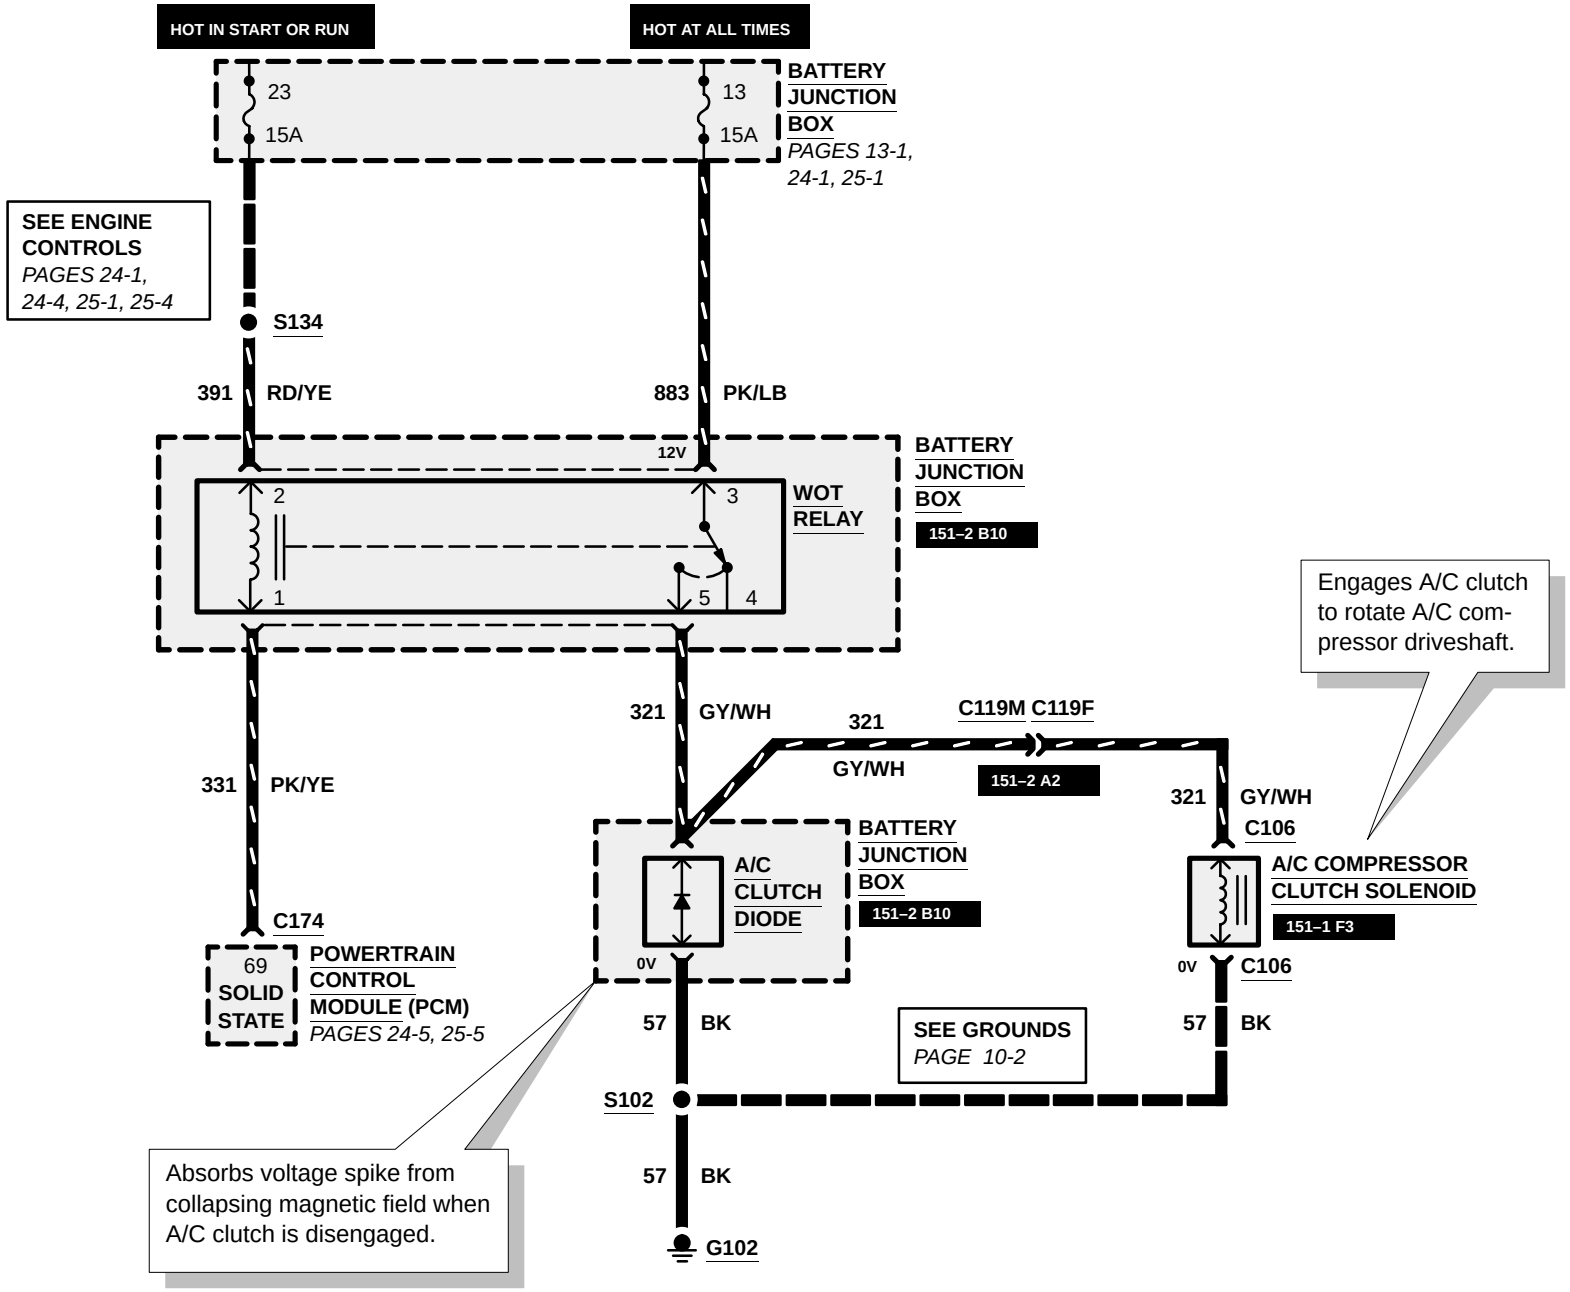
HOT IN START OR RUN
HOT AT ALL TIMES
23
15A
13
15A
BATTERY JUNCTION BOX
PAGES 13-1, 24-1, 25-1
SEE ENGINE CONTROLS
PAGES 24-1, 24-4, 25-1, 25-4
S134
391 RD/YE
883 PK/LB
12V
2
3
1
5
4
WOT RELAY
BATTERY JUNCTION BOX
151–2 B10
321 GY/WH
321 GY/WH
C119M C119F
151–2 A2
321 GY/WH
C106
331 PK/YE
A/C CLUTCH DIODE
BATTERY JUNCTION BOX
151–2 B10
A/C COMPRESSOR CLUTCH SOLENOID
151–1 F3
0V
0V
C106
C174
69
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-5, 25-5
57 BK
57 BK
SEE GROUNDS
PAGE 10-2
S102
57 BK
G102
Engages A/C clutch to rotate A/C compressor driveshaft.
Absorbs voltage spike from collapsing magnetic field when A/C clutch is disengaged.