C795 (BK)

14A584

N138
Door lock/unlock switch, passenger

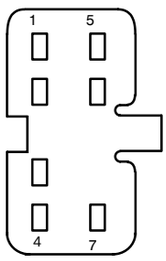

F07016

Pin	Circuit	Circuit Function
1	31S-AA39B (BK/YE)	Ground, switched
2	31-AA39 (BK)	Ground
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	31S-AA85B (BK/RD)	Ground, switched

C799 (BK)

14401

N155
Liftgate/decklid release switch

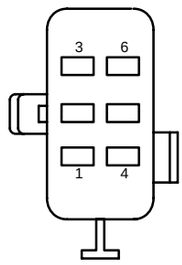

F06065

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	31S-AA30 (BK/YE)	Ground, switched
4	–	not used
5	–	not used
6	31-AA30 (BK)	Ground

C798 (NA)

14405

N22
Liftgate/decklid switch

F05060

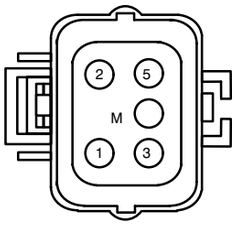

Pin	Circuit	Circuit Function
1	32-AA27 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	31-GL20 (BK)	Ground
4	31S-LB1 (BK/BU)	Ground, switched
5	31S-GL20 (BK/RD)	Ground, switched

C800 (NA)

14A584

N22
Liftgate/decklid switch

F05060

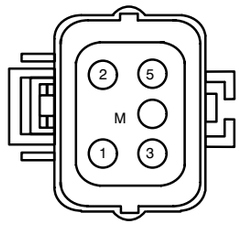

Pin	Circuit	Circuit Function
1	32-AA27 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	31S-GL27 (BK/OG)	Ground, switched
3	31-GL20 (BK)	Ground
4	31S-LB1 (BK/BU)	Ground, switched
5	31S-GL20 (BK/RD)	Ground, switched