C466a

182862

A14
Subwoofer amplifier
(18C804)

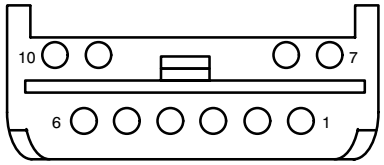

F10009

Pin	Circuit	Circuit Function
1	173 (DG/VT)	Radio (18806) – Subwoofer, High, mute
2	694 (BK/LG)	Ground
3	694 (BK/LG)	Ground
4	–	not used
5	797 (LG/VT)	Voltage supplied at all times (overload protected)
6	797 (LG/VT)	Voltage supplied at all times (overload protected)
7	167 (BN/OG)	radio to sub–woofer high audio +
8	168 (RD/BK)	radio to sub–woofer high audio –
9	–	not used
10	–	not used

C466b

18W862

A14
Subwoofer amplifier
(18C804)

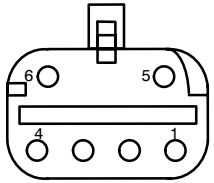

F06052

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	287 (BK/WH)	Subwoofer amplifier (18C804), to, subwoofer speaker –
4	822 (BK/LG)	Subwoofer amplifier (18C804), to, subwoofer speaker +
5	–	not used
6	–	not used

C475

18W862

E174
High mounted sto-
plamp (13A613)



F02265

Pin	Circuit	Circuit Function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground