## C316

### 14C719

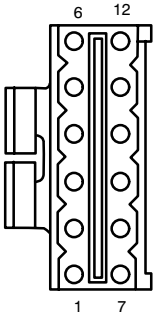


F12155

### 14A699/14B084

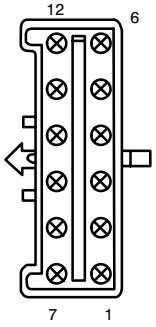


F12153

(1) 566 (DG)
(2) –
(3) 979 (RD/LB)
(4) 981 (RD/WH)
(5) 983 (RD/LG)
(6) 566 (DG)
(7) –
(8) –
(9) 990 (YE/LB)
(10) 980 (YE/WH)
(11) 982 (YE/LG)
(12) 1205 (BK)

## C360

### 14A699/ 14B084

N216
Seat adjust switch, driver side front (14A701)

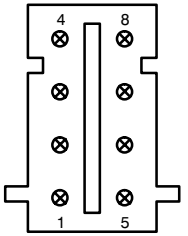


F08245

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 983 (RD/LG) | Rear height motor, Up |
| 2 | 566 (DG) | Voltage supplied at all times (overload protected) |
| 3 | 981 (RD/WH) | Fwd/Rwd motor, Forward |
| 4 | 1205 (BK) | Ground |
| 5 | 990 (YE/LB) | Front height motor, Down |
| 6 | 982 (YE/LG) | Rear height motor, Down |
| 7 | 979 (RD/LB) | Front height motor, Up |
| 8 | 980 (YE/WH) | Fwd/Rwd motor, Rearward |

## C323

### 14A546/ 14C719

N317
Safety belt buckle switch (10B924)




F02088

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 85 (BN/LB) | Safety belt buckle switch (10B924), input |
| 2 | 1205 (BK) | Ground |

## C361

### 14B084

N445
Lumbar adjust switch, left front (14B691)




F02088

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 566 (DG) | Voltage supplied at all times (overload protected) |
| 2 | 51 (BK/WH) | Lumbar adjust switch, left front (14B691), to, Driver seat lumbar compressor motor (65500) |