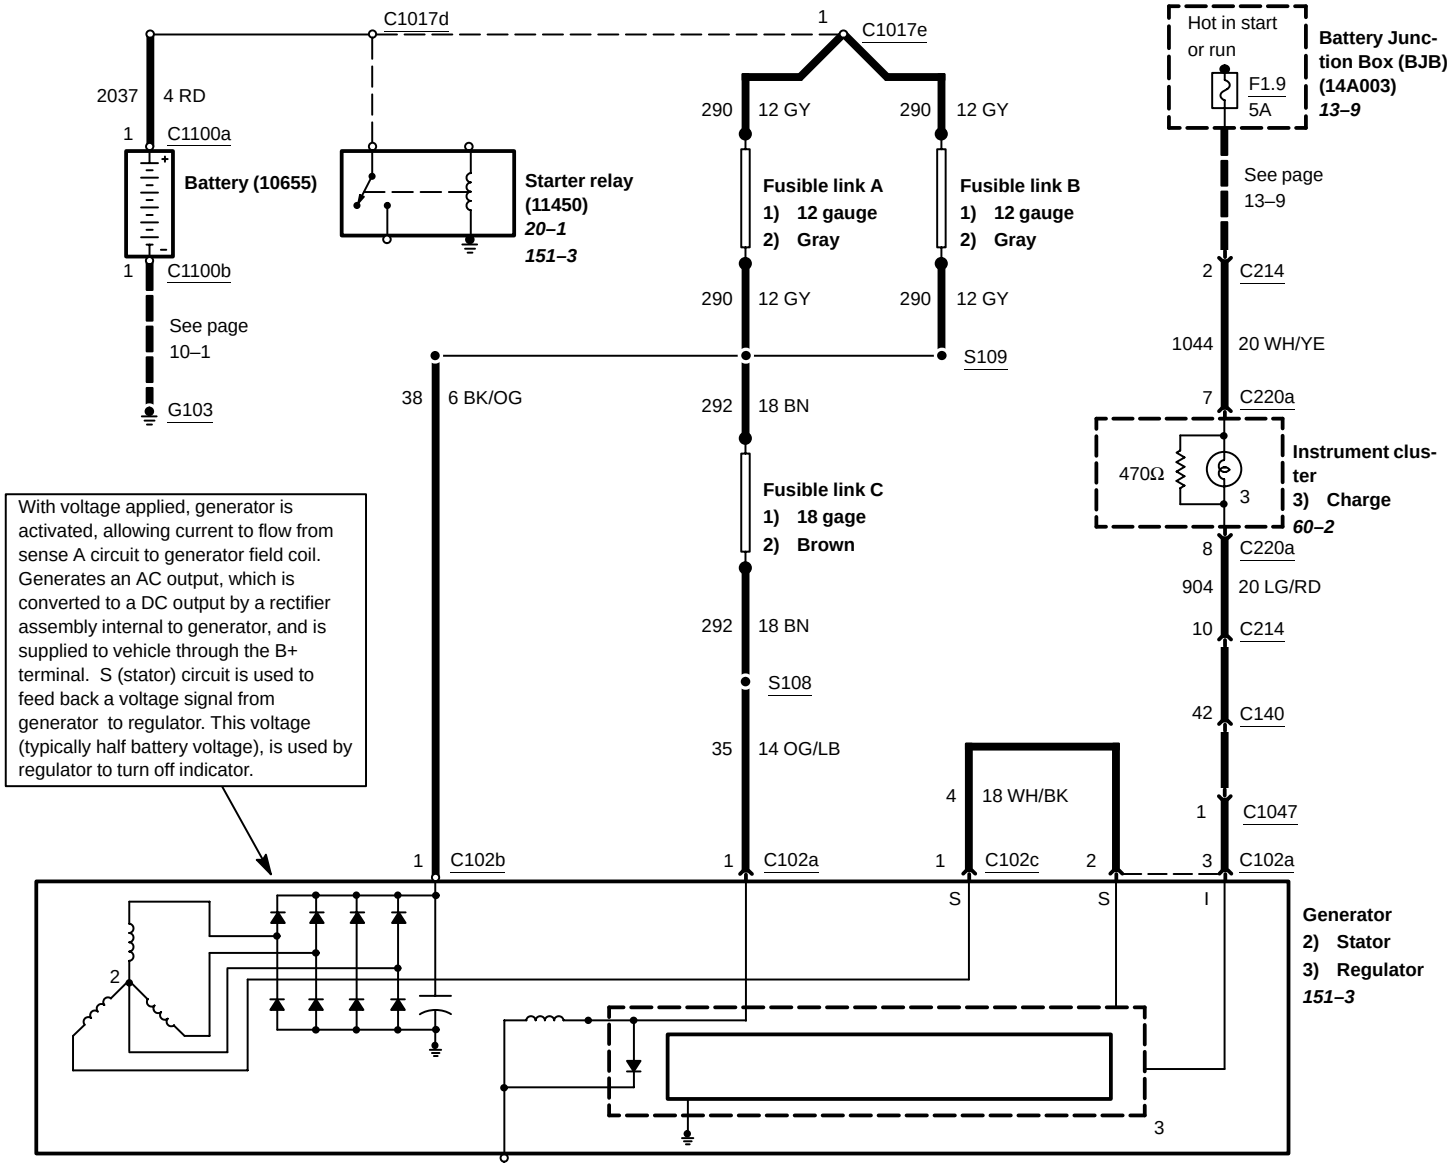

C1017d
1
C1017e
Hot in start or run
Battery Junction Box (BJB) (14A003)
13–9
F1.9
5A
2037 4 RD
1 C1100a
Battery (10655)
Starter relay (11450)
20–1
151–3
290 12 GY
290 12 GY
Fusible link A
1) 12 gauge
2) Gray
Fusible link B
1) 12 gauge
2) Gray
See page 13–9
2 C214
1044 20 WH/YE
1 C1100b
See page 10–1
G103
290 12 GY
290 12 GY
S109
38 6 BK/OG
292 18 BN
7 C220a
470Ω
3
Instrument cluster
3) Charge
60–2
Fusible link C
1) 18 gage
2) Brown
8 C220a
904 20 LG/RD
292 18 BN
10 C214
S108
42 C140
35 14 OG/LB
4 18 WH/BK
1 C1047
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
1 C102b
1 C102a
1 C102c
2
3 C102a
S
S
I
Generator
2) Stator
3) Regulator
151–3
2
3