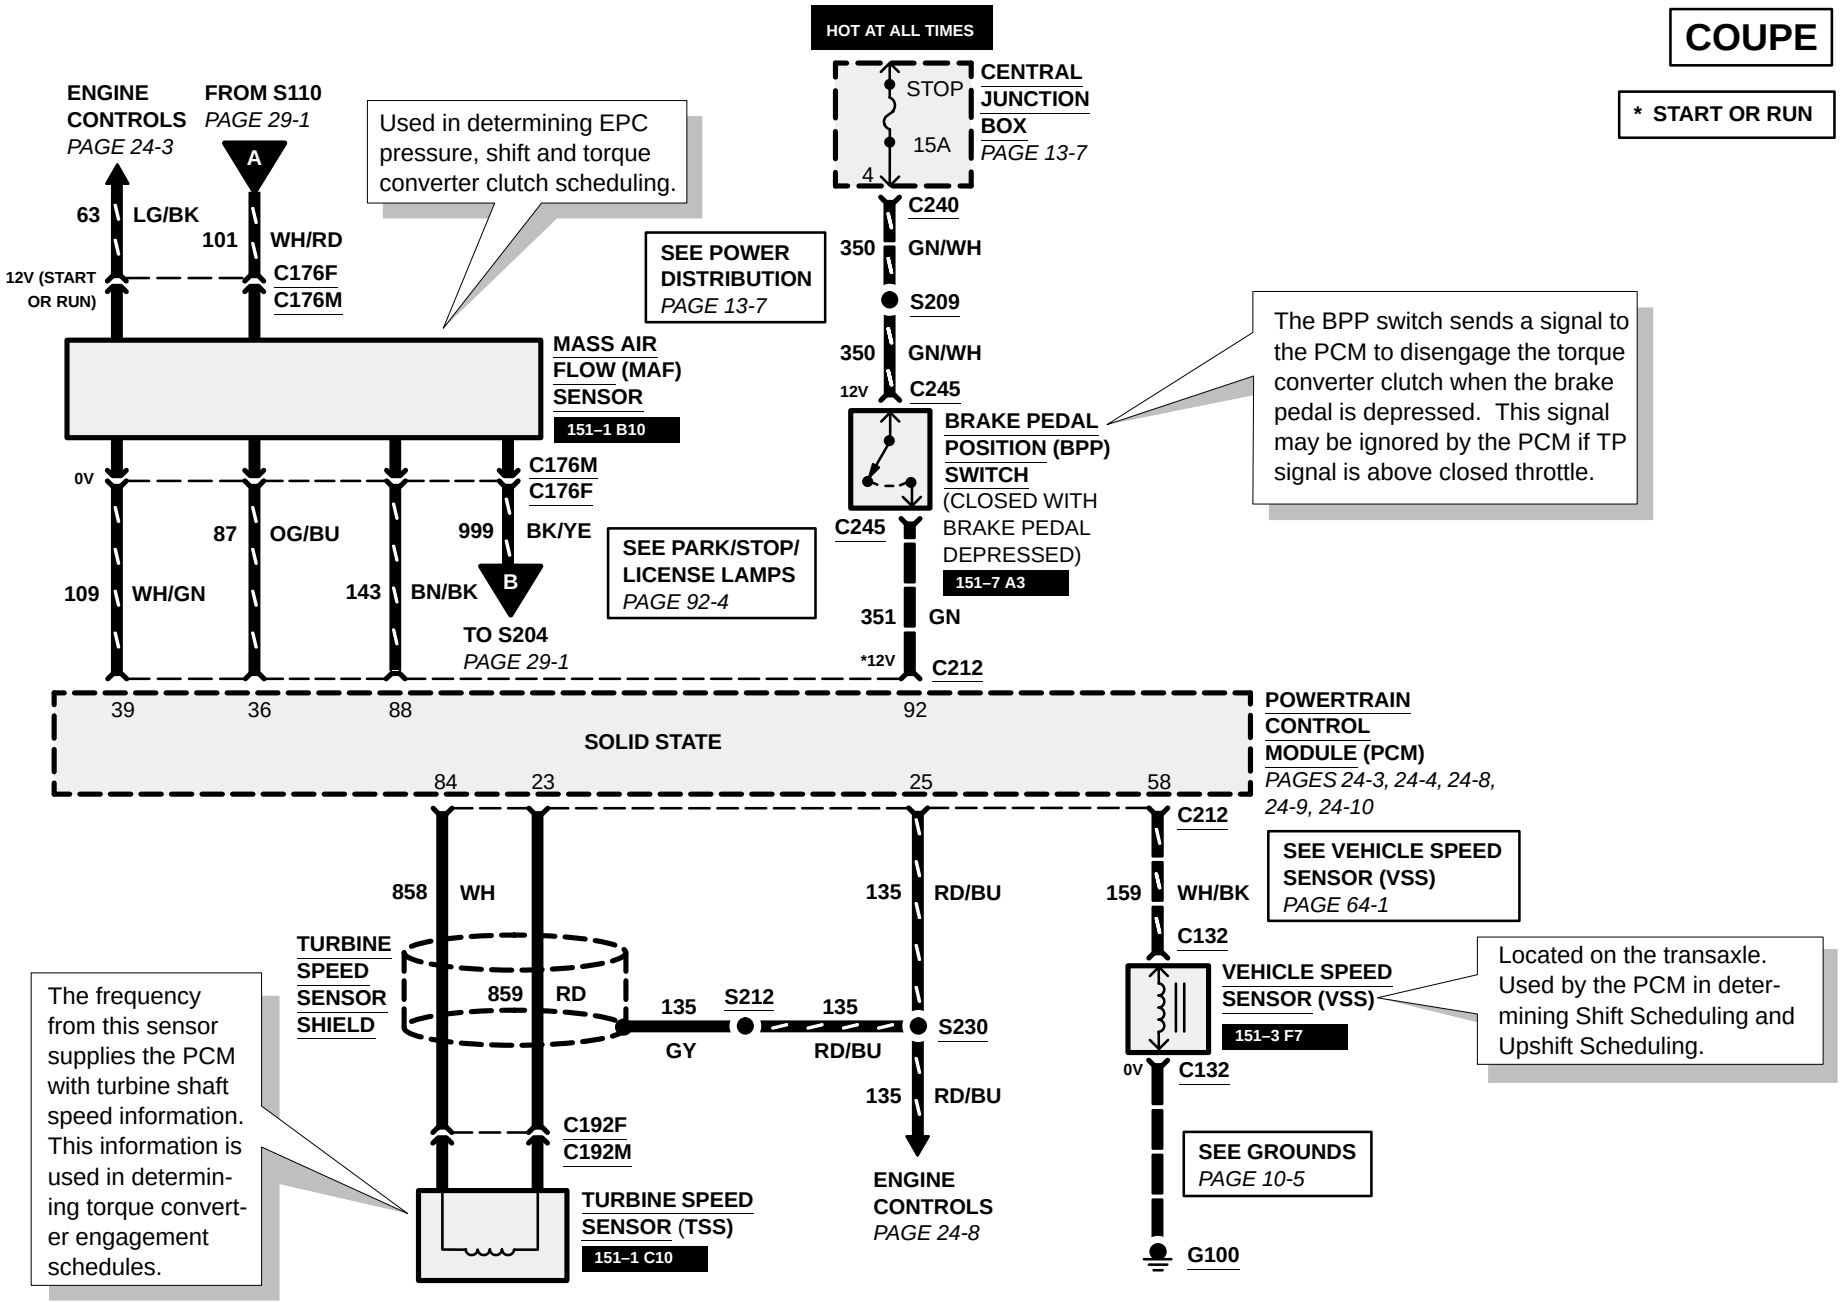
COUPE
* START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-7
STOP
15A
4
C240
350 GN/WH
S209
350 GN/WH
12V
C245
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–7 A3
C245
351 GN
*12V
C212
ENGINE CONTROLS
PAGE 24-3
FROM S110
PAGE 29-1
A
63 LG/BK
101 WH/RD
12V (START OR RUN)
C176F
C176M
Used in determining EPC pressure, shift and torque converter clutch scheduling.
SEE POWER DISTRIBUTION
PAGE 13-7
MASS AIR FLOW (MAF) SENSOR
151–1 B10
0V
C176M
C176F
87 OG/BU
999 BK/YE
109 WH/GN
143 BN/BK
B
TO S204
PAGE 29-1
SEE PARK/STOP/ LICENSE LAMPS
PAGE 92-4
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed throttle.
39
36
88
92
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-3, 24-4, 24-8, 24-9, 24-10
84
23
25
58
C212
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
858 WH
135 RD/BU
159 WH/BK
C132
TURBINE SPEED SENSOR SHIELD
859 RD
135 S212 135
S230
GY
RD/BU
VEHICLE SPEED SENSOR (VSS)
151–3 F7
Located on the transaxle. Used by the PCM in determining Shift Scheduling and Upshift Scheduling.
0V
C132
135 RD/BU
The frequency from this sensor supplies the PCM with turbine shaft speed information. This information is used in determining torque converter engagement schedules.
C192F
C192M
SEE GROUNDS
PAGE 10-5
TURBINE SPEED SENSOR (TSS)
151–1 C10
ENGINE CONTROLS
PAGE 24-8
G100