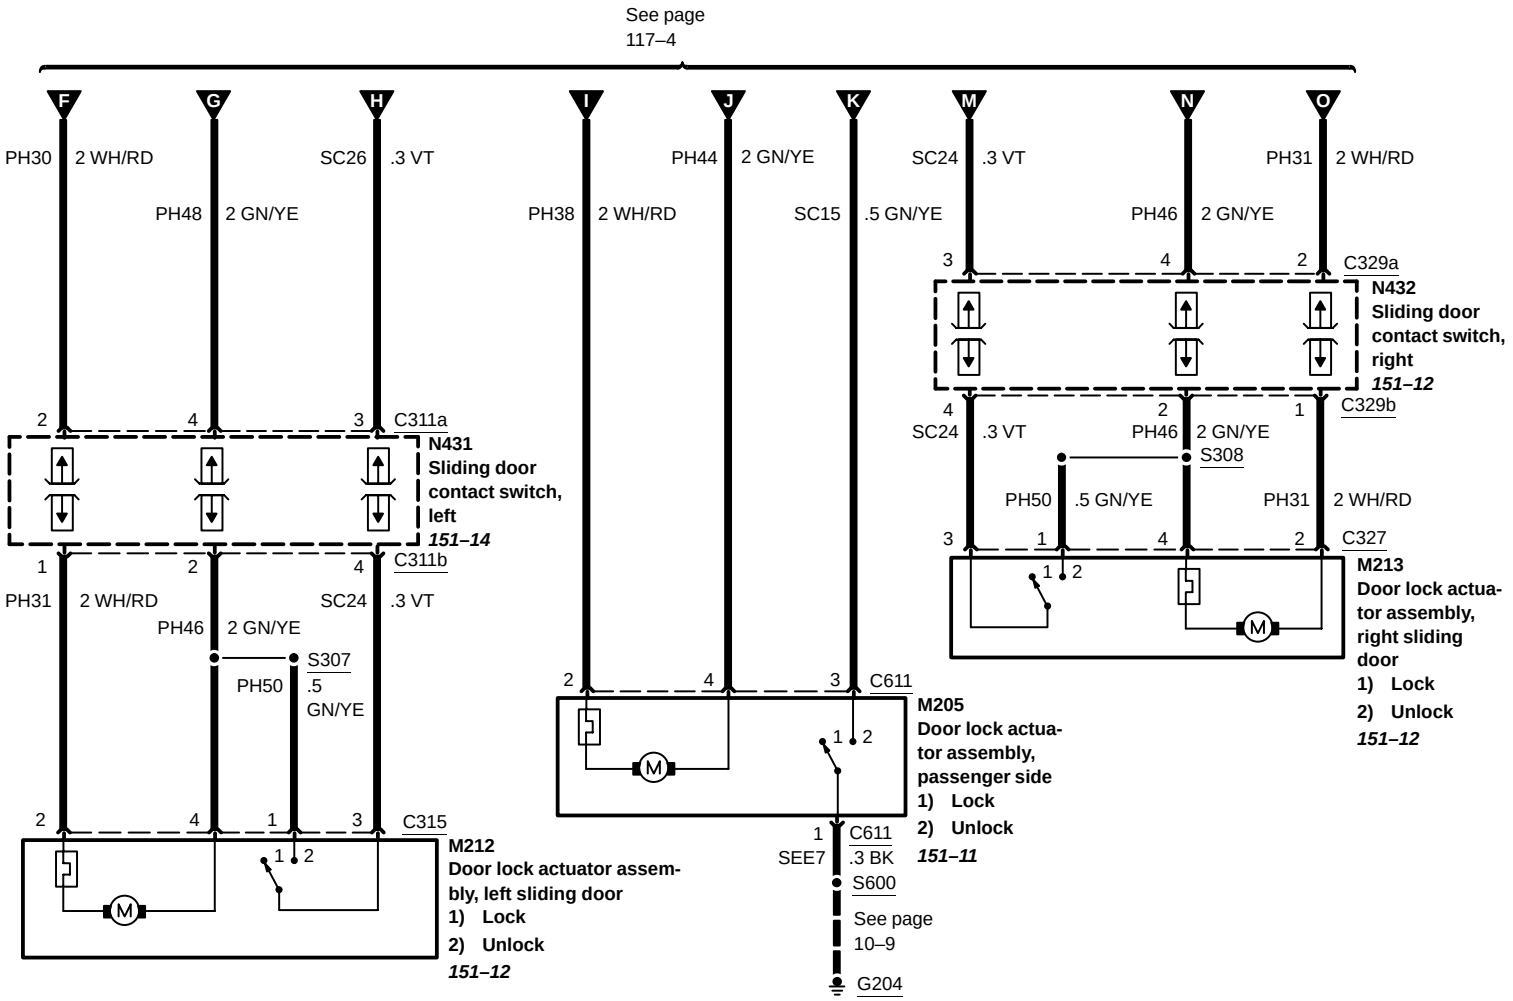
See page 117–4
F
G
H
I
J
K
M
N
O
PH30 2 WH/RD
SC26 .3 VT
PH48 2 GN/YE
PH38 2 WH/RD
PH44 2 GN/YE
SC15 .5 GN/YE
SC24 .3 VT
PH31 2 WH/RD
PH46 2 GN/YE
C329a
N432
Sliding door contact switch, right
151–12
C329b
S308
PH50 .5 GN/YE
C327
M213
Door lock actuator assembly, right sliding door
1) Lock
2) Unlock
151–12
C311a
N431
Sliding door contact switch, left
151–14
C311b
S307
C315
M212
Door lock actuator assembly, left sliding door
1) Lock
2) Unlock
151–12
C611
M205
Door lock actuator assembly, passenger side
1) Lock
2) Unlock
151–11
SEE7
C611 .3 BK
S600
See page 10–9
G204