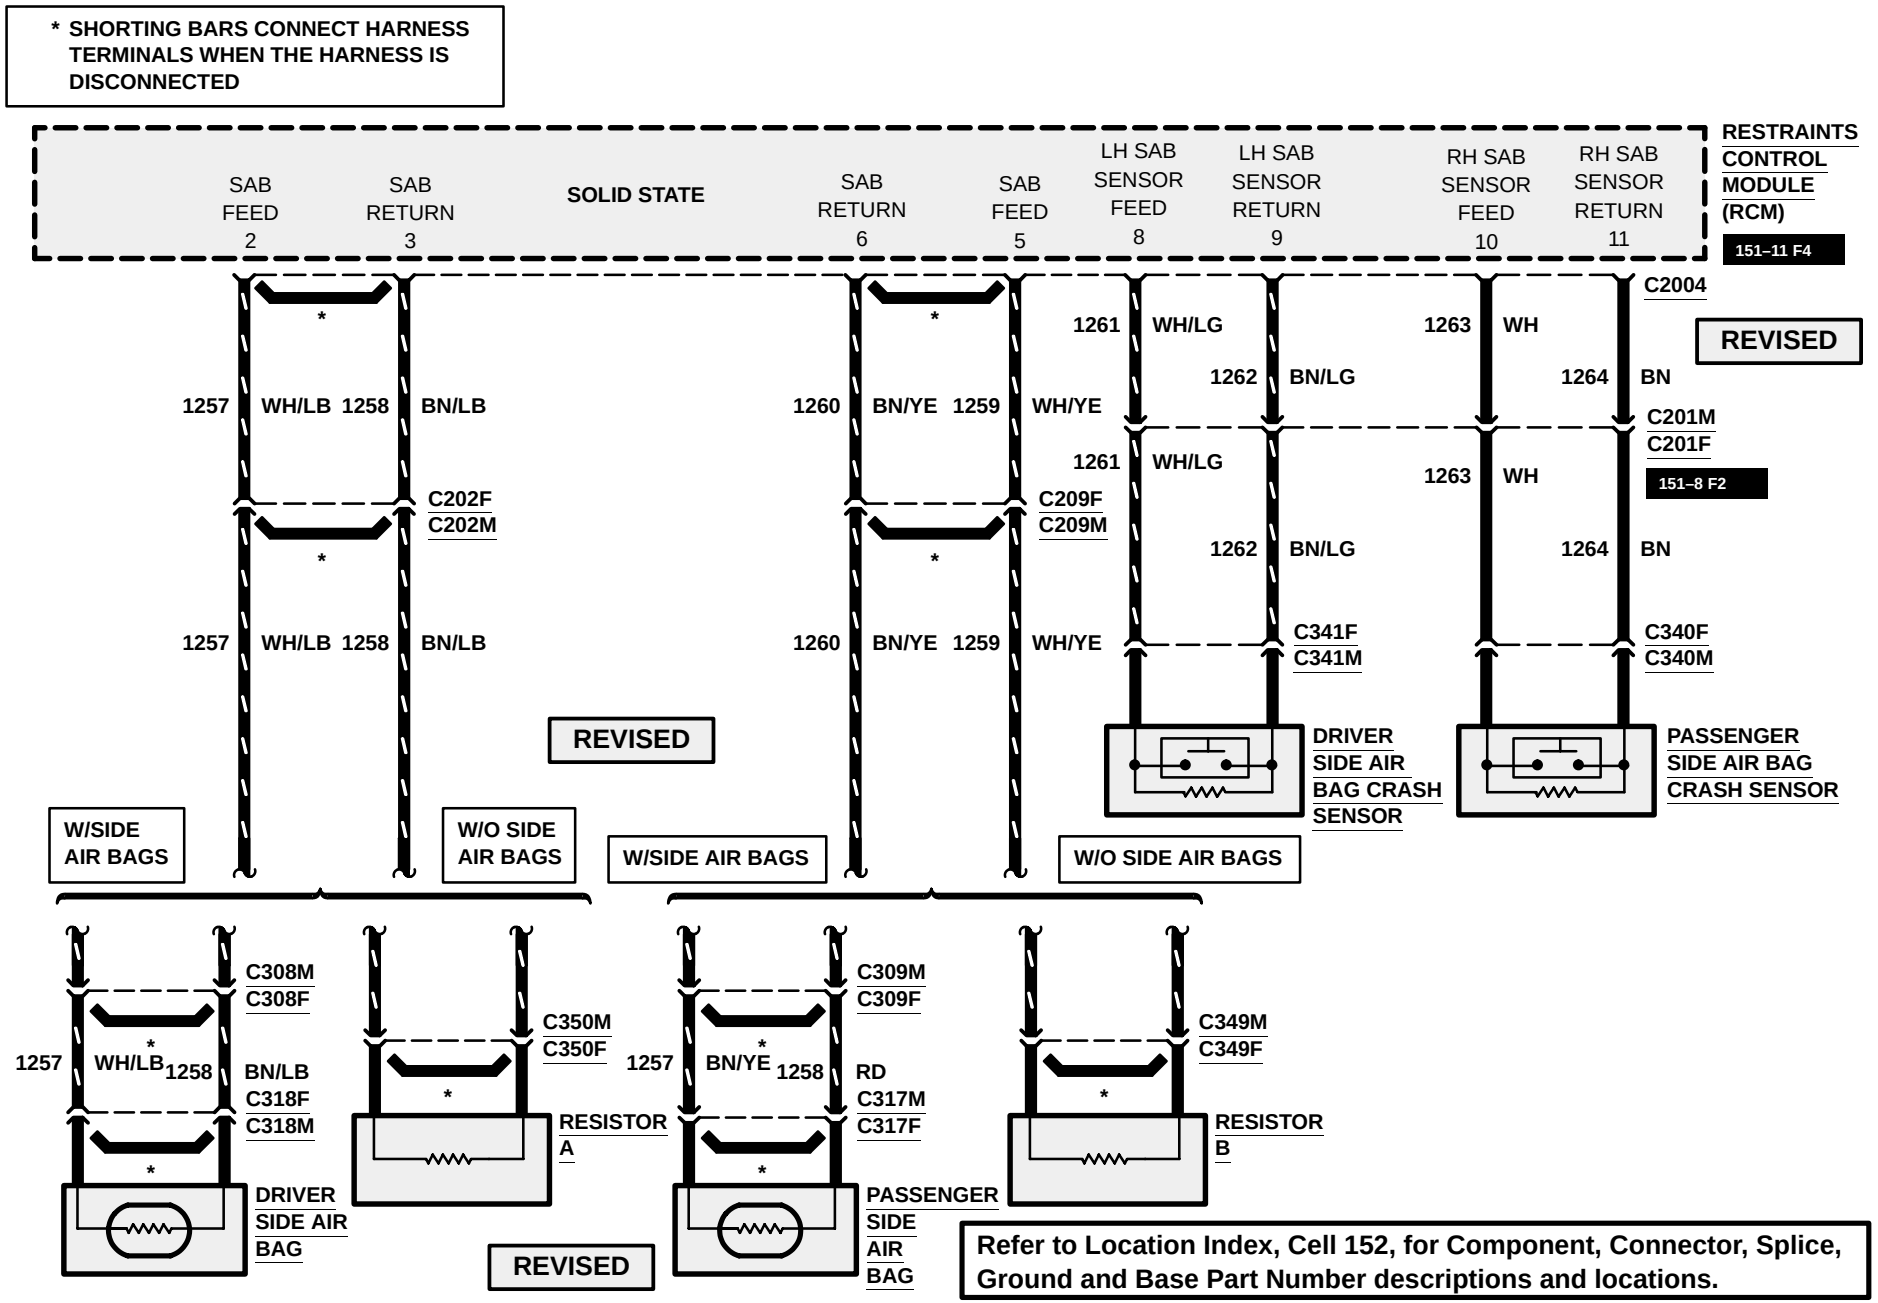
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED
SAB FEED 2
SAB RETURN 3
SOLID STATE
SAB RETURN 6
SAB FEED 5
LH SAB SENSOR FEED 8
LH SAB SENSOR RETURN 9
RH SAB SENSOR FEED 10
RH SAB SENSOR RETURN 11
RESTRAINTS CONTROL MODULE (RCM)
151–11 F4
C2004
REVISED
1257 WH/LB 1258 BN/LB
1260 BN/YE 1259 WH/YE
1261 WH/LG
1262 BN/LG
1263 WH
1264 BN
C201M
C201F
151–8 F2
C202F
C202M
C209F
C209M
C341F
C341M
C340F
C340M
DRIVER SIDE AIR BAG CRASH SENSOR
PASSENGER SIDE AIR BAG CRASH SENSOR
REVISED
W/SIDE AIR BAGS
W/O SIDE AIR BAGS
W/SIDE AIR BAGS
W/O SIDE AIR BAGS
C308M
C308F
1257 WH/LB 1258 BN/LB
C318F
C318M
DRIVER SIDE AIR BAG
C350M
C350F
RESISTOR A
C309M
C309F
1257 BN/YE 1258 RD
C317M
C317F
PASSENGER SIDE AIR BAG
C349M
C349F
RESISTOR B
REVISED
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.