C194

12B637

U11
Ignition transformer
capacitor 2 (18801)

F01031

Pin	Circuit	Circuit function
1	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)

C197a

14A280

M8
Starter motor
(11002)

F01093

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +

C197b

14A280

M8
Starter motor
(11002)



F01061

Pin	Circuit	Circuit function
1	113 (YE/LB)	Starter motor (11002) to Starter relay (11450)

C199

7C078

A290
Transmission sole-
noid body assembly
(7G391)

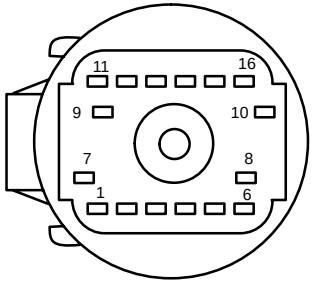

F16053

Pin	Circuit	Circuit function
1	966 (LB/PK)	Pressure Control (PCB) solenoid B
2	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
3	1139 (VT/YE)	Voltage supplied in Start and Run (overload protected), Solenoid, Power
4	770 (WH)	Pressure Control (PCC) solenoid C
5	924 (BN/OG)	Shift solenoid D
6	971 (PK/BK)	Shift solenoid C
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	925 (WH/YE)	Pressure Control (PCA) solenoid A
12	359 (GY/RD)	signal, return
13	–	not used
14	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
15	315 (VT/OG)	Shift solenoid B
16	237 (OG/YE)	Shift solenoid A