* 6.0L Diesel
** all others

## C350a

**15525**

Transfer case assembly

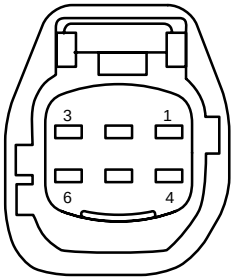


F06161

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 763 (OG/WH) | Motor position 2 |
| 2 | 976 (OG) | in On/Off |
| 3 | 764 (BN/WH) | Motor position 3 |
| 4 | *3659 (BK/PK) | Voltage supplied in reverse |
| 4 | **870 (VT/YE) | Voltage supplied in reverse |
| 5 | 771 (VT/YE) | Motor position 5 |
| 6 | 770 (WH) | Motor position 4 |

## C350b

**15525**

Transfer case assembly

F02455

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 777 (YE) | Low to High |
| 2 | 778 (OG) | High to Low |

## C357

**14B084**
**14A699**

Power seat motor assembly, left

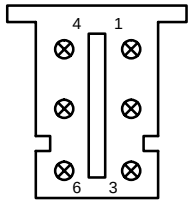


F06138

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1472 (YE/WH) | Seat forward/rearward circuit – Fog lamp feed |
| | 980 (YE/LB) | Seat forward/rearward circuit – without memory |
| 2 | 1474 (RD/LG) | Seat up/down circuit, rear – Fog lamp feed |
| | 983 (RD/LG) | Rear height circuit, Up – without memory |
| 3 | 1473 (YE/LG) | Seat up/down circuit, rear – Fog lamp feed |
| | 982 (YE/LG) | Rear height circuit, Down – without memory |
| 4 | 1471 (RD/WH) | Seat forward/rearward circuit – Fog lamp feed |
| | 981 (RD/WH) | Seat Forward – without memory |
| 5 | 1470 (YE/LB) | Seat up/down circuit, front – Fog lamp feed |
| | 990 (YE/LB) | Front height circuit, Down – without memory |
| 6 | 1469 (RD/LB) | Seat up/down circuit, front – Fog lamp feed |
| | 979 (RD/LB) | Front height circuit, Up – without memory |