C1330

12A581

K399
Stop lamp relay 2

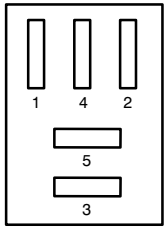

F05110

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground
3	1203 (BK/LB)	Ground
	21 (OG/LG)	to, Cat engine control module
4	569 (DG)	Brake pedal position switch (13480), to stoplamps
5	–	not used

C1331

12A581

K500
Neutral start switch relay

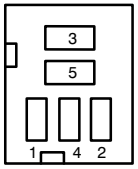

F05109

Pin	Circuit	Circuit function
1	329 VT	Starter relay (11450), control
2	57 (BK)	Ground
3	32 (RD/BK)	Voltage supplied in Start (overload protected)
4	–	not used
5	33 (WH/VT)	switched power, to starter solenoid

C1332

12A581

K501
Shift control modulator relay

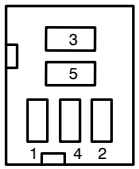

F05109

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	237 (OG/YE)	Shift solenoid A
3	326 (WH/VT)	Central Junction Box (CJB) (14A068), to, Ignition relay
4	–	not used
5	175 (BK/YE)	Powertrain Control Module (PCM) (12A650), to, Generic Electronic Module (GEM) (14B205)

C1333

12A581

K502
VP–44 relay

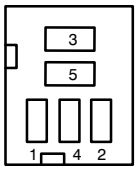

F05109

Pin	Circuit	Circuit function
1	926 (LB/OG)	Fuel pump relay, control
2	57 (BK)	Ground
3	46 (VT)	Fuel pump relay, switched power, output
4	–	not used
5	787 (PK/BK)	Fuel pump, Power