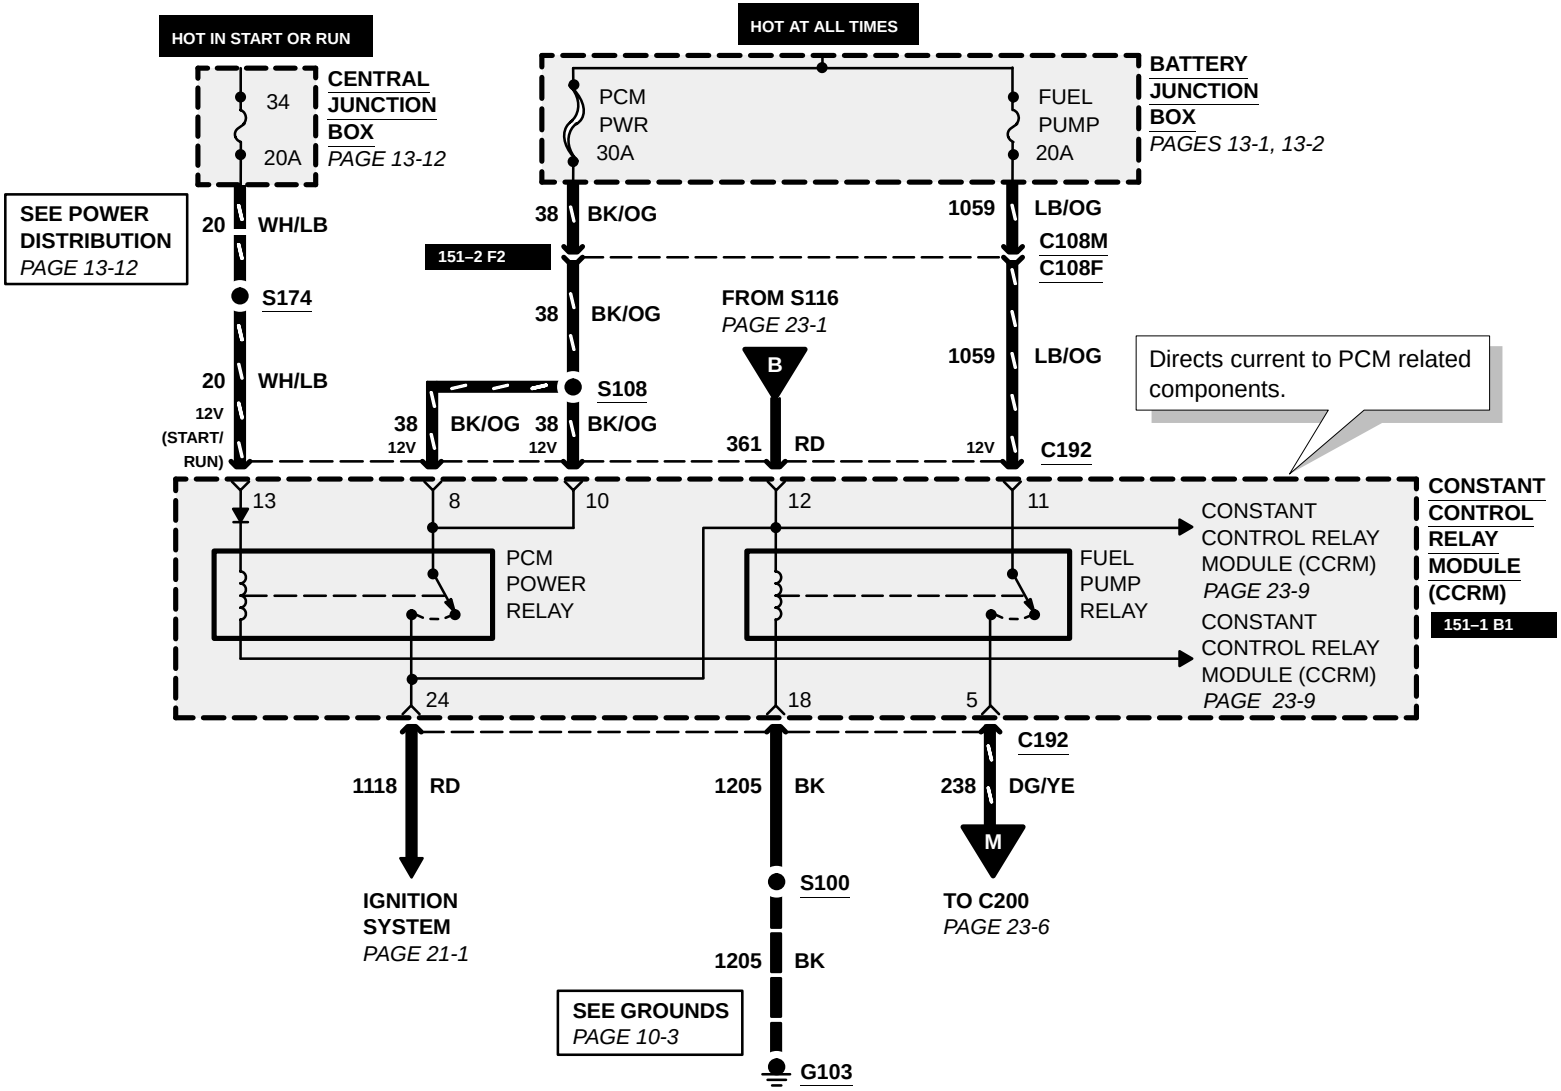
HOT IN START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-12
34
20A
PCM PWR 30A
FUEL PUMP 20A
BATTERY JUNCTION BOX
PAGES 13-1, 13-2
SEE POWER DISTRIBUTION
PAGE 13-12
20 WH/LB
S174
20 WH/LB
12V (START/ RUN)
38 BK/OG
151–2 F2
38 BK/OG
S108
38 BK/OG 12V
38 BK/OG 12V
FROM S116
PAGE 23-1
B
361 RD
1059 LB/OG
C108M
C108F
1059 LB/OG
12V C192
Directs current to PCM related components.
CONSTANT CONTROL RELAY MODULE (CCRM)
151–1 B1
13
8
10
12
11
PCM POWER RELAY
FUEL PUMP RELAY
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 23-9
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 23-9
24
18
5
C192
1118 RD
1205 BK
238 DG/YE
M
IGNITION SYSTEM
PAGE 21-1
S100
1205 BK
TO C200
PAGE 23-6
SEE GROUNDS
PAGE 10-3
G103