EXCURSION

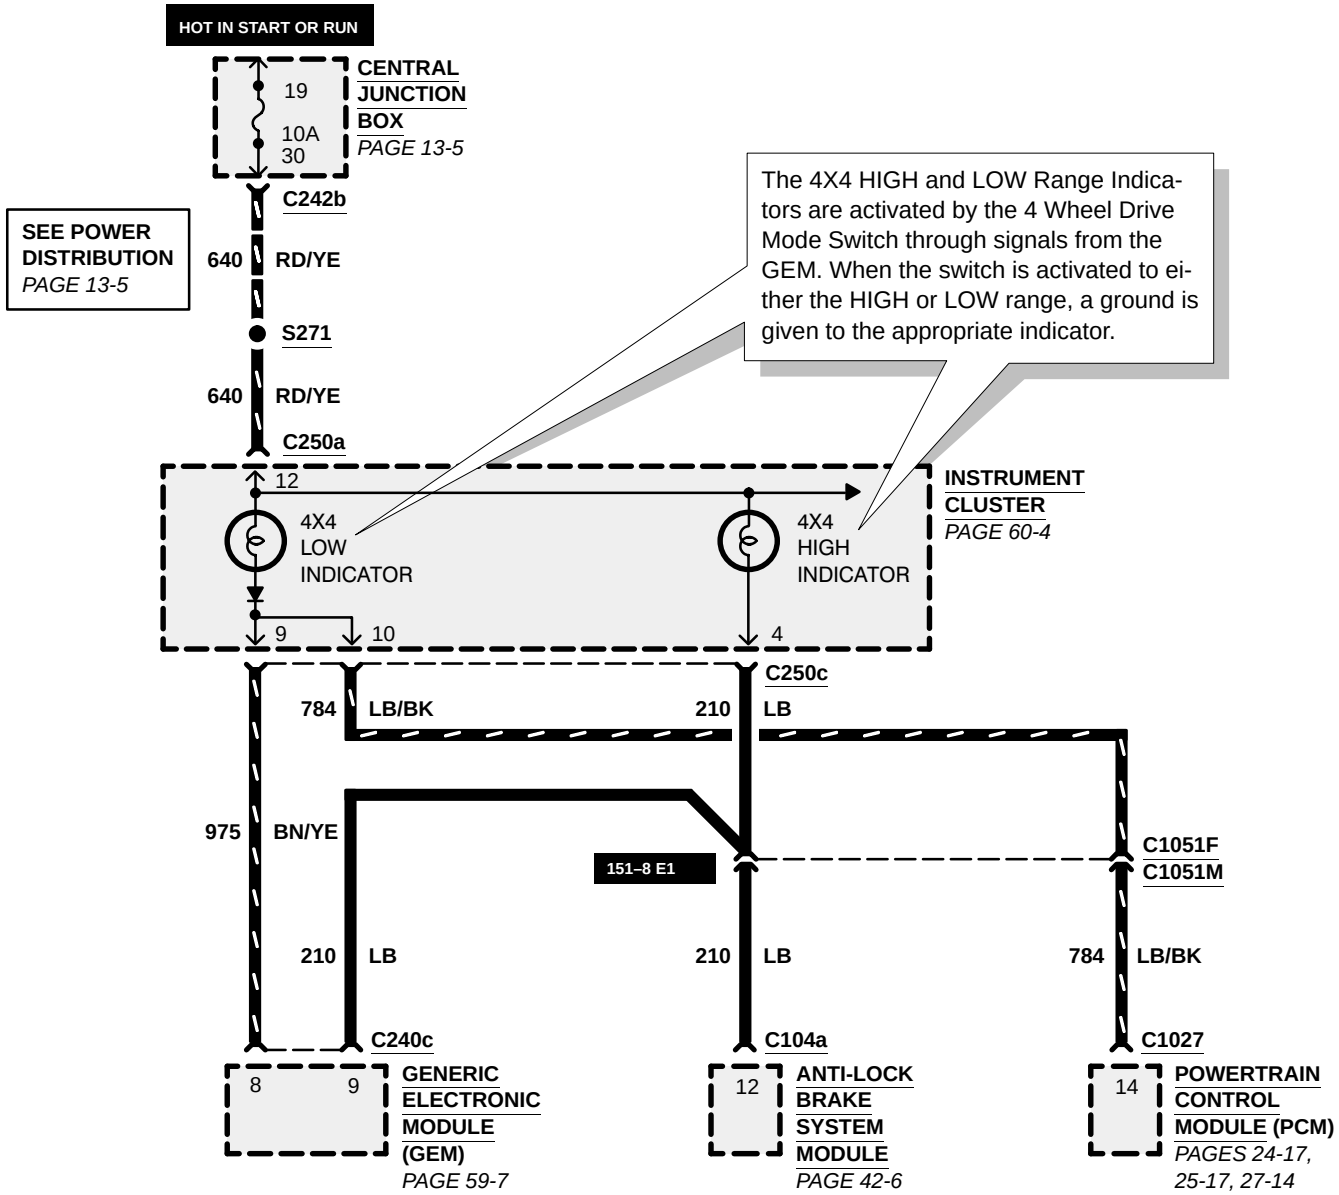
HOT IN START OR RUN
19
10A
30
CENTRAL JUNCTION BOX
PAGE 13-5
C242b
640 RD/YE
S271
640 RD/YE
C250a
SEE POWER DISTRIBUTION
PAGE 13-5
The 4X4 HIGH and LOW Range Indicators are activated by the 4 Wheel Drive Mode Switch through signals from the GEM. When the switch is activated to either the HIGH or LOW range, a ground is given to the appropriate indicator.
12
4X4 LOW INDICATOR
4X4 HIGH INDICATOR
INSTRUMENT CLUSTER
PAGE 60-4
9
10
4
C250c
784 LB/BK
210 LB
975 BN/YE
151–8 E1
C1051F
C1051M
210 LB
210 LB
784 LB/BK
C240c
C104a
C1027
8
9
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-7
12
ANTI-LOCK BRAKE SYSTEM MODULE
PAGE 42-6
14
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-17, 25-17, 27-14