## C132 (BK)

**14290**

Ambient air temperature sensor (19E702)

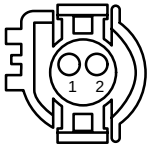


F02617

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 233 (DB/YE) | Ambient air temperature sensor (19E702), feed |
| 2 | 234 (DB/WH) | Ambient air temperature sensor (19E702), return |

## C135 (BK)

**14290**

ABS control module (2C219)

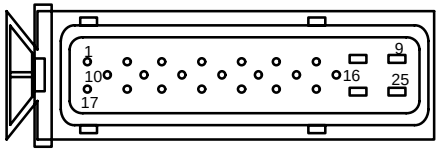


F25007

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 810 (RD/LG) | Brake pedal position switch (13480), input |
| 3 | 514 (YE/RD) | Wheel speed sensor, right front (2C204) + |
| 4 | 516 (YE/BK) | Wheel speed sensor, right front (2C204) – |
| 5 | – | not used |
| 6 | – | not used |
| 7 | – | not used |
| 8 | 57 (BK) | Ground |
| 9 | 534 (YE/LG) | Voltage supplied at all times (overload protected) |
| 10 | – | not used |
| 11 | – | not used |
| 12 | 570 (BK/WH) | Ground |
| 13 | 570 (BK/WH) | Ground |
| 14 | 57 (BK) | Ground |
| 15 | – | not used |
| 16 | 603 (DG) | Anti–lock brake indicator, control |
| 17 | 521 (TN/OG) | Wheel speed sensor, left front (2C205) + |
| 18 | 522 (TN/BK) | Wheel speed sensor, left front (2C205) – |
| 19 | – | not used |
| 20 | 601 (LB/PK) | Voltage in Run (overload protected) |
| 21 | 523 (RD/PK) | Rear axle speed sensor (4B409) + |
| 22 | 519 (LG/BK) | Rear axle speed sensor (4B409) – |
| 23 | 70 (LB/WH) | ISO Bus |
| 24 | 57 (BK) | Ground |
| 25 | 483 (RD) | Voltage supplied at all times (overload protected) |