C888

14335

E87
Cargo space lamp



F02009

Pin	Circuit	Circuit Function
1	31S-LB6 (BK/YE)	Ground, switched
2	31-LB6 (BK)	Ground

C890

14335

E18
Interior lamp, front



F02009

Pin	Circuit	Circuit Function
1	31S-LC7 (BK/BU) +	Ground, switched
	31S-LC17 (BK/YE)	Ground, switched
2	31-LC7 (BK)	Ground

C894

12A522

B22
Mass Air Flow (MAF) sensor

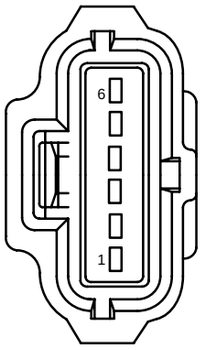

F06077

Pin	Circuit	Circuit Function
1	8-RJ17 (WH/VT)	Sensor signal
	8-PA23 (WH)	Sensor signal
2	15-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
3	91-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	9-RJ17 (BN/WH)	Sensor signal return (reference/ground)
	9-PA23 (BN)	Sensor signal return (reference/ground)