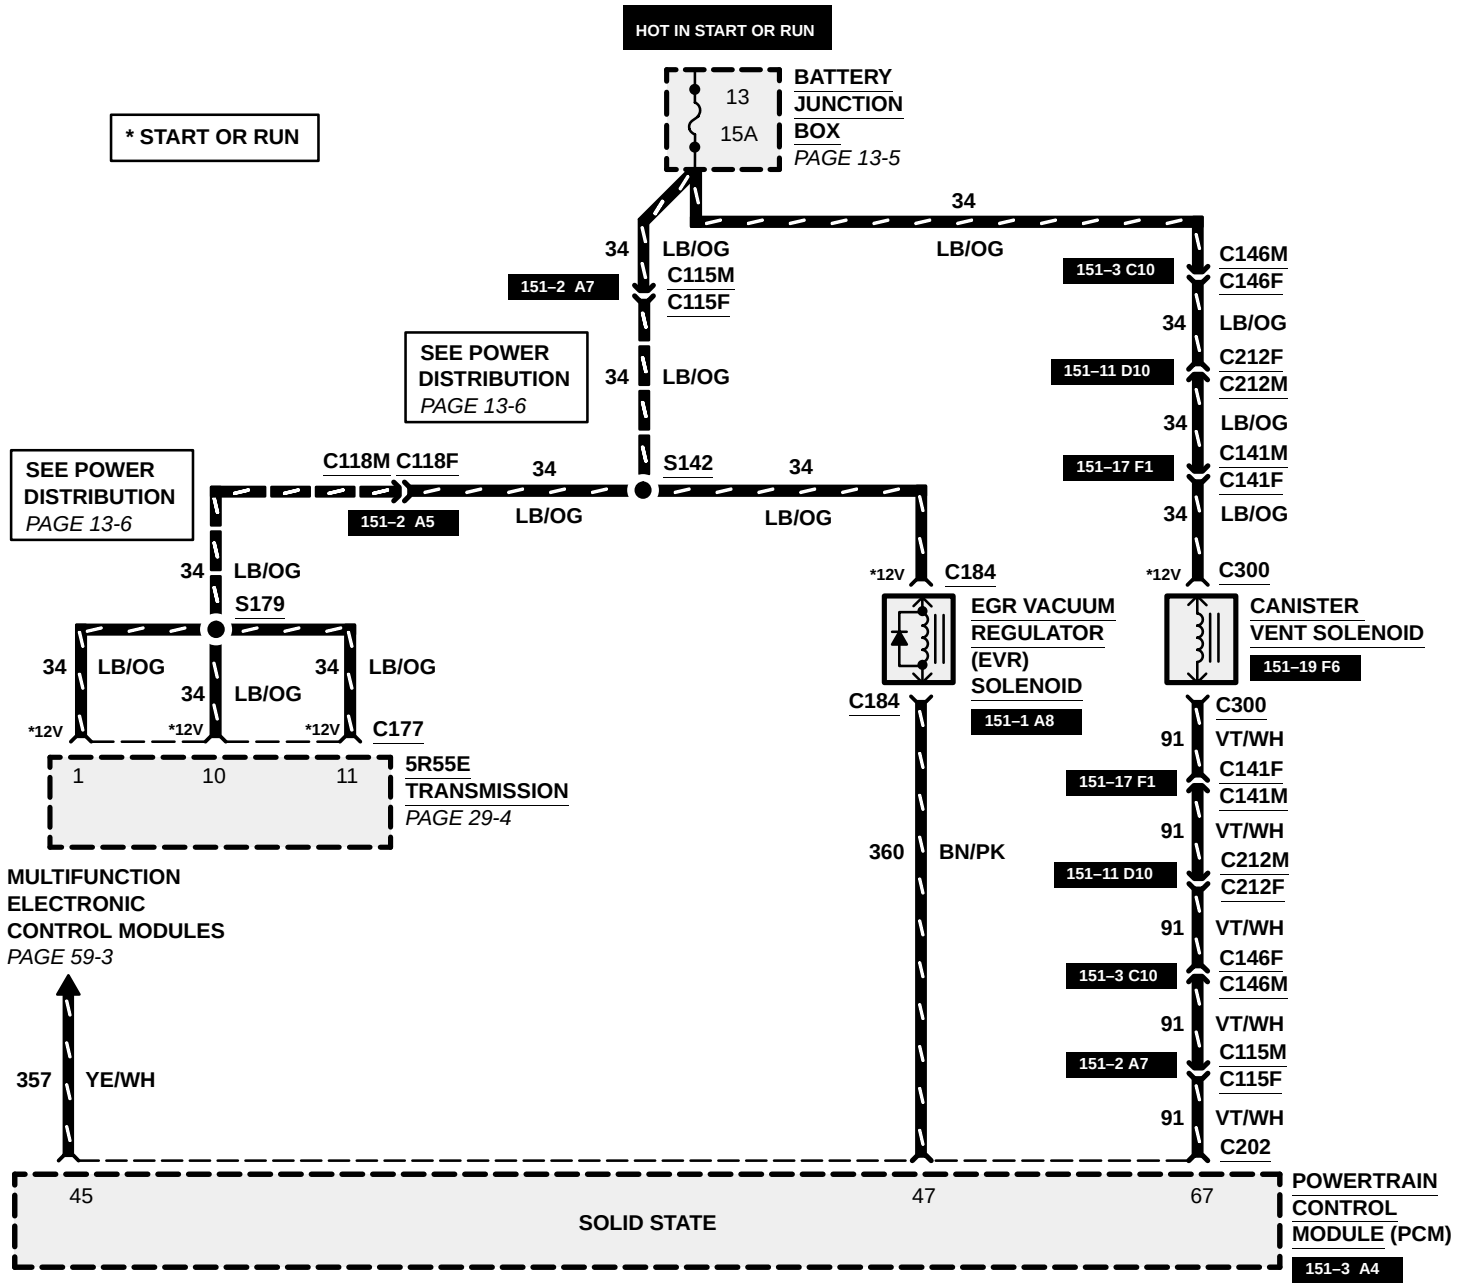
HOT IN START OR RUN
* START OR RUN
13
15A
BATTERY JUNCTION BOX
PAGE 13-5
34
LB/OG
C115M
C115F
151–2 A7
SEE POWER DISTRIBUTION
PAGE 13-6
C118M C118F
S142
151–2 A5
151–3 C10
C146M
C146F
151–11 D10
C212F
C212M
151–17 F1
C141M
C141F
SEE POWER DISTRIBUTION
PAGE 13-6
S179
*12V
C184
EGR VACUUM REGULATOR (EVR) SOLENOID
151–1 A8
C300
CANISTER VENT SOLENOID
151–19 F6
91
VT/WH
C177
1
10
11
5R55E TRANSMISSION
PAGE 29-4
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-3
360
BN/PK
357
YE/WH
45
47
67
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4