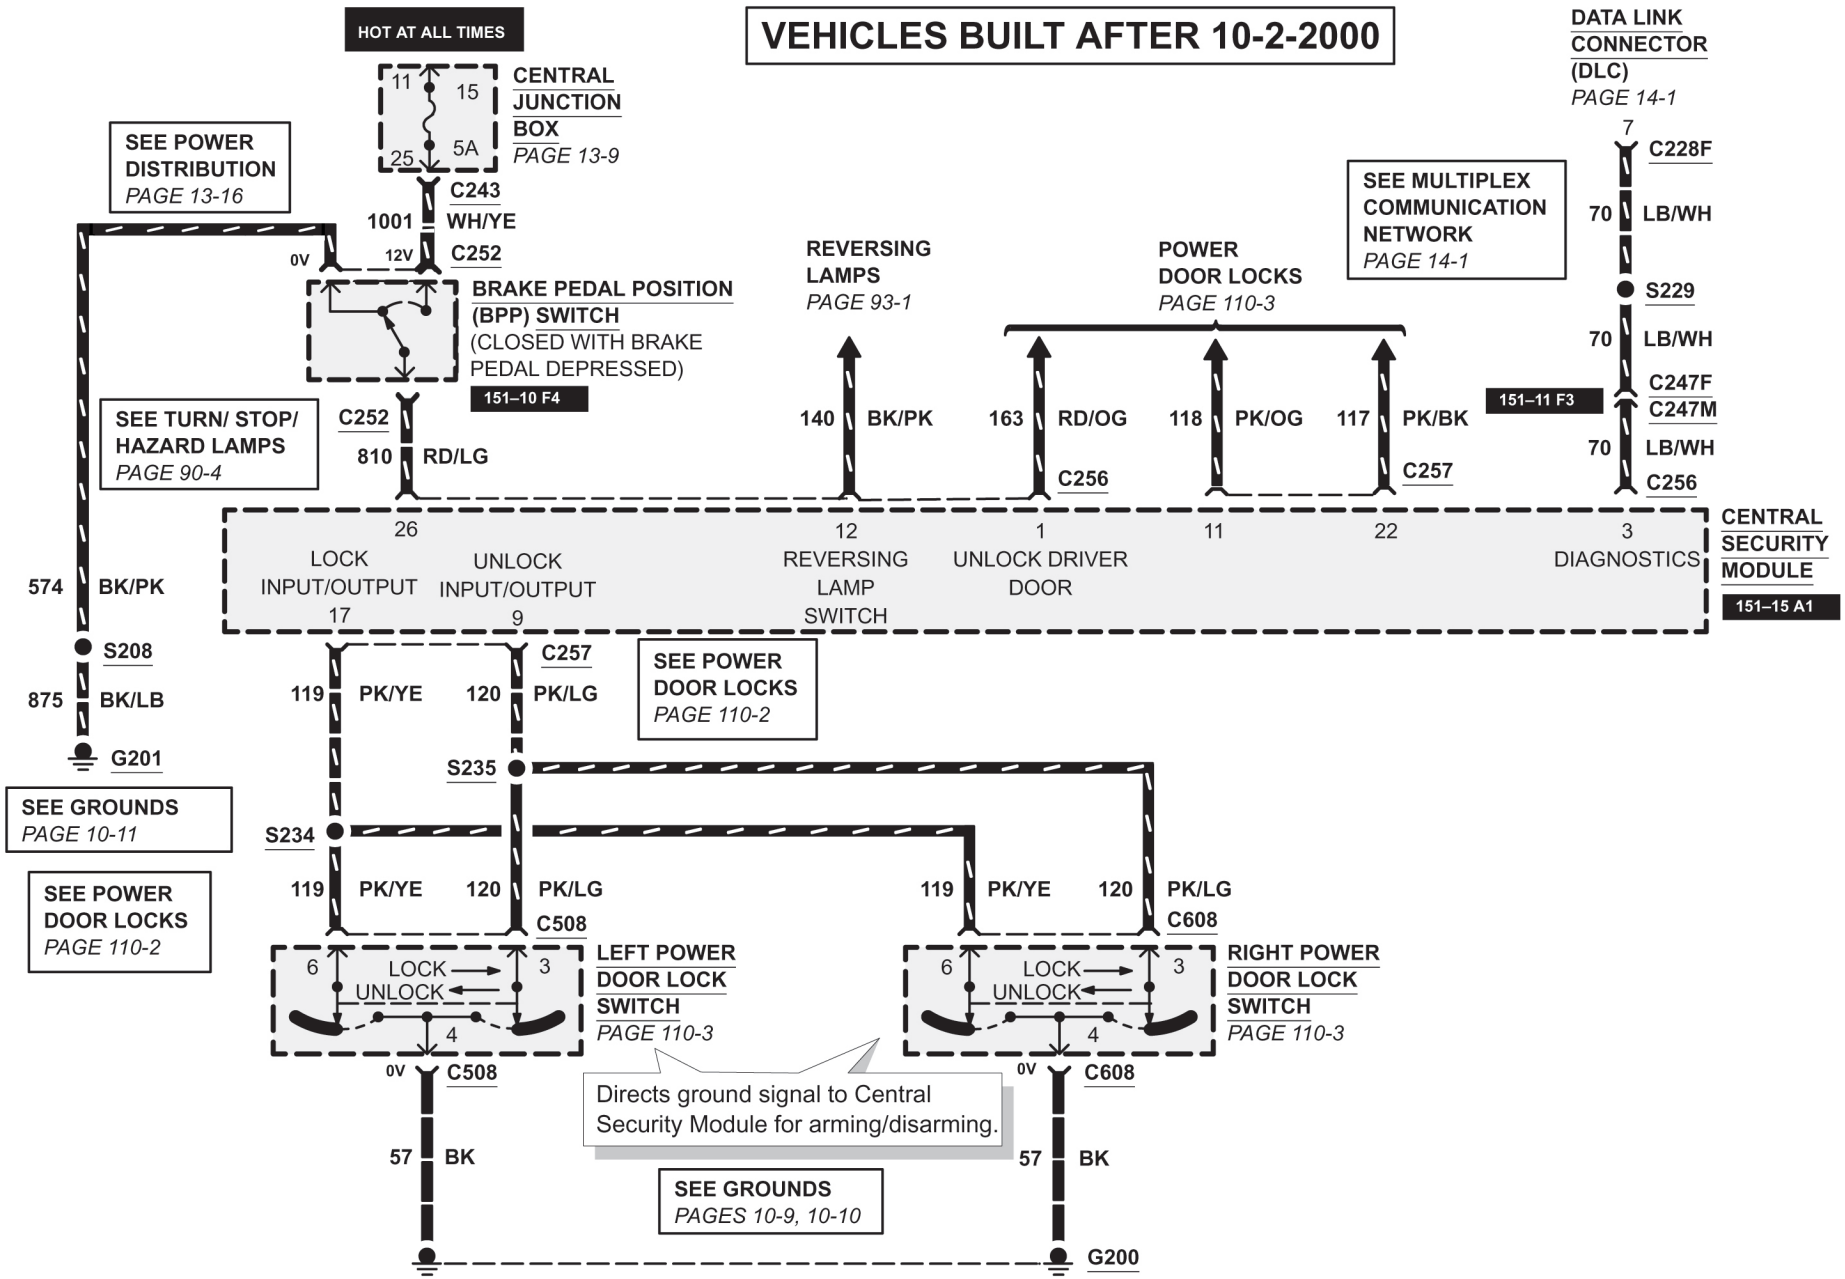

VEHICLES BUILT AFTER 10-2-2000
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-9
11
15
25
5A
SEE POWER DISTRIBUTION
PAGE 13-16
C243
1001
WH/YE
0V
12V
C252
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–10 F4
SEE TURN/ STOP/ HAZARD LAMPS
PAGE 90-4
C252
810
RD/LG
REVERSING LAMPS
PAGE 93-1
140
BK/PK
POWER DOOR LOCKS
PAGE 110-3
163
RD/OG
118
PK/OG
117
PK/BK
C256
C257
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
DATA LINK CONNECTOR (DLC)
PAGE 14-1
7
C228F
70
LB/WH
S229
70
LB/WH
C247F
C247M
151–11 F3
70
LB/WH
C256
26
LOCK INPUT/OUTPUT
17
UNLOCK INPUT/OUTPUT
9
12
REVERSING LAMP SWITCH
1
UNLOCK DRIVER DOOR
11
22
3
DIAGNOSTICS
CENTRAL SECURITY MODULE
151–15 A1
574
BK/PK
S208
875
BK/LB
G201
SEE GROUNDS
PAGE 10-11
SEE POWER DOOR LOCKS
PAGE 110-2
119
PK/YE
120
PK/LG
C257
SEE POWER DOOR LOCKS
PAGE 110-2
S235
S234
119
PK/YE
120
PK/LG
C508
119
PK/YE
120
PK/LG
C608
6
LOCK
UNLOCK
3
4
LEFT POWER DOOR LOCK SWITCH
PAGE 110-3
6
LOCK
UNLOCK
3
4
RIGHT POWER DOOR LOCK SWITCH
PAGE 110-3
0V
C508
0V
C608
Directs ground signal to Central Security Module for arming/disarming.
57
BK
57
BK
SEE GROUNDS
PAGES 10-9, 10-10
G200