C266a

14N104

A30
Instrument cluster

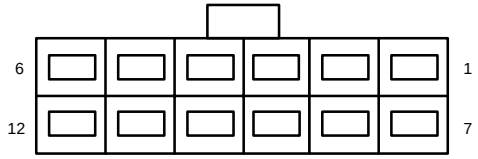

F12093

Pin	Circuit	Circuit function
1	MA41 (BN/WH)	Door ajar indicator, control
2	NB01 (YE/VT)	Brake indicator, control
3	NM01 (YE)	Generator/Battery indicator, control
4	MD01 (RD)	Engine oil pressure indicator, control
5	BS29 (WH/BK)	Anti–lock brake indicator, control
6	MA02 (BU)	Voltage supplied in Start and Run (overload protected)
7	NR01 (VT)	Malfunction Indicator Lamp (MIL), control
8	MA17 (YE/GN)	Outside temperature sensor, input
9	MA03 (BU/WH)	Coolant temperature sensor 2, input
10	MA04 (BU/RD)	Fuel pump/fuel gauge sender
11	AV02 (LG)	Tachometer
12	AV32 (GN/YE)	Vehicle Speed Sensor (VSS) +