C303 (WH)

14A699



F02159

14A333



F02159

C305 (WH)

14A699



F02159

14N104



F02159

C304 (BK)

14N104

N317
Safety belt buckle switch



F02161

Pin	Circuit	Circuit Function
1	N103 (GN)	Safety belt indicator, control
2	NIE2 (BK)	Ground

C306 (BK)

14N104

N84
Door ajar switch, left front

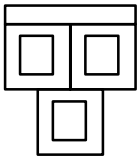

3
F03133

Pin	Circuit	Circuit Function
1	–	not used
2	LI87 (RD)	Door ajar switch, left front
3	LIE1 (BK)	Ground

C307 (WH)

14A333



F02129

E220
Sliding door entry lamp, passenger side

Pin	Circuit	Circuit Function
1	LP03 (BN)	Voltage supplied at all times (overload protected)
2	LP93 (BN/WH)	Illuminated entry, Ground