## C1856

**8C290**

M38
Second cooling fan motor

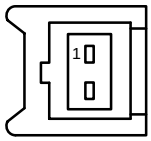


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-PA16 (BK) | Ground |
| 2 | 15S-PA16 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), switched |

## C1859

**8C290**

M37
Engine cooling fan motor

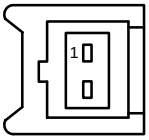


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-PA6 (BK) | Ground |
| 2 | 15S-PA6 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected), switched |

## C1869

**14K138**

M123
Window regulator motor, passenger side front




F02051

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 32-AJ17 (WH/VT) | Switched between: Battery voltage, Ground or Open |
| 2 | 33-AJ17 (YE/VT) | Switched between: Battery voltage, Ground or Open |

## C1872

**14014**

Y19
Speaker, right rear




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-MD18 (WH) | Sensor signal |
| 2 | 10-MD18 (GY) | Signal 2 (Y–direction, reverse, downward) |

## C1885a

**14300**

O5
Generator



F01014

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 29-BA6 (OG/YE) | Voltage supplied at all times (overload protected) |

## C1885b

**12A522**

O5
Generator

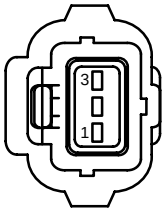


F03093

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-BA9 (GN/BK) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 2 | 8-BA9 (WH/GN) | Sensor signal |
| 3 | 30-BA8 (RD) | Voltage supplied at all times (not overload protected) |

## C1891

**18C619**

R19
Rear window defrost grid



F01005

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-HB19 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), switched |