C381

14B084

N317
Safety belt buckle switch (10B924)

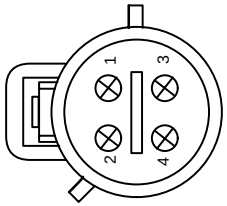

F04269

Pin	Circuit	Circuit function
1	–	not used
2	85 (BN/LB)	Safety belt buckle switch (10B924), input
3	57 (BK)	Ground
4	–	not used

C395

14A005

Y17
Speaker, left rear (18808)

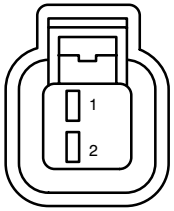

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C396

14A005

Y19
Speaker, right rear (18808)

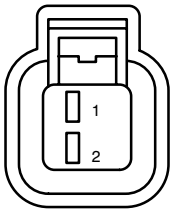

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C405

14405

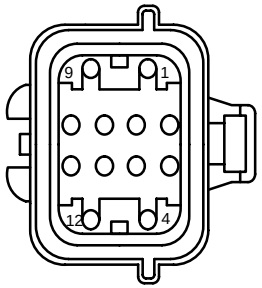

F12060

14405

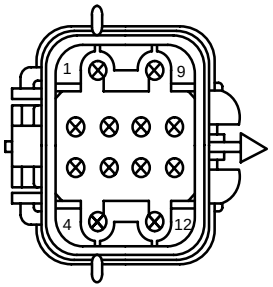

F12060

(1)	57 (BK)	(5)	52 (YE)	(9)	963 (BK/LG)
(2)	64 (DG)	(6)	49 (OG)	(10)	43 (DB)
(3)	57 (BK)	(7)		(11)	1046 (TN)
(4)	123 (LG/OG)	(8)		(12)	962 (BN/WH)