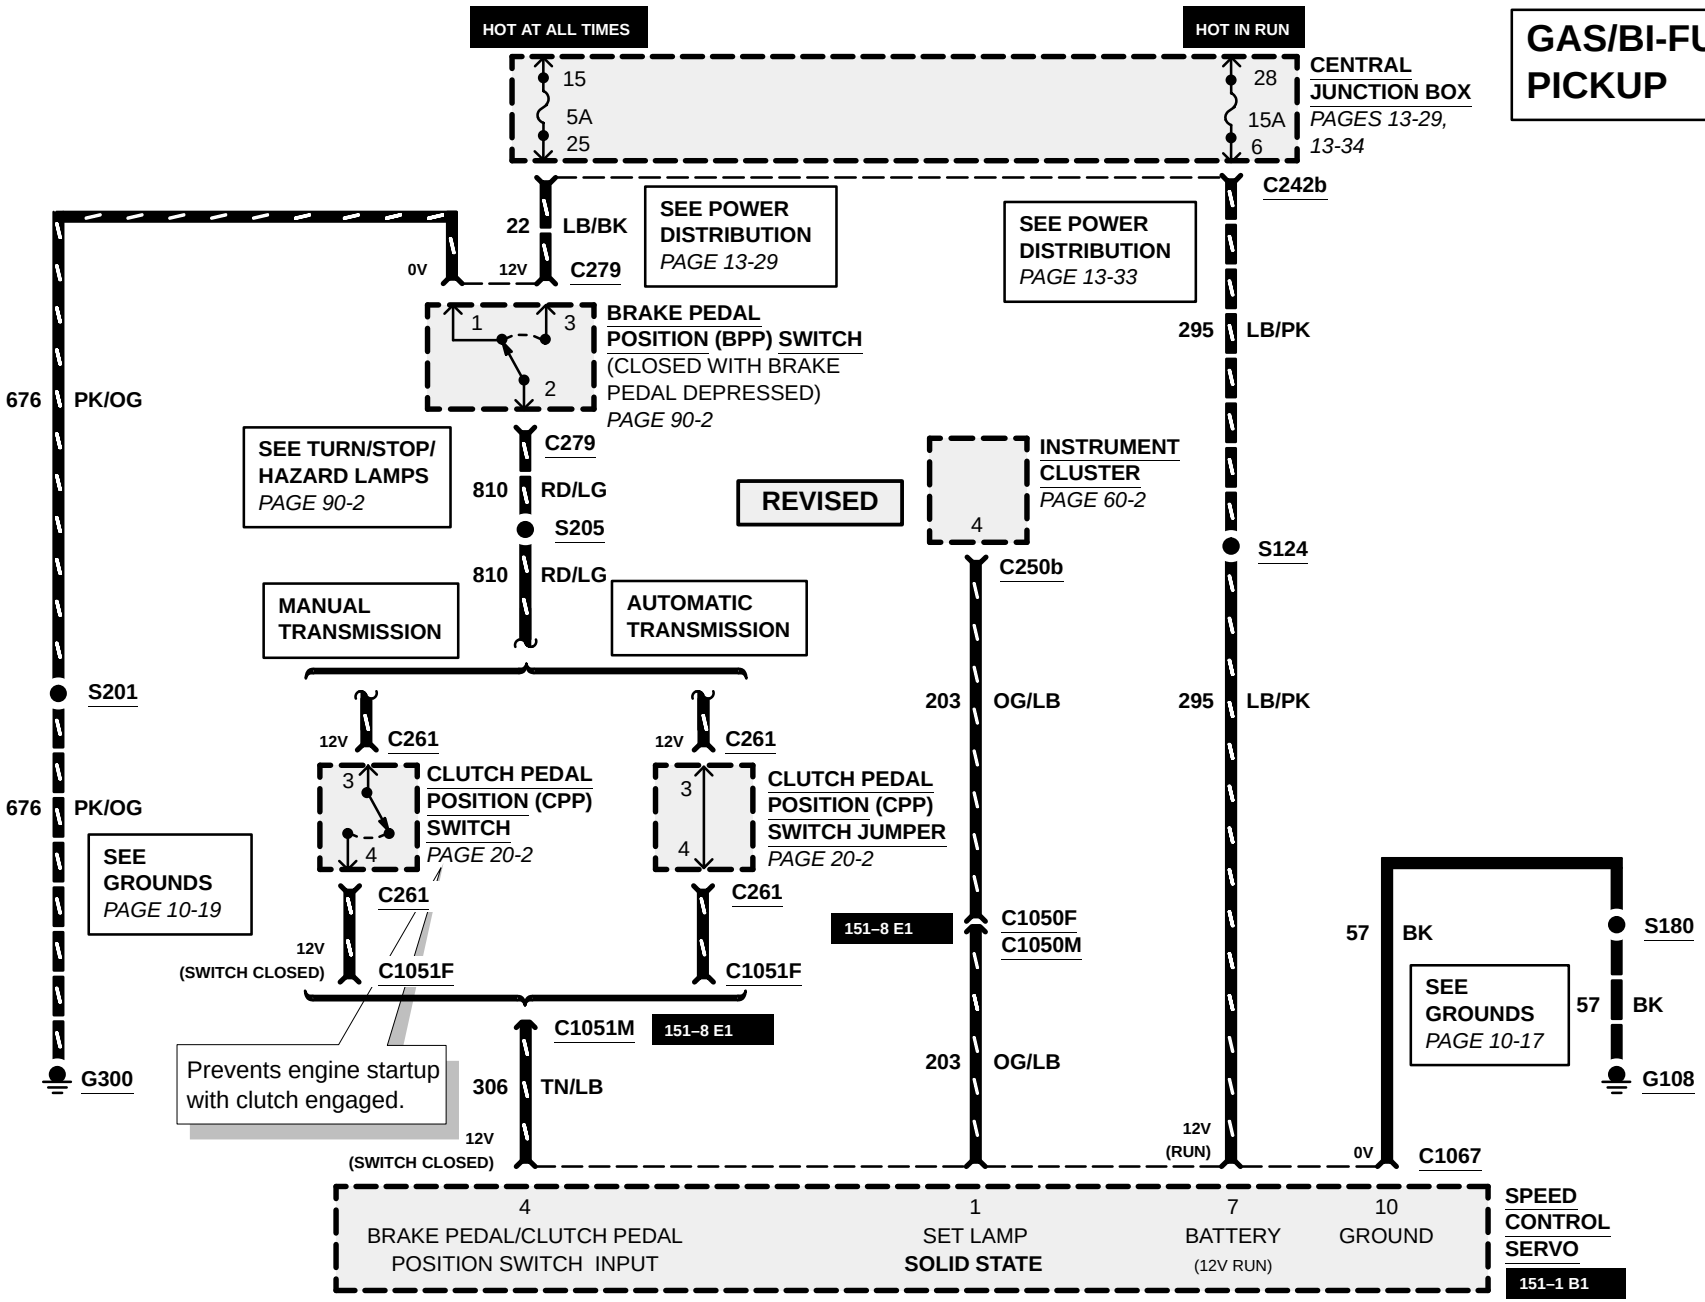
GAS/BI-FUEL PICKUP
HOT AT ALL TIMES
HOT IN RUN
15
5A
25
28
15A
6
CENTRAL JUNCTION BOX
PAGES 13-29, 13-34
C242b
22
LB/BK
0V
12V
C279
SEE POWER DISTRIBUTION
PAGE 13-29
SEE POWER DISTRIBUTION
PAGE 13-33
295
LB/PK
1
3
2
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
PAGE 90-2
676
PK/OG
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-2
C279
810
RD/LG
S205
REVISED
INSTRUMENT CLUSTER
PAGE 60-2
4
S124
C250b
MANUAL TRANSMISSION
AUTOMATIC TRANSMISSION
S201
203
OG/LB
295
LB/PK
12V
C261
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-2
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER
PAGE 20-2
676
PK/OG
SEE GROUNDS
PAGE 10-19
151–8 E1
C1050F
C1050M
57
BK
S180
SEE GROUNDS
PAGE 10-17
57
BK
G108
12V
(SWITCH CLOSED)
C1051F
C1051M
151–8 E1
Prevents engine startup with clutch engaged.
G300
306
TN/LB
12V
(SWITCH CLOSED)
12V
(RUN)
0V
C1067
4
BRAKE PEDAL/CLUTCH PEDAL POSITION SWITCH INPUT
1
SET LAMP
SOLID STATE
7
BATTERY
(12V RUN)
10
GROUND
SPEED CONTROL SERVO
151–1 B1