C710

14A005

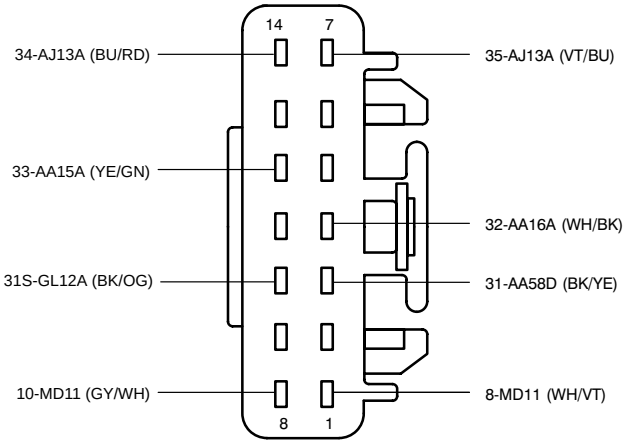

F14012

14633

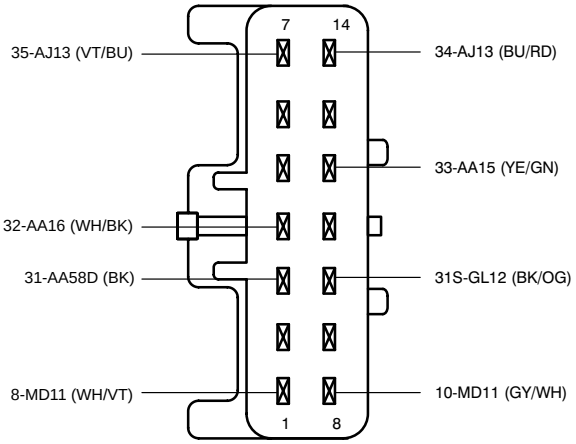

F14013

C801

14A005

N110
Window adjust switch, right rear

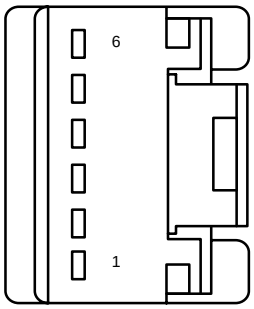

F06163

Pin	Circuit	Circuit Function
1	8-AJ24 (WH)	Sensor signal
2	10-AJ24 (GY)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ24 (YE)	Voltage D.C. supplied at all times (sensor)
4	31-LH33 (BK/GN)	Ground
5	–	not used
6	29S-LH33 (OG/BK)	Voltage supplied at all times (overload protected), Switched

C802

14632

Y19
Speaker, right rear

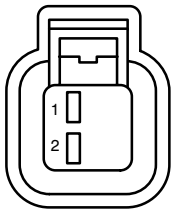

F02069

Pin	Circuit	Circuit Function
1	8-MD18 (WH)	Sensor signal
2	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)

C803

14632

M117
Power window motor, right rear

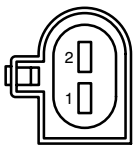

F02065

Pin	Circuit	Circuit Function
1	35-AJ23 (VT/WH)	Switched between: Battery voltage, Ground or Open
2	34-AJ23 (BU/OG)	Switched between: Battery voltage, Ground or Open