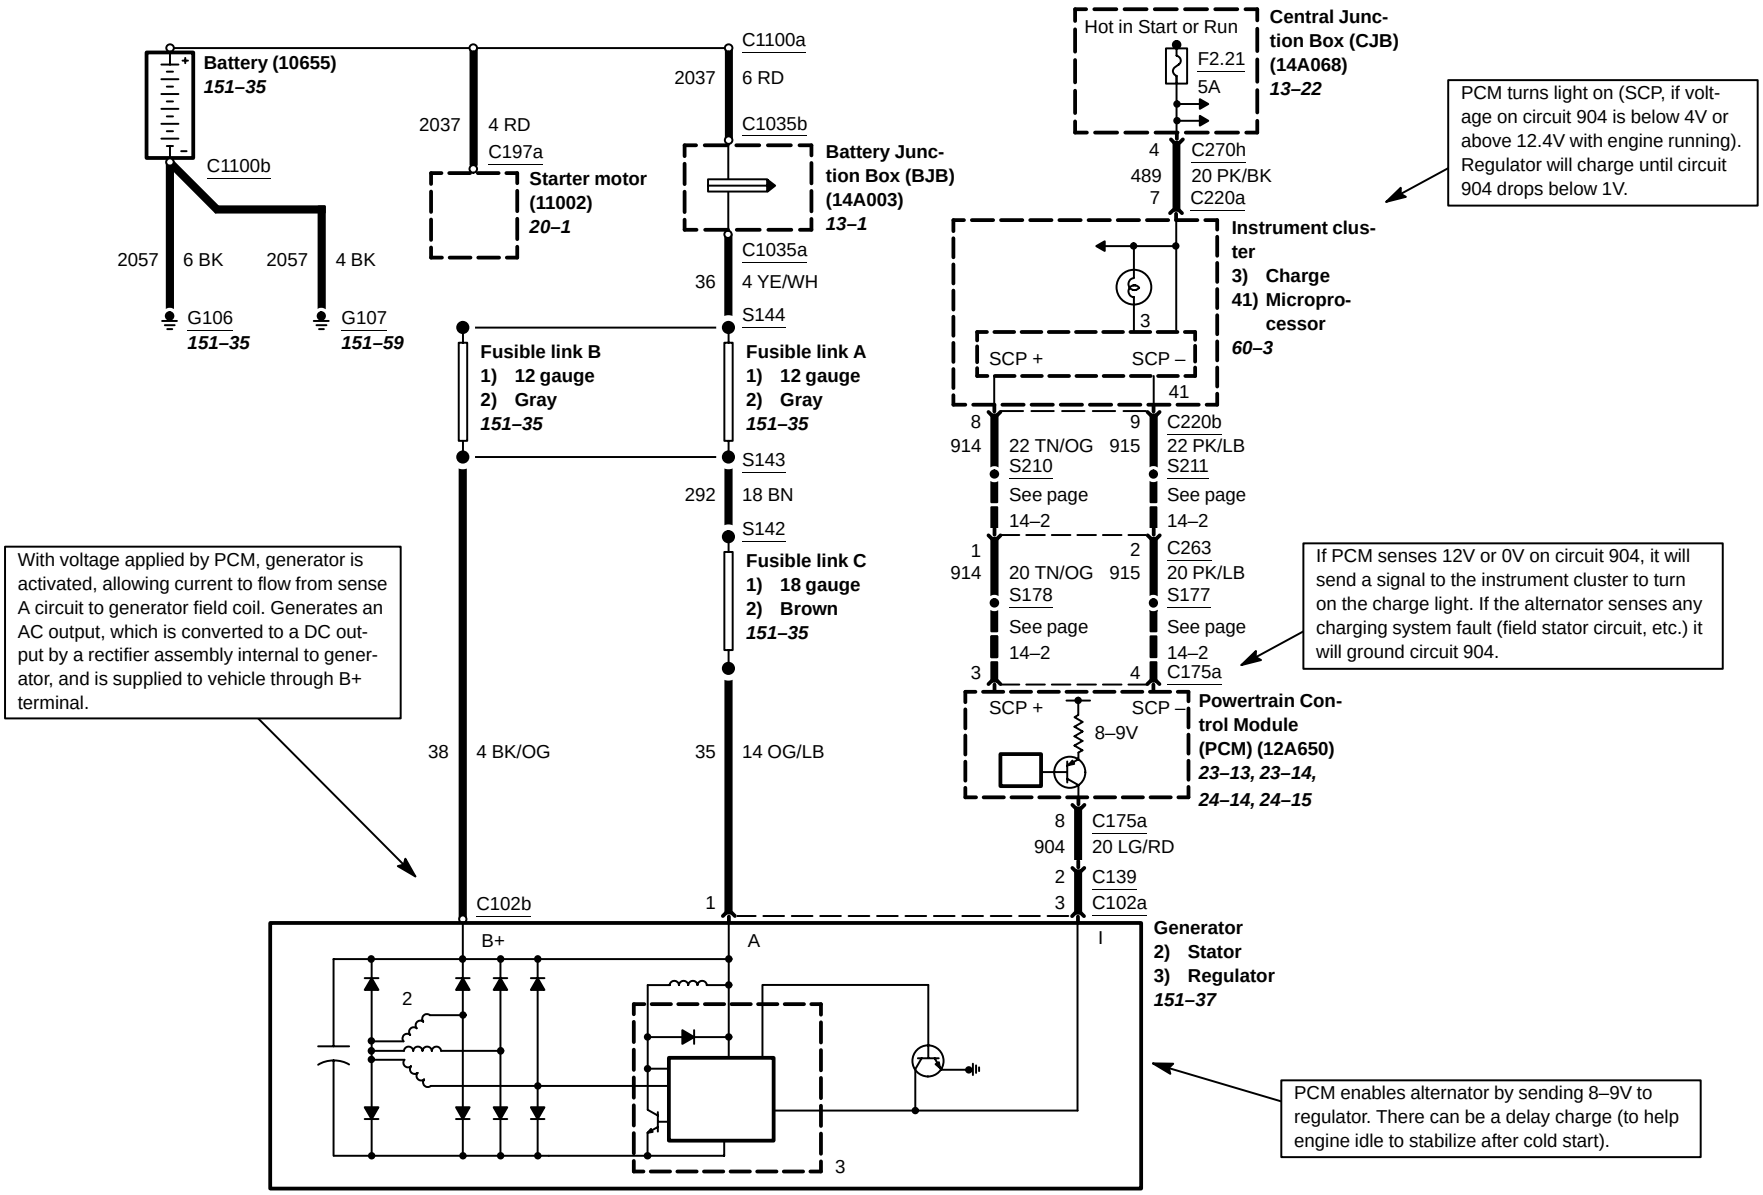
Battery (10655)
151–35
C1100b
2057 6 BK
2057 4 BK
G106
151–35
G107
151–59
2037 4 RD
C197a
Starter motor
(11002)
20–1
C1100a
2037 6 RD
C1035b
Battery Junction Box (BJB)
(14A003)
13–1
C1035a
36 4 YE/WH
S144
Fusible link B
1) 12 gauge
2) Gray
151–35
Fusible link A
1) 12 gauge
2) Gray
151–35
S143
292 18 BN
S142
Fusible link C
1) 18 gauge
2) Brown
151–35
38 4 BK/OG
35 14 OG/LB
C102b
1
B+
A
I
2
3
Generator
2) Stator
3) Regulator
151–37
Hot in Start or Run
F2.21
5A
Central Junction Box (CJB)
(14A068)
13–22
4 C270h
489 20 PK/BK
7 C220a
Instrument cluster
3) Charge
41) Microprocessor
60–3
SCP +
SCP –
41
8 914 22 TN/OG S210
9 915 22 PK/LB C220b
S211
See page 14–2
1 914 20 TN/OG S178
2 915 20 PK/LB C263
S177
See page 14–2
3
4 C175a
Powertrain Control Module
(PCM) (12A650)
23–13, 23–14,
24–14, 24–15
8–9V
8 C175a
904 20 LG/RD
2 C139
3 C102a
With voltage applied by PCM, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through B+ terminal.
PCM turns light on (SCP, if voltage on circuit 904 is below 4V or above 12.4V with engine running). Regulator will charge until circuit 904 drops below 1V.
If PCM senses 12V or 0V on circuit 904, it will send a signal to the instrument cluster to turn on the charge light. If the alternator senses any charging system fault (field stator circuit, etc.) it will ground circuit 904.
PCM enables alternator by sending 8–9V to regulator. There can be a delay charge (to help engine idle to stabilize after cold start).