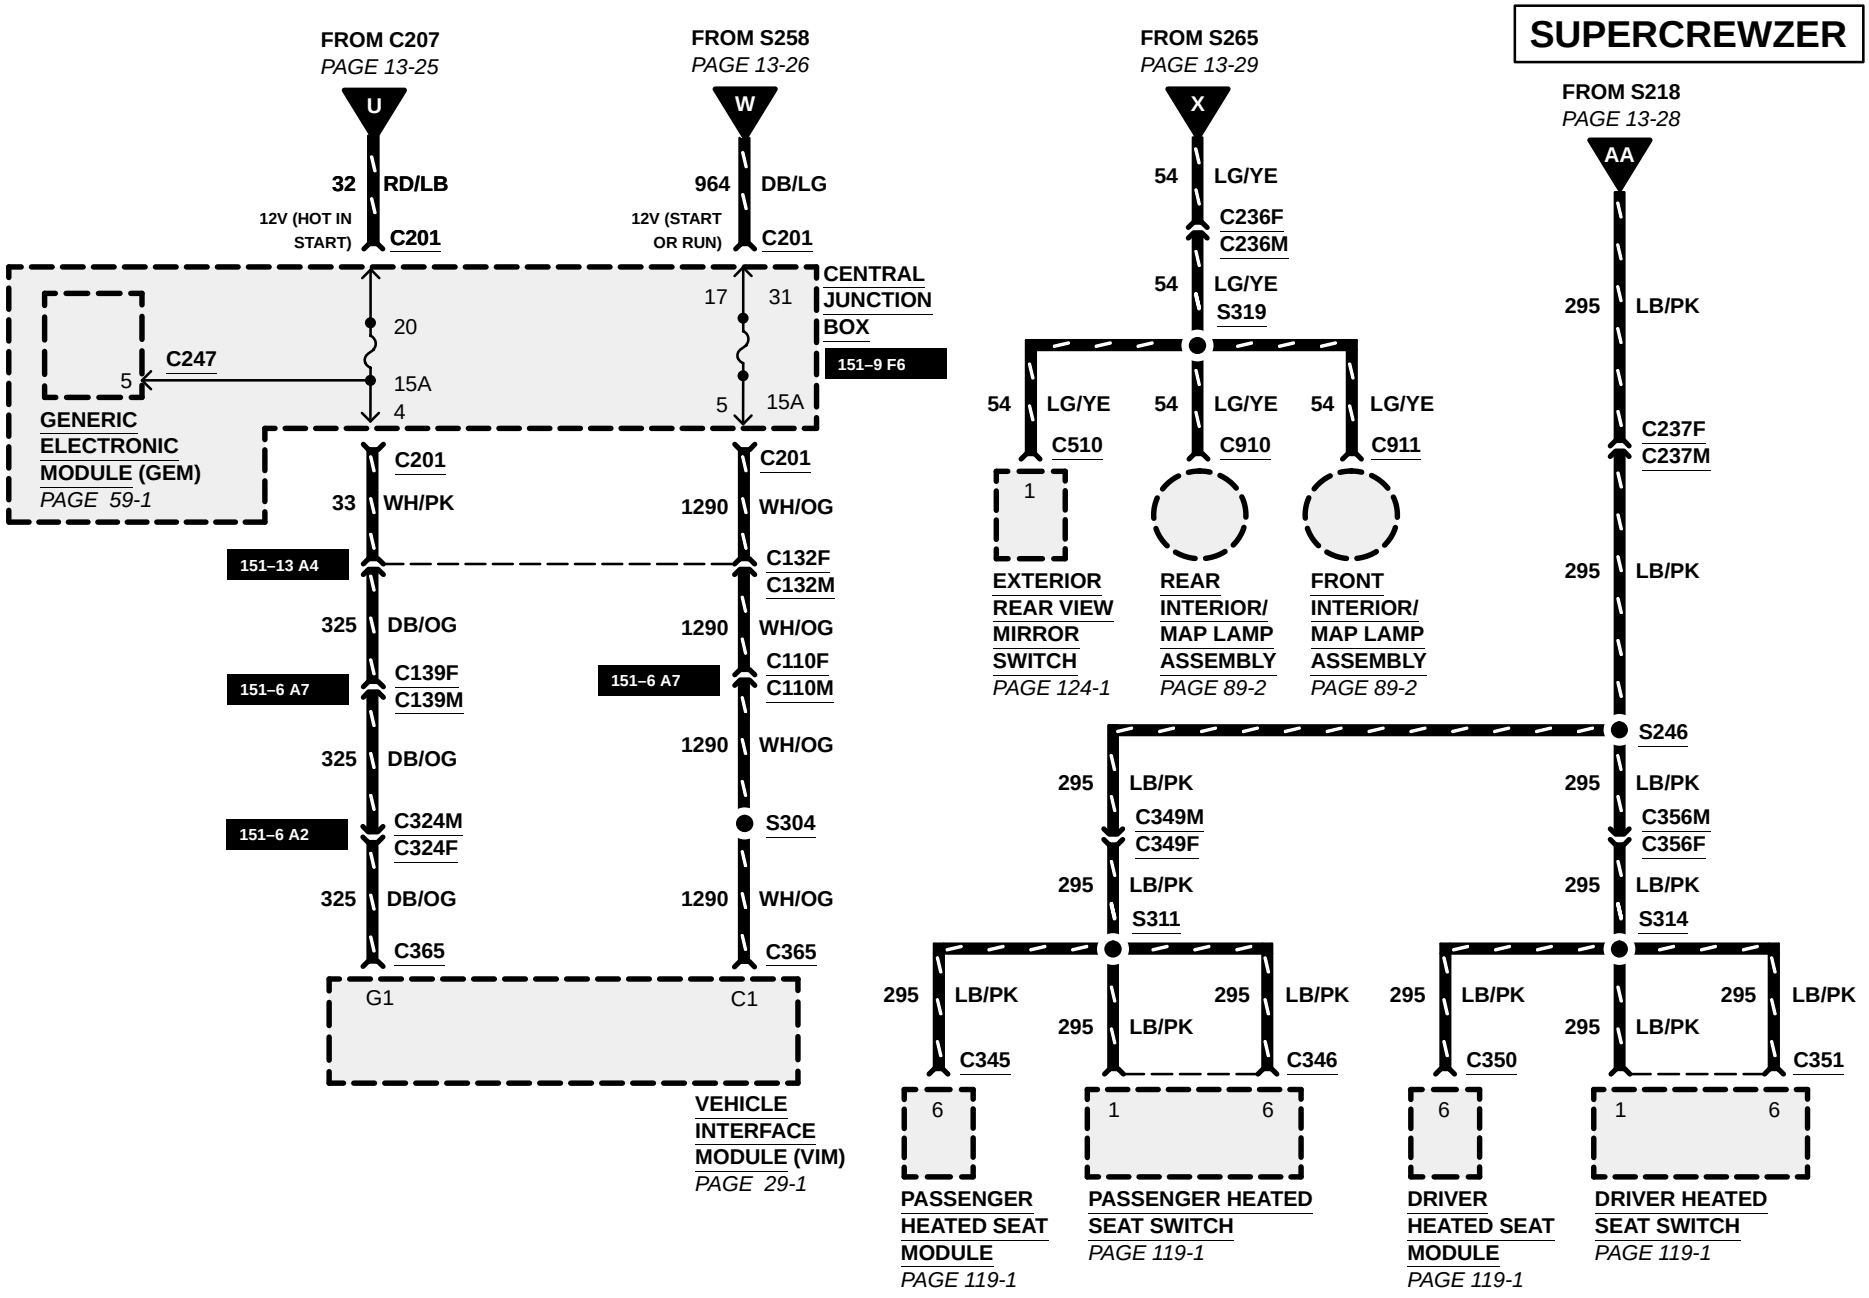
SUPERCREWZER
FROM C207
PAGE 13-25
FROM S258
PAGE 13-26
FROM S265
PAGE 13-29
FROM S218
PAGE 13-28
U
W
X
AA
32 RD/LB
12V (HOT IN START)
C201
964 DB/LG
12V (START OR RUN)
C201
54 LG/YE
C236F
C236M
54 LG/YE
S319
295 LB/PK
C237F
C237M
CENTRAL JUNCTION BOX
151–9 F6
17
31
20
C247
5
15A
4
5
15A
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-1
54 LG/YE
C510
1
EXTERIOR REAR VIEW MIRROR SWITCH
PAGE 124-1
54 LG/YE
C910
REAR INTERIOR/ MAP LAMP ASSEMBLY
PAGE 89-2
54 LG/YE
C911
FRONT INTERIOR/ MAP LAMP ASSEMBLY
PAGE 89-2
C201
33 WH/PK
C201
1290 WH/OG
151–13 A4
C132F
C132M
325 DB/OG
1290 WH/OG
151–6 A7
C139F
C139M
151–6 A7
C110F
C110M
325 DB/OG
1290 WH/OG
151–6 A2
C324M
C324F
S304
325 DB/OG
1290 WH/OG
C365
C365
G1
C1
VEHICLE INTERFACE MODULE (VIM)
PAGE 29-1
S246
295 LB/PK
C349M
C349F
295 LB/PK
295 LB/PK
C356M
C356F
295 LB/PK
295 LB/PK
S311
295 LB/PK
S314
295 LB/PK
295 LB/PK
C345
295 LB/PK
295 LB/PK
C346
295 LB/PK
C350
295 LB/PK
295 LB/PK
C351
6
1
6
6
1
6
PASSENGER HEATED SEAT MODULE
PAGE 119-1
PASSENGER HEATED SEAT SWITCH
PAGE 119-1
DRIVER HEATED SEAT MODULE
PAGE 119-1
DRIVER HEATED SEAT SWITCH
PAGE 119-1