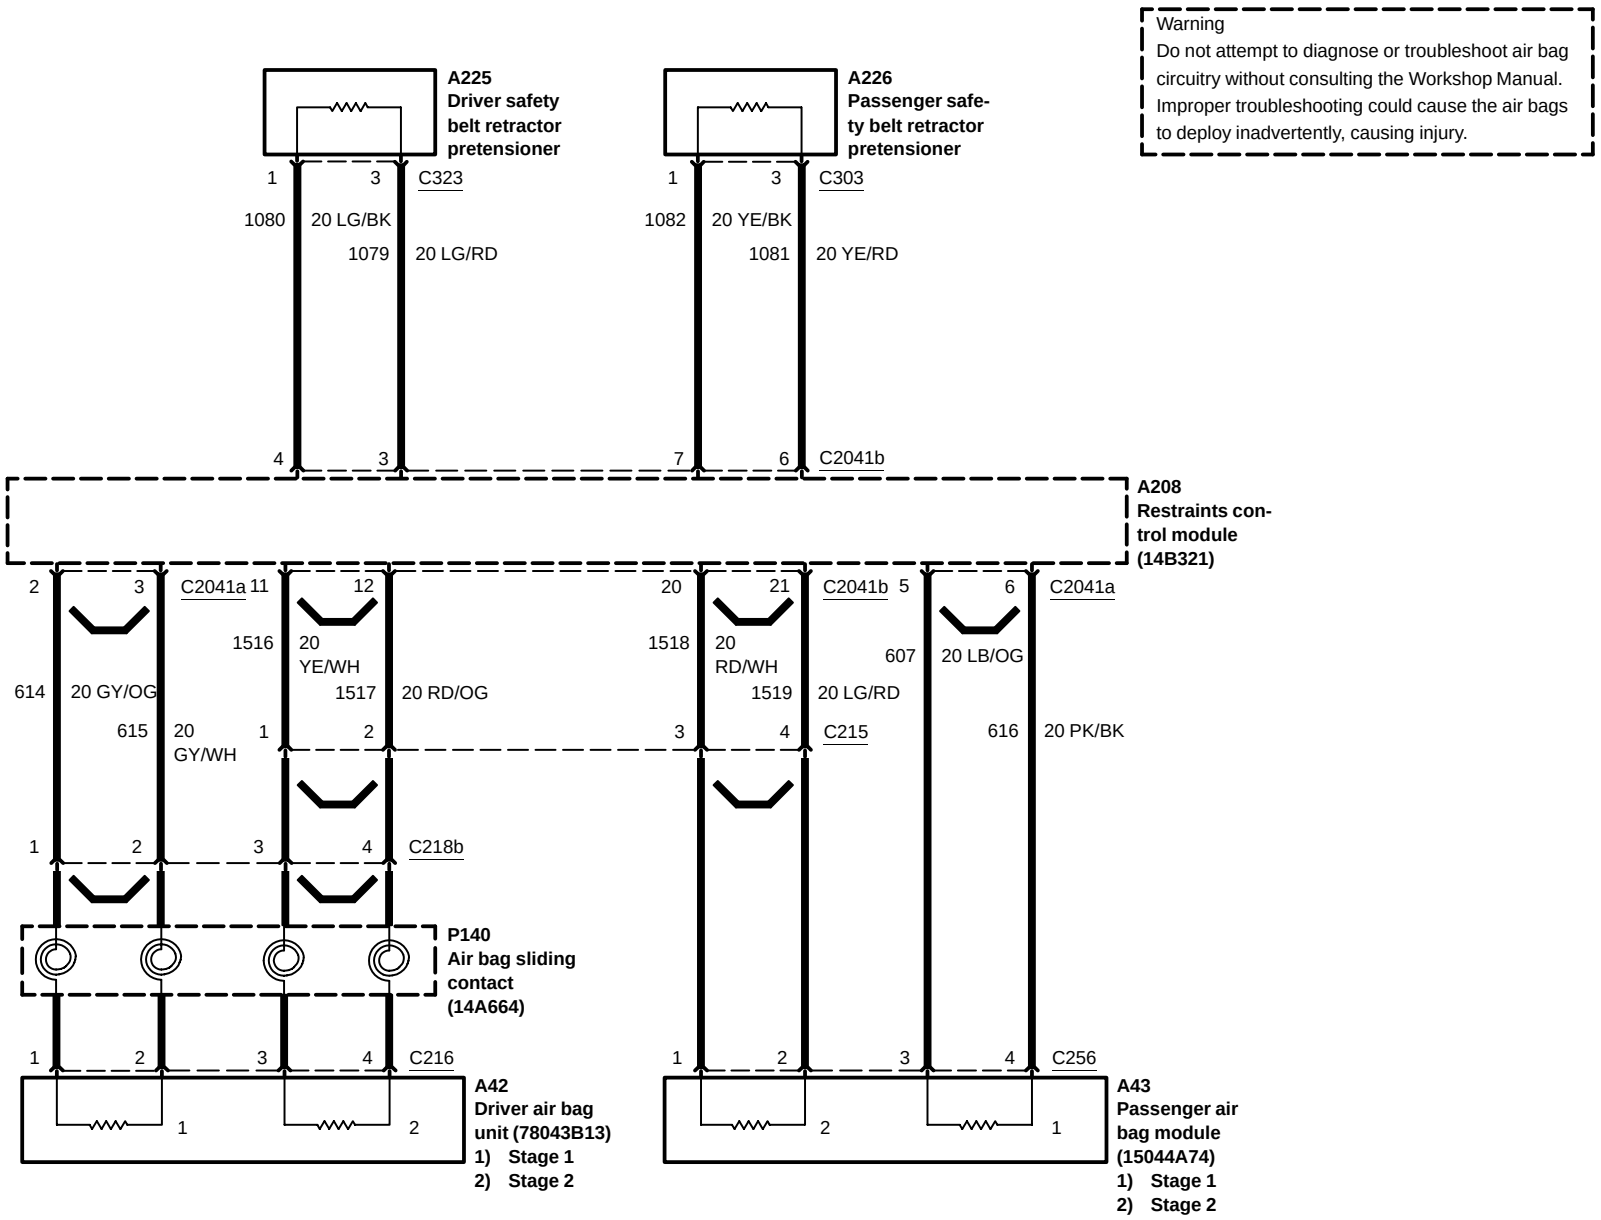
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
A225
Driver safety belt retractor pretensioner
A226
Passenger safety belt retractor pretensioner
C323
C303
1080 20 LG/BK
1079 20 LG/RD
1082 20 YE/BK
1081 20 YE/RD
C2041b
A208
Restraints control module (14B321)
C2041a
C2041b
C2041a
1516 20 YE/WH
1517 20 RD/OG
1518 20 RD/WH
1519 20 LG/RD
607 20 LB/OG
614 20 GY/OG
615 20 GY/WH
C215
616 20 PK/BK
C218b
P140
Air bag sliding contact (14A664)
C216
C256
A42
Driver air bag unit (78043B13)
1) Stage 1
2) Stage 2
A43
Passenger air bag module (15044A74)
1) Stage 1
2) Stage 2