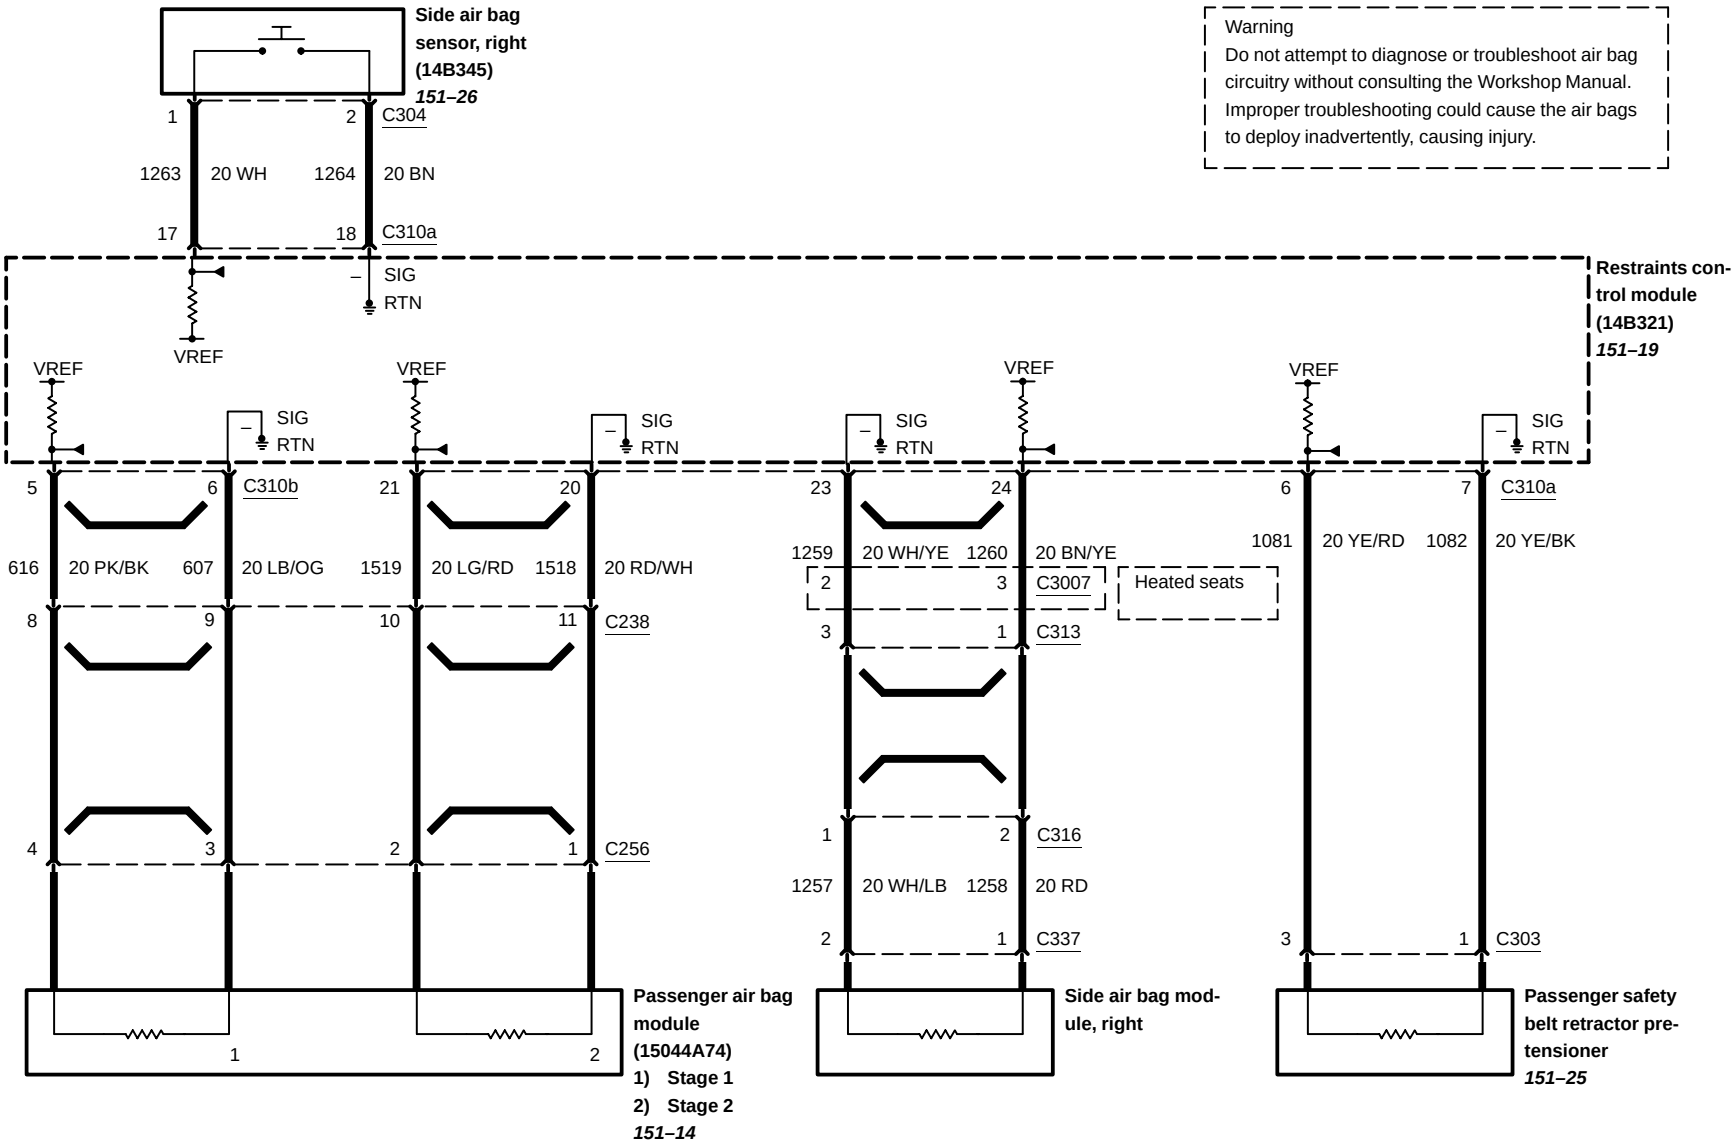
Side air bag sensor, right (14B345) 151–26
1
2
C304
1263
20 WH
1264
20 BN
17
18
C310a
SIG
RTN
VREF
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Restraints control module (14B321) 151–19
VREF
SIG
RTN
5
6
C310b
616
20 PK/BK
607
20 LB/OG
21
20
1519
20 LG/RD
1518
20 RD/WH
8
9
10
11
C238
4
3
2
1
C256
1
2
Passenger air bag module (15044A74)
1) Stage 1
2) Stage 2
151–14
23
24
1259
20 WH/YE
1260
20 BN/YE
2
3
C3007
Heated seats
3
1
C313
1
2
C316
1257
20 WH/LB
1258
20 RD
2
1
C337
Side air bag module, right
6
7
C310a
1081
20 YE/RD
1082
20 YE/BK
3
1
C303
Passenger safety belt retractor pretensioner
151–25