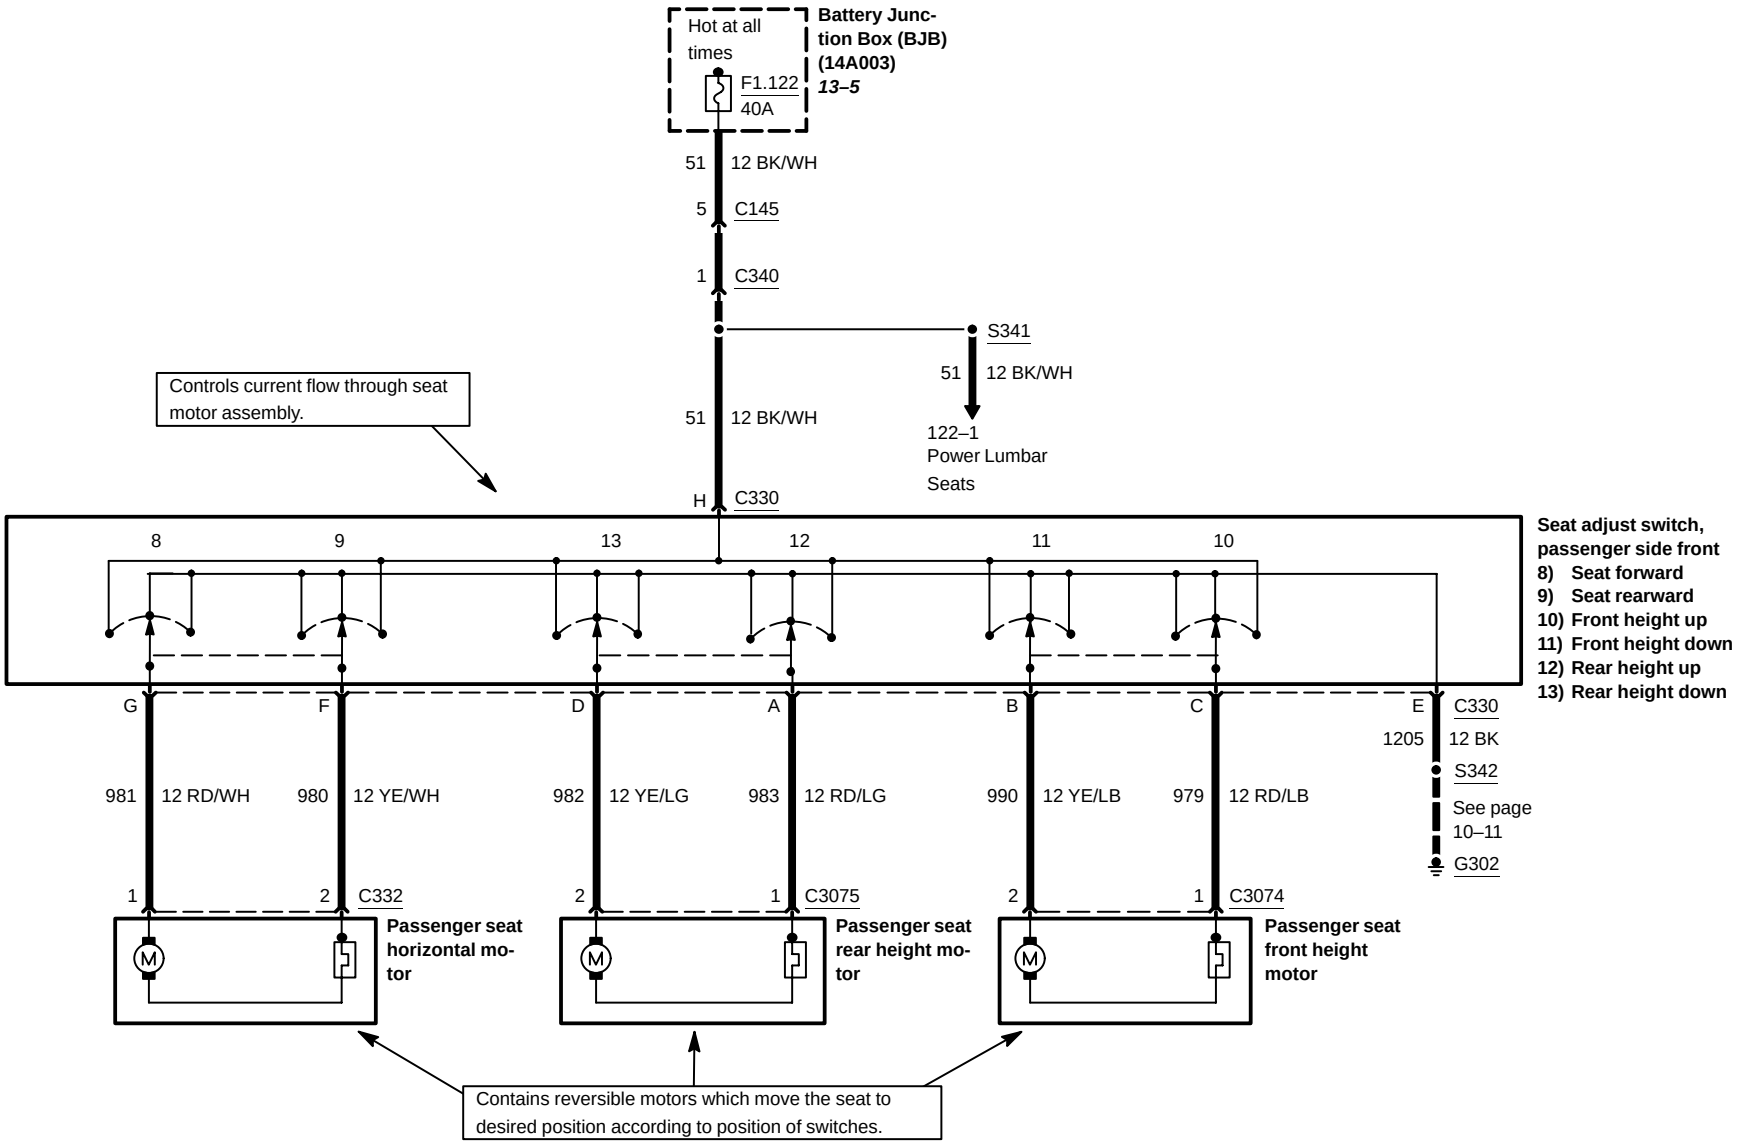
Hot at all times
Battery Junction Box (BJB) (14A003) 13–5
F1.122
40A
51 12 BK/WH
5 C145
1 C340
S341
51 12 BK/WH
122–1 Power Lumbar Seats
51 12 BK/WH
H C330
Controls current flow through seat motor assembly.
8 9 13 12 11 10
Seat adjust switch, passenger side front
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
G F D A B C E C330
1205 12 BK
S342
See page 10–11
G302
981 12 RD/WH
980 12 YE/WH
982 12 YE/LG
983 12 RD/LG
990 12 YE/LB
979 12 RD/LB
1 2 C332
2 1 C3075
2 1 C3074
Passenger seat horizontal motor
Passenger seat rear height motor
Passenger seat front height motor
M
Contains reversible motors which move the seat to desired position according to position of switches.