C360

14B719

Seat adjust switch,
driver side front
(14A701)

* without memory
** with memory

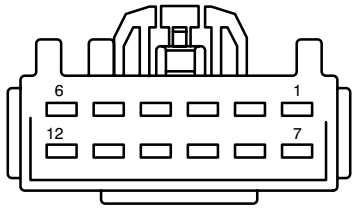

F12107

Pin	Circuit	Circuit function
1	*31-AH2 (BK)	Ground
	**91-AH35 (BN)	Ground
2	–	not used
3	*32-AH37 (WH/GN)	Driver seat horizontal motor +/ -
	**8-AH83 (WH/GN)	Seat Forward, switch sense
4	*33-AH38 (YE/BK)	Driver seat front height motor +/ -
	**8-AH84 (WH/BK)	Front Height, Down, switch sense
5	*32-AH38 (WH/BK)	Driver seat front height motor +/ -
	**10-AH84 (GY/BK)	Front Height, Up, switch sense
6	*30-AH35 (RD)	Voltage supplied at all times (overload protected)
	**29-AH35 (OG/YE)	Voltage supplied at all times (overload protected)

Pin	Circuit	Circuit function
7	*33-AH36 (YE/RD)	Driver seat backrest motor +/ -
	**8-AH82 (WH/RD)	Backrest forward, switch sense
8	*32-AH41 (WH/VT)	Driver seat rear height motor +/ -
	**8-AH85 (WH/VT)	Rear height circuit, Up, switch sense
9	*33-AH41 (YE/VT)	Driver seat rear height motor +/ -
	**10-AH85 (GY/WH)	Rear height circuit, Down, switch sense
10	–	not used
11	*33-AH37 (YE/GN)	Driver seat horizontal motor +/ -
	**10-AH83 (GY/OG)	Seat rearward, switch sense
12	*32-AH36 (WH/RD)	Driver seat backrest motor +/ -
	**10-AH82 (GY/RD)	Backrest rearward, switch sense