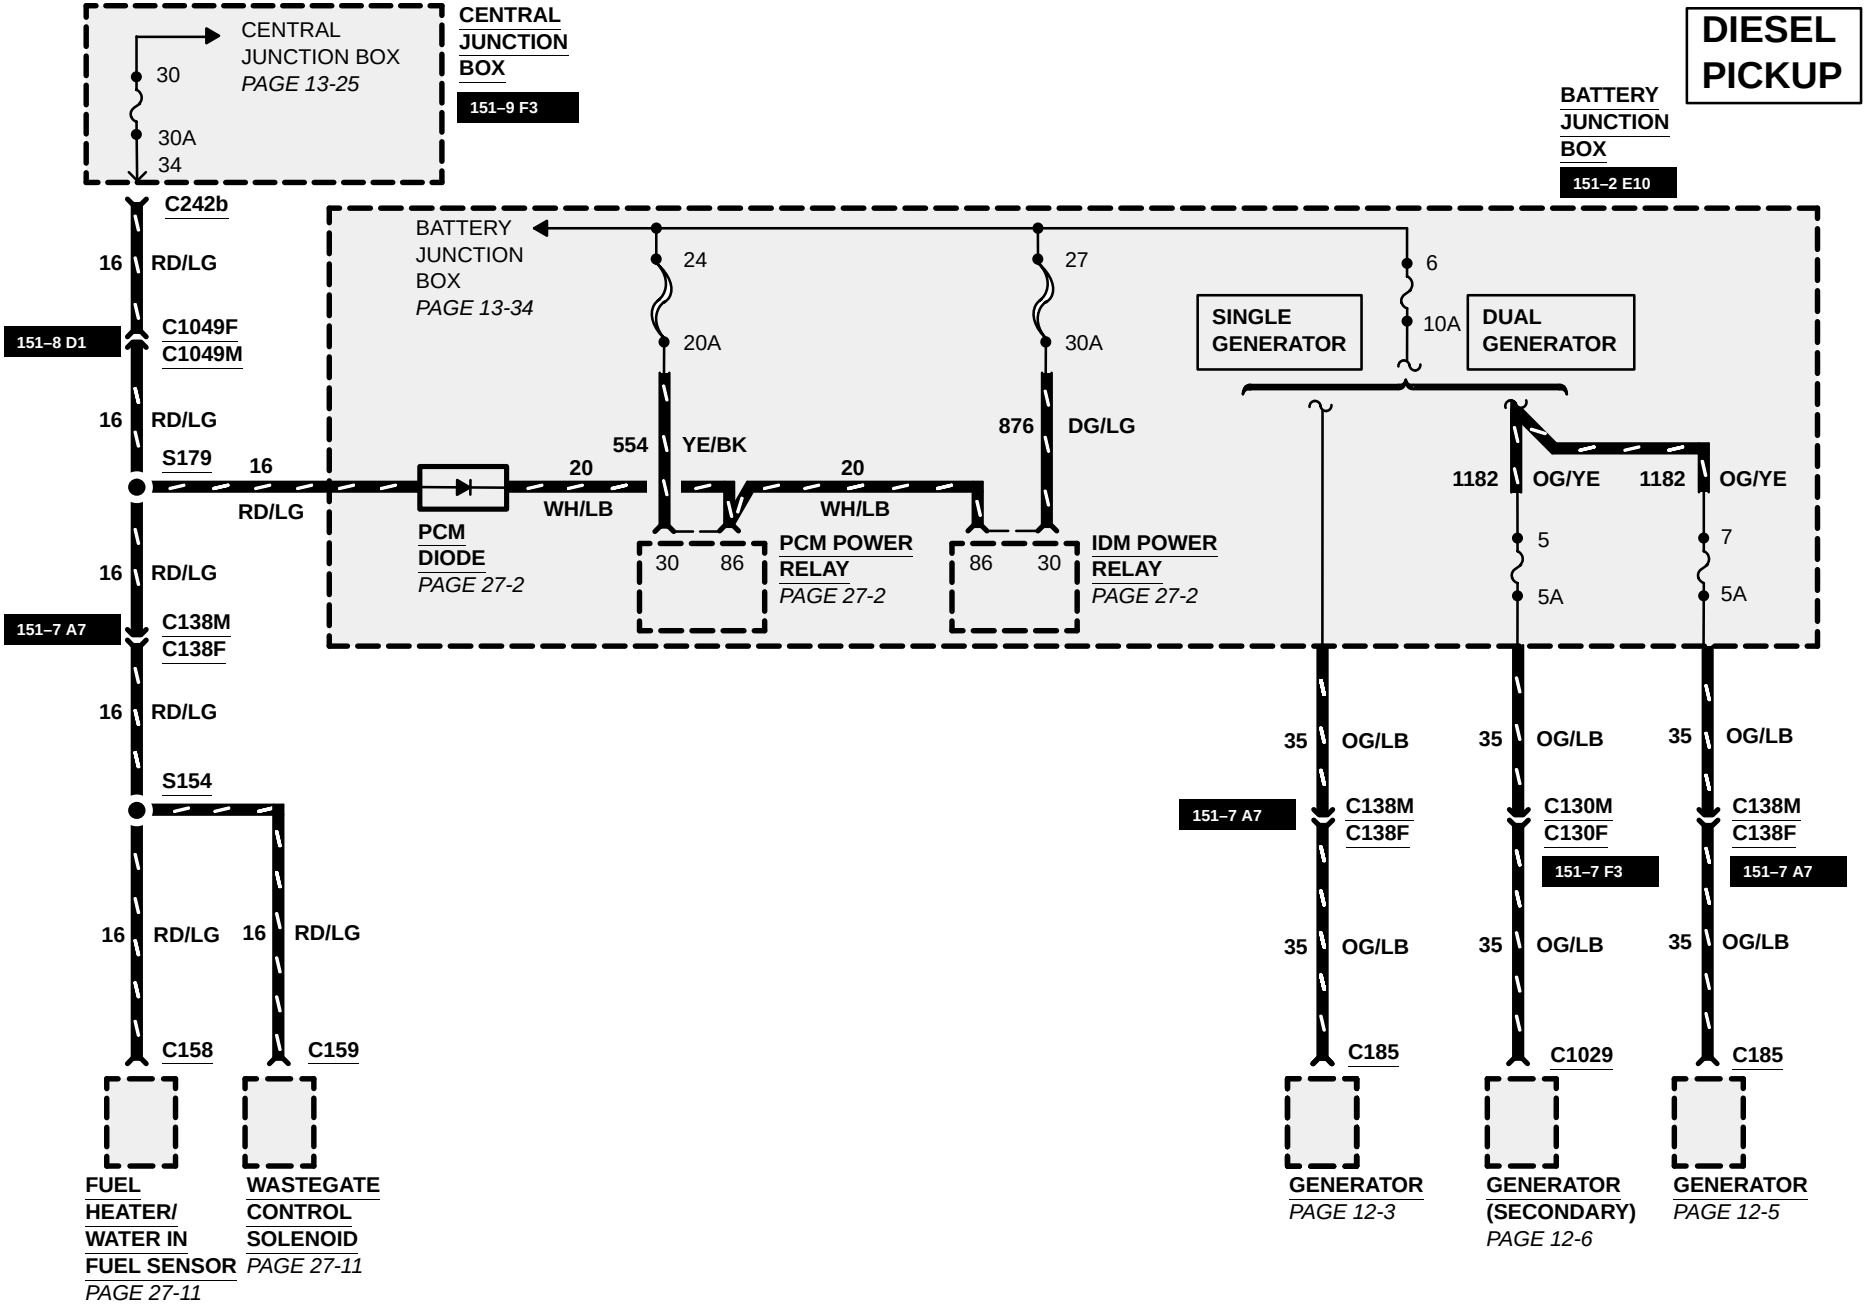
DIESEL PICKUP
CENTRAL JUNCTION BOX
PAGE 13-25
30
30A
34
CENTRAL JUNCTION BOX
151–9 F3
BATTERY JUNCTION BOX
151–2 E10
C242b
16 RD/LG
151–8 D1
C1049F
C1049M
16 RD/LG
S179
16 RD/LG
16 RD/LG
151–7 A7
C138M
C138F
16 RD/LG
S154
16 RD/LG
16 RD/LG
C158
C159
FUEL HEATER/ WATER IN FUEL SENSOR
PAGE 27-11
WASTEGATE CONTROL SOLENOID
PAGE 27-11
BATTERY JUNCTION BOX
PAGE 13-34
24
20A
27
30A
6
10A
SINGLE GENERATOR
DUAL GENERATOR
554 YE/BK
876 DG/LG
20 WH/LB
20 WH/LB
PCM DIODE
PAGE 27-2
30 86
PCM POWER RELAY
PAGE 27-2
86 30
IDM POWER RELAY
PAGE 27-2
1182 OG/YE
1182 OG/YE
5
5A
7
5A
35 OG/LB
35 OG/LB
35 OG/LB
151–7 A7
C138M
C138F
C130M
C130F
151–7 F3
C138M
C138F
151–7 A7
35 OG/LB
35 OG/LB
35 OG/LB
C185
C1029
C185
GENERATOR
PAGE 12-3
GENERATOR (SECONDARY)
PAGE 12-6
GENERATOR
PAGE 12-5