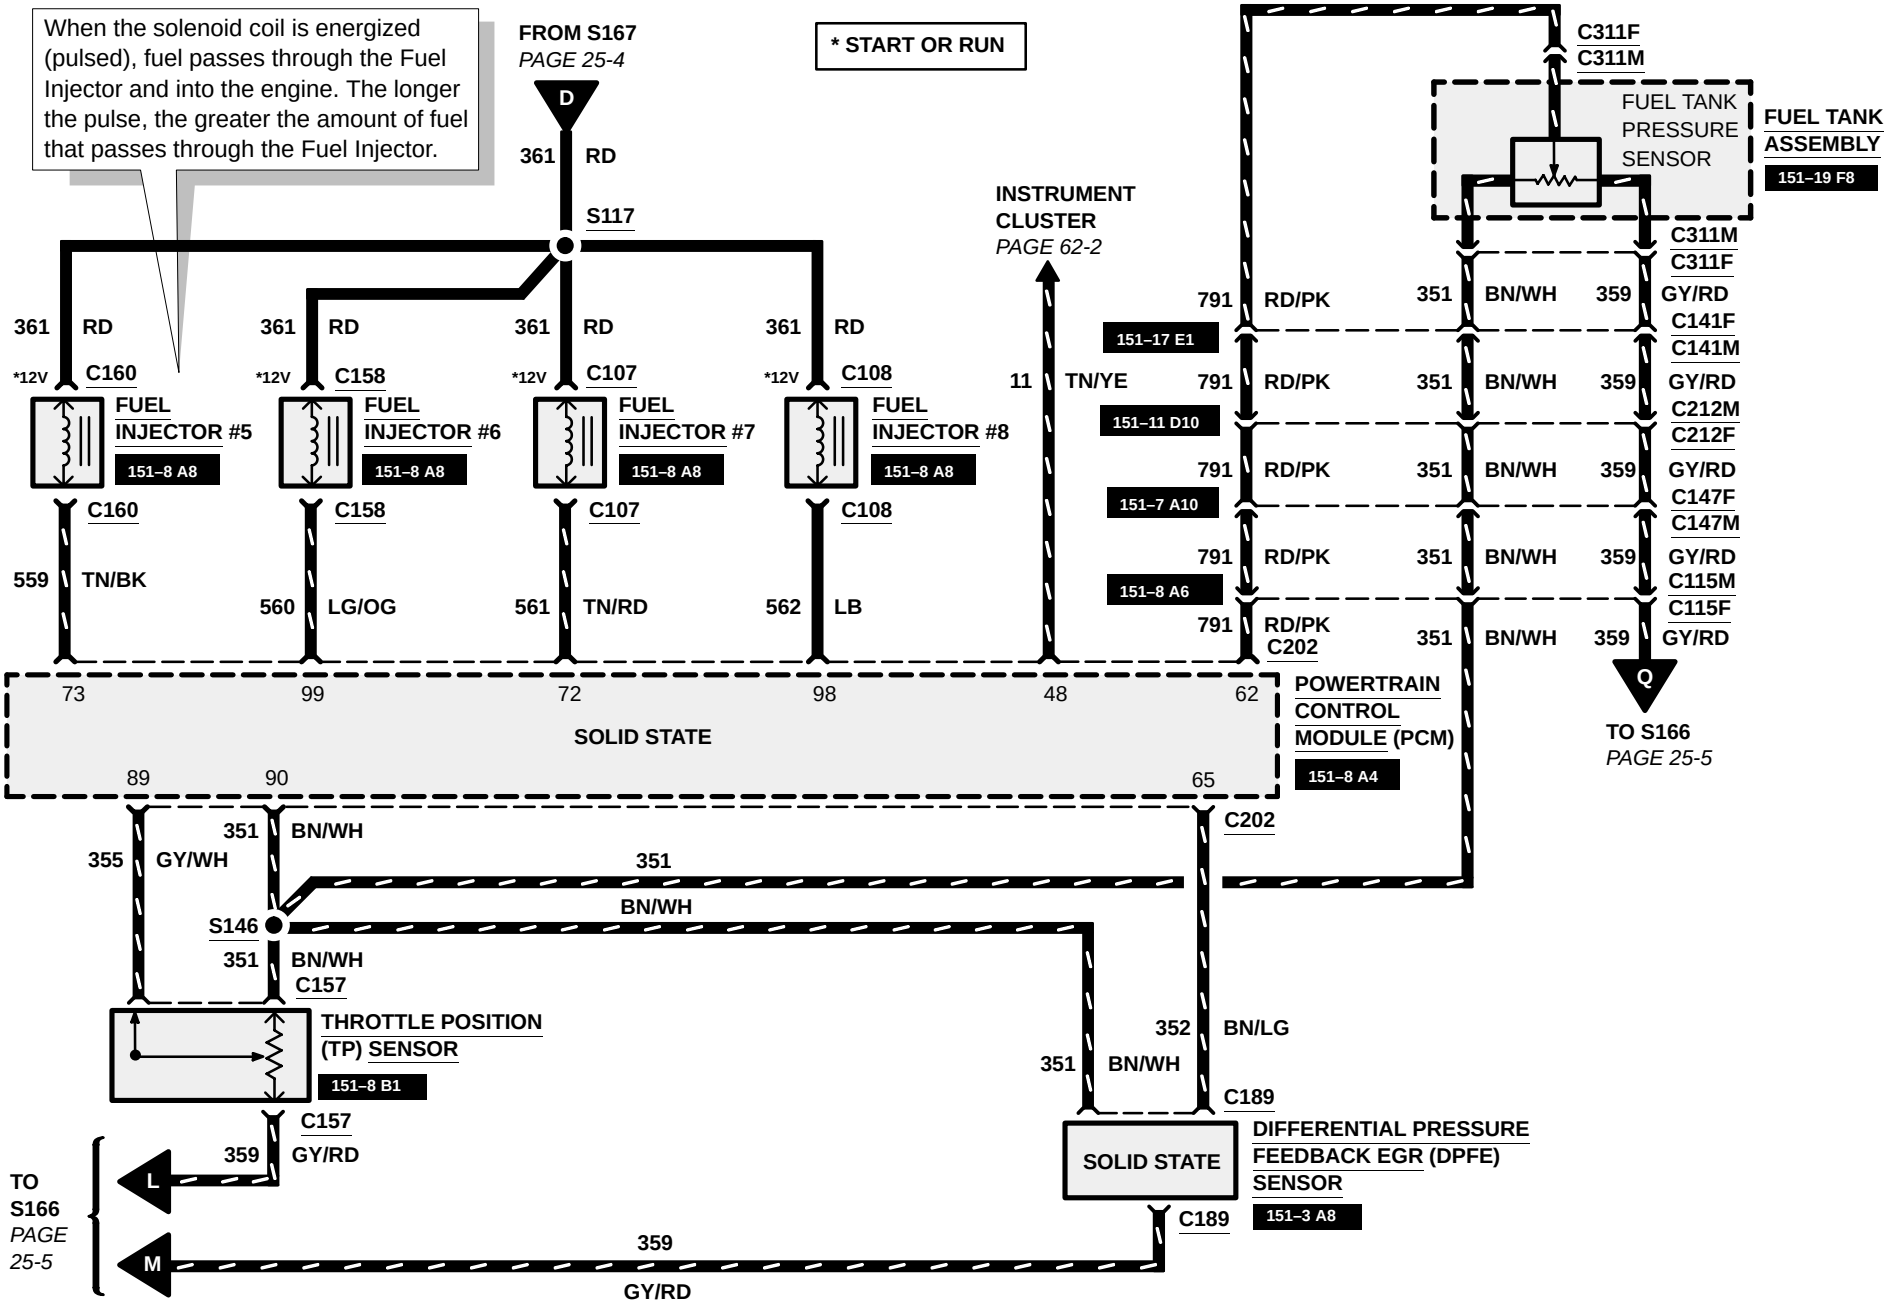
When the solenoid coil is energized (pulsed), fuel passes through the Fuel Injector and into the engine. The longer the pulse, the greater the amount of fuel that passes through the Fuel Injector.
FROM S167
PAGE 25-4
* START OR RUN
D
361 RD
S117
INSTRUMENT CLUSTER
PAGE 62-2
C311F
C311M
FUEL TANK PRESSURE SENSOR
FUEL TANK ASSEMBLY
151–19 F8
361 RD
*12V C160
FUEL INJECTOR #5
151–8 A8
C160
559 TN/BK
361 RD
*12V C158
FUEL INJECTOR #6
151–8 A8
C158
560 LG/OG
361 RD
*12V C107
FUEL INJECTOR #7
151–8 A8
C107
561 TN/RD
361 RD
*12V C108
FUEL INJECTOR #8
151–8 A8
C108
562 LB
11 TN/YE
151–11 D10
791 RD/PK
151–17 E1
151–7 A10
151–8 A6
C202
351 BN/WH
359 GY/RD
C311M
C311F
C141F
C141M
C212M
C212F
C147F
C147M
C115M
C115F
Q
TO S166
PAGE 25-5
73
99
72
98
48
62
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–8 A4
89
90
65
355 GY/WH
S146
C157
THROTTLE POSITION (TP) SENSOR
151–8 B1
352 BN/LG
C189
SOLID STATE
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–3 A8
L
M
TO S166
PAGE 25-5
GY/RD