C1009

14290

A405
Natural Gas Vehicle
(NGV) module

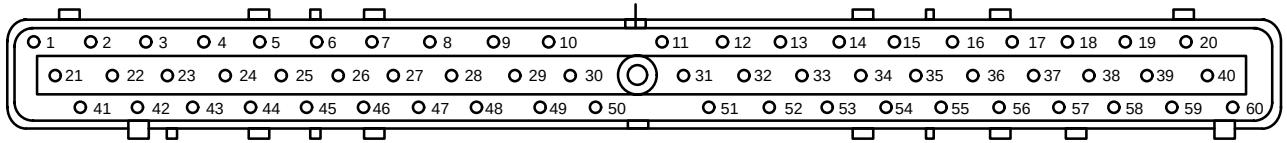

F60001

Pin	Circuit	Circuit function
1	554 (YE/BK)	Voltage supplied at all times (overload protected)
2	–	not used
3	555 (TN)	Fuel injector 1, control
4	556 (WH)	Fuel injector 2, control
5	557 (BN/YE)	Fuel injector 3, control
6	–	not used
7	791 (RD/PK)	Natural Gas Vehicle (NGV) fuel tank pressure sensor
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	231 (BK/YE)	Accessory, feed, Instrument cluster
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	915 (PK/LB)	SCP Bus –
19	914 (TN/OG)	SCP Bus +
20	–	not used
21	–	not used
22	–	not used
23	558 (BN/LB)	Fuel injector 4, control
24	559 (LG/OG)	Fuel injector 5, control
25	560 (LG/OG)	Fuel injector 6, control
26	912 (WH/RD)	Reference, voltage

Pin	Circuit	Circuit function
27	–	not used
28	966 (LB/PK)	Natural Gas Vehicle (NGV) fuel tank temperature sensor 2
29	–	not used
30	–	not used
31	570 (BK/WH)	Ground
32	–	not used
33	1169 (WH/LB)	Fuel injector 5, control
34	–	not used
35	1168 (YE/BK)	Fuel injector 4, control
36	–	not used
37	361 (RD)	Voltage supplied in Start and Run (overload protected)
38	29 (YE/WH)	Fuel pump/fuel gauge sender
39	1167 (WH/BK)	Fuel injector 3, control
40	570 (BK/WH)	Ground
41	–	not used
42	1170 (YE/LB)	Fuel injector 6, control
43	561 (TN/RD)	Fuel injector 7, control
44	562 (LB)	Fuel injector 8, control
45	–	not used
46	875 (BK/LB)	signal, return
47	925 (WH/YE)	Natural Gas Vehicle (NGV) fuel tank temperature sensor
48	–	not used
49	–	not used
50	–	not used

Pin	Circuit	Circuit function
51	–	not used
52	–	not used
53	1171 (WH)	Fuel injector 7, control
54	1172 (YE)	Fuel injector 8, control
55	–	not used

Pin	Circuit	Circuit function
56	–	not used
57	361 (RD)	Voltage supplied in Start and Run (overload protected)
58	1156 (WH/RD)	Fuel injector 1, control
59	1166 (YE/RD)	Fuel injector 2, control
60	570 (BK/WH)	Ground