C117

12B637

P72
Coil On Plug (COP)
7 (12029)

* 6.8L
** 5.4L

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	*1030 (DG/VT)	Switched ground
	**1027 (PK/LB)	Switched ground

C118

12B637

P73
Coil On Plug (COP)
8 (12029)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Switched ground

C122

12A581

M87
Speed control servo
(9C735)

* manual transmission
** automatic transmission

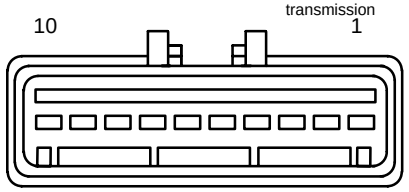

F10011

Pin	Circuit	Circuit function
1	203 (OG/LB)	Cruise set, to antenna, control
2	–	not used
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	*306 (TN/LB)	Clutch pedal position switch, input
	**810 (RD/LG)	Brake pedal position switch (13480), input
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	295 (LB/PK)	electronic cluster, Accessory, feed
8	–	not used
9	307 (BK/YE)	Brake pressure switch (2B264), input
10	57 (BK)	Ground

C124

12A581

N1
Brake fluid level
switch (2L414)

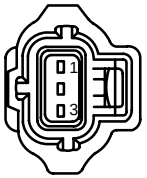

F03247

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	512 (TN/LG)	Brake indicator, control
3	531 (DG/YE)	Brake fluid level switch (2L414), signal