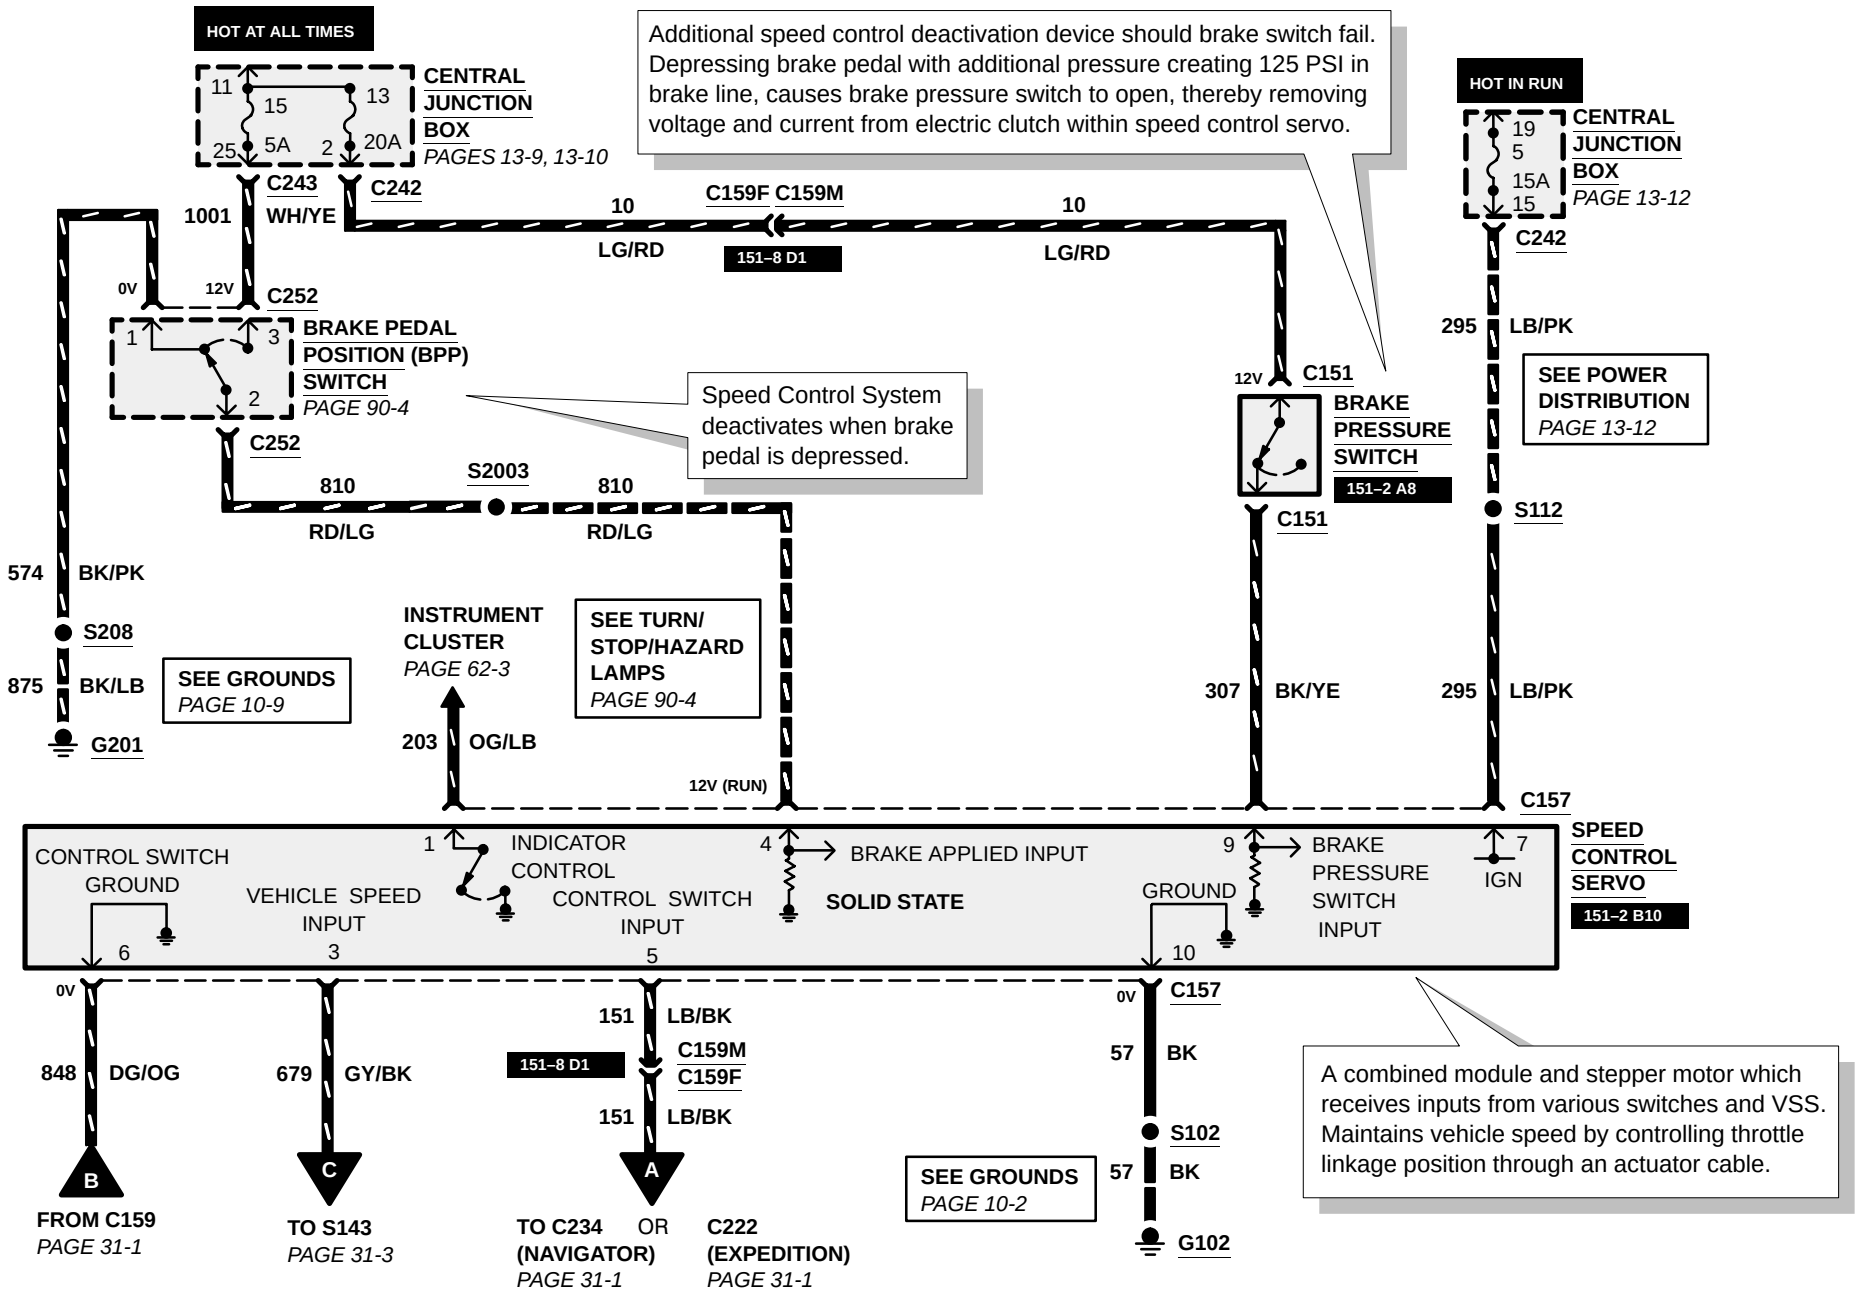
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-9, 13-10
11
15
13
25
5A
2
20A
C243
C242
1001
WH/YE
10
LG/RD
C159F C159M
151–8 D1
10
LG/RD
0V
12V
C252
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-4
1
3
2
C252
810
S2003
810
RD/LG
RD/LG
574
BK/PK
S208
875
BK/LB
SEE GROUNDS
PAGE 10-9
G201
INSTRUMENT CLUSTER
PAGE 62-3
203
OG/LB
SEE TURN/ STOP/HAZARD LAMPS
PAGE 90-4
12V (RUN)
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125 PSI in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
Speed Control System deactivates when brake pedal is depressed.
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-12
19
5
15A
15
C242
295
LB/PK
SEE POWER DISTRIBUTION
PAGE 13-12
12V
C151
BRAKE PRESSURE SWITCH
151–2 A8
C151
S112
307
BK/YE
295
LB/PK
C157
SPEED CONTROL SERVO
151–2 B10
CONTROL SWITCH GROUND
6
VEHICLE SPEED INPUT
3
1
INDICATOR CONTROL
CONTROL SWITCH INPUT
5
4
BRAKE APPLIED INPUT
SOLID STATE
GROUND
10
9
BRAKE PRESSURE SWITCH INPUT
7
IGN
0V
848
DG/OG
B
FROM C159
PAGE 31-1
679
GY/BK
C
TO S143
PAGE 31-3
151
LB/BK
151–8 D1
C159M
C159F
151
LB/BK
A
TO C234 (NAVIGATOR)
PAGE 31-1
OR
C222 (EXPEDITION)
PAGE 31-1
0V
C157
57
BK
S102
57
BK
G102
SEE GROUNDS
PAGE 10-2
A combined module and stepper motor which receives inputs from various switches and VSS. Maintains vehicle speed by controlling throttle linkage position through an actuator cable.