160-1 VEHICLE REPAIR LOCATION CODES

COUPE

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: A5/FU – (UNDER THE FLOOR OF THE DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

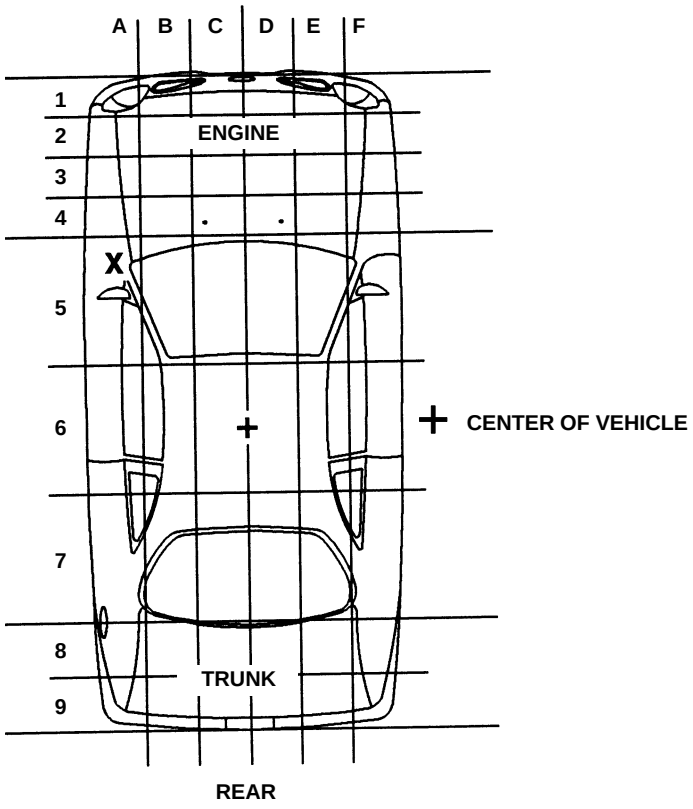

OVER/UNDER DIRECTION

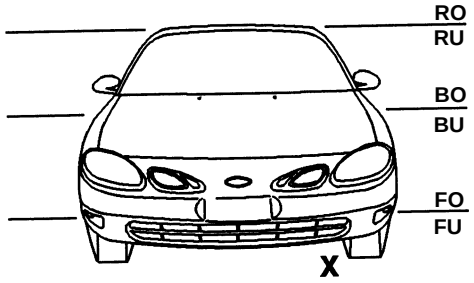

R = ROOF LINE
- **RO = ROOF OVER**
- **RU = ROOF UNDER**

B = BELT LINE
- **BO = BELT OVER**
- **BU = BELT UNDER**

F = FLOOR PAN
- **FO = FLOOR OVER**
- **FU = FLOOR UNDER**

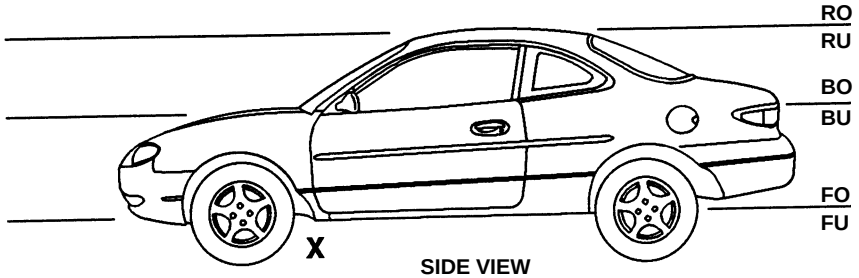

SIDE VIEW

ESCORT
FCS-12117-01