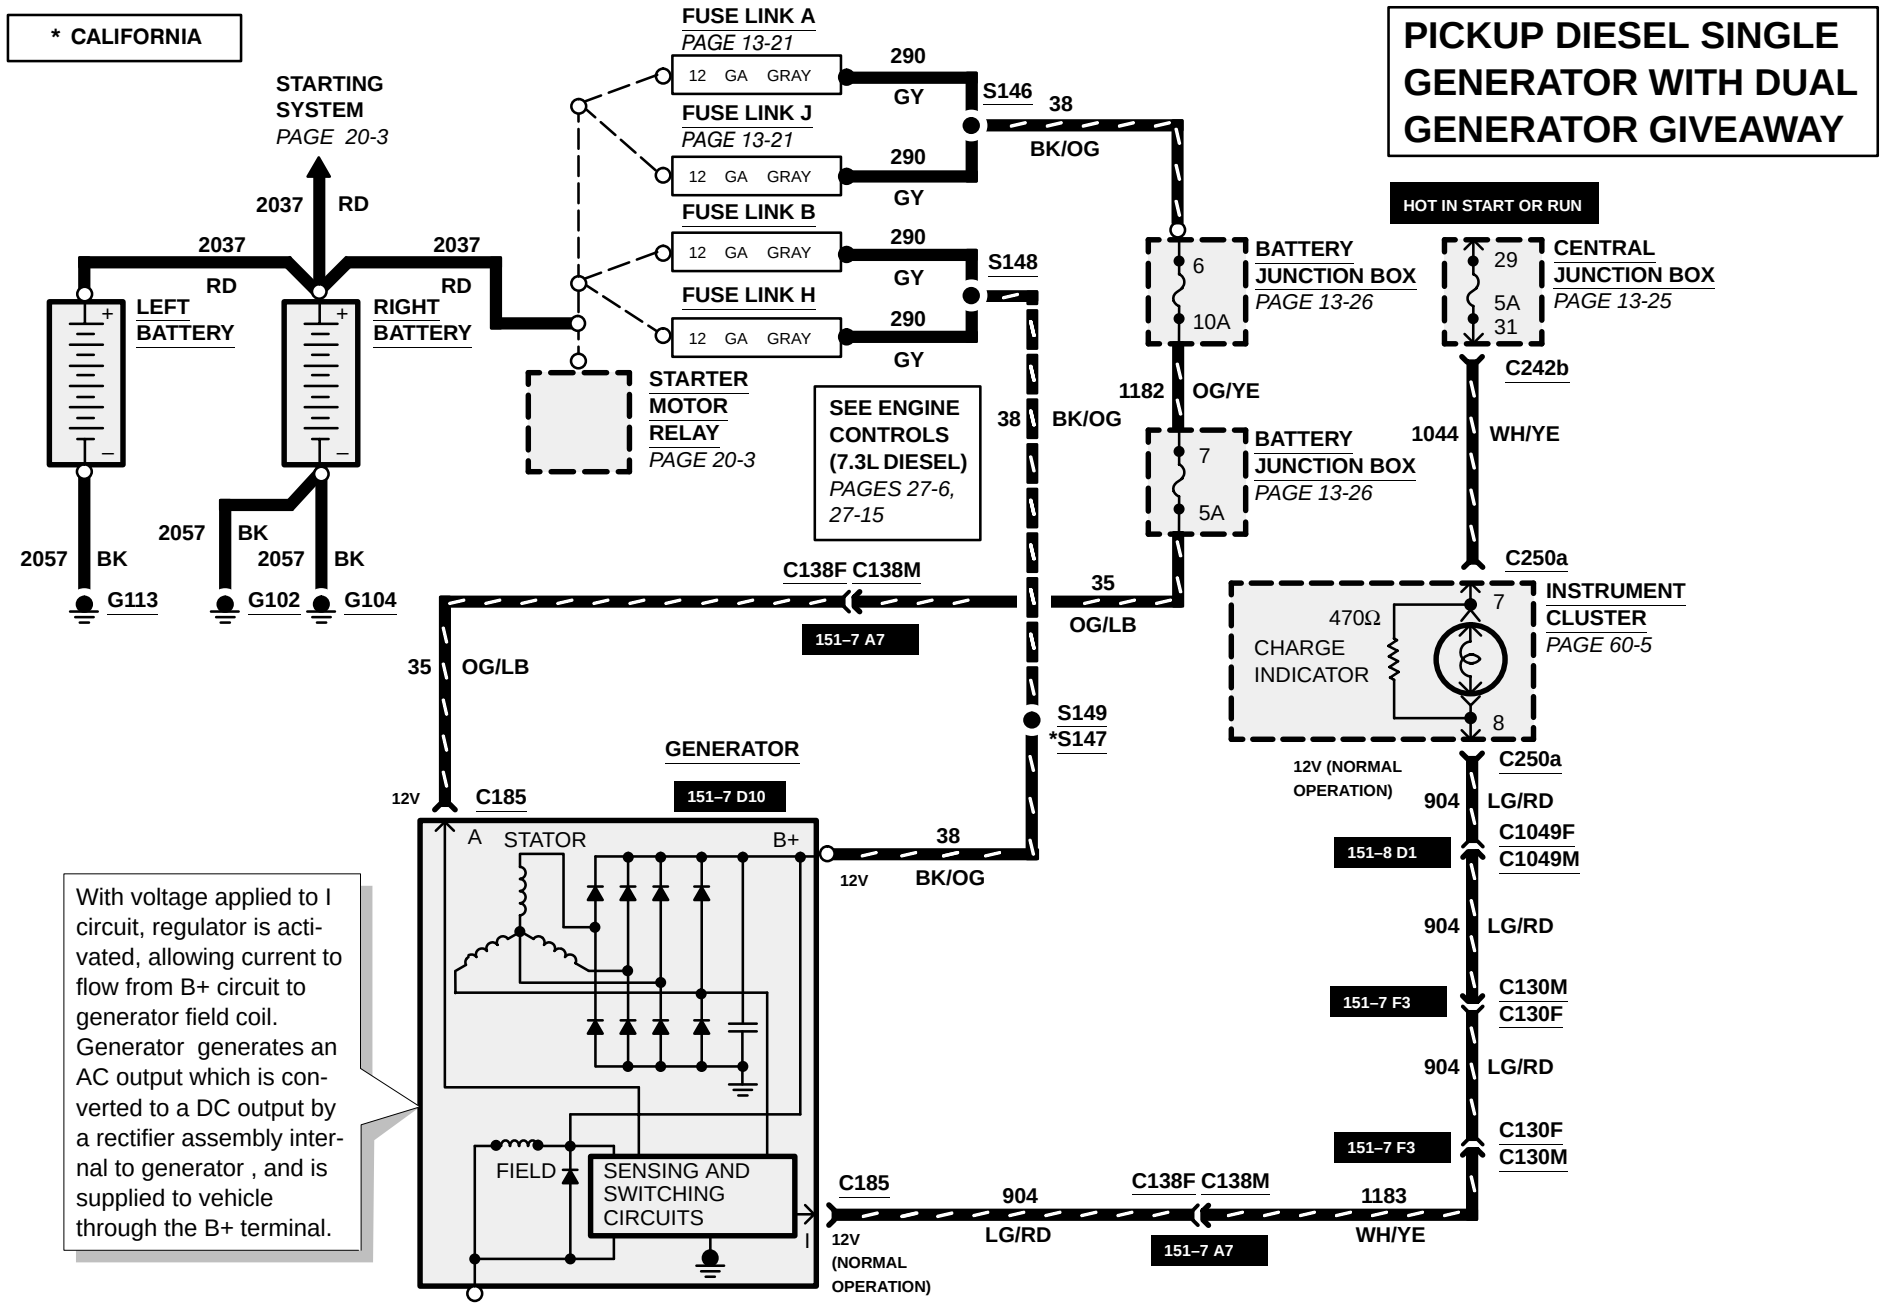
* CALIFORNIA
PICKUP DIESEL SINGLE GENERATOR WITH DUAL GENERATOR GIVEAWAY
STARTING SYSTEM
PAGE 20-3
2037 RD
2037 RD
2037 RD
LEFT BATTERY
RIGHT BATTERY
2057 BK
2057 BK
2057 BK
G113
G102
G104
FUSE LINK A
PAGE 13-21
FUSE LINK J
PAGE 13-21
FUSE LINK B
FUSE LINK H
12 GA GRAY
290 GY
S146
S148
38 BK/OG
STARTER MOTOR RELAY
PAGE 20-3
SEE ENGINE CONTROLS (7.3L DIESEL)
PAGES 27-6, 27-15
HOT IN START OR RUN
BATTERY JUNCTION BOX
PAGE 13-26
6
10A
1182 OG/YE
7
5A
CENTRAL JUNCTION BOX
PAGE 13-25
29
5A
31
C242b
1044 WH/YE
C250a
INSTRUMENT CLUSTER
PAGE 60-5
470Ω
CHARGE INDICATOR
7
8
12V (NORMAL OPERATION)
C250a
904 LG/RD
C1049F
C1049M
151–8 D1
904 LG/RD
C130M
C130F
151–7 F3
904 LG/RD
C130F
C130M
151–7 F3
C138F C138M
35 OG/LB
151–7 A7
GENERATOR
12V
C185
151–7 D10
A
STATOR
B+
38 BK/OG
12V
S149
*S147
FIELD
SENSING AND SWITCHING CIRCUITS
I
C185
12V (NORMAL OPERATION)
904 LG/RD
C138F C138M
151–7 A7
1183 WH/YE
With voltage applied to I circuit, regulator is activated, allowing current to flow from B+ circuit to generator field coil. Generator generates an AC output which is converted to a DC output by a rectifier assembly internal to generator , and is supplied to vehicle through the B+ terminal.