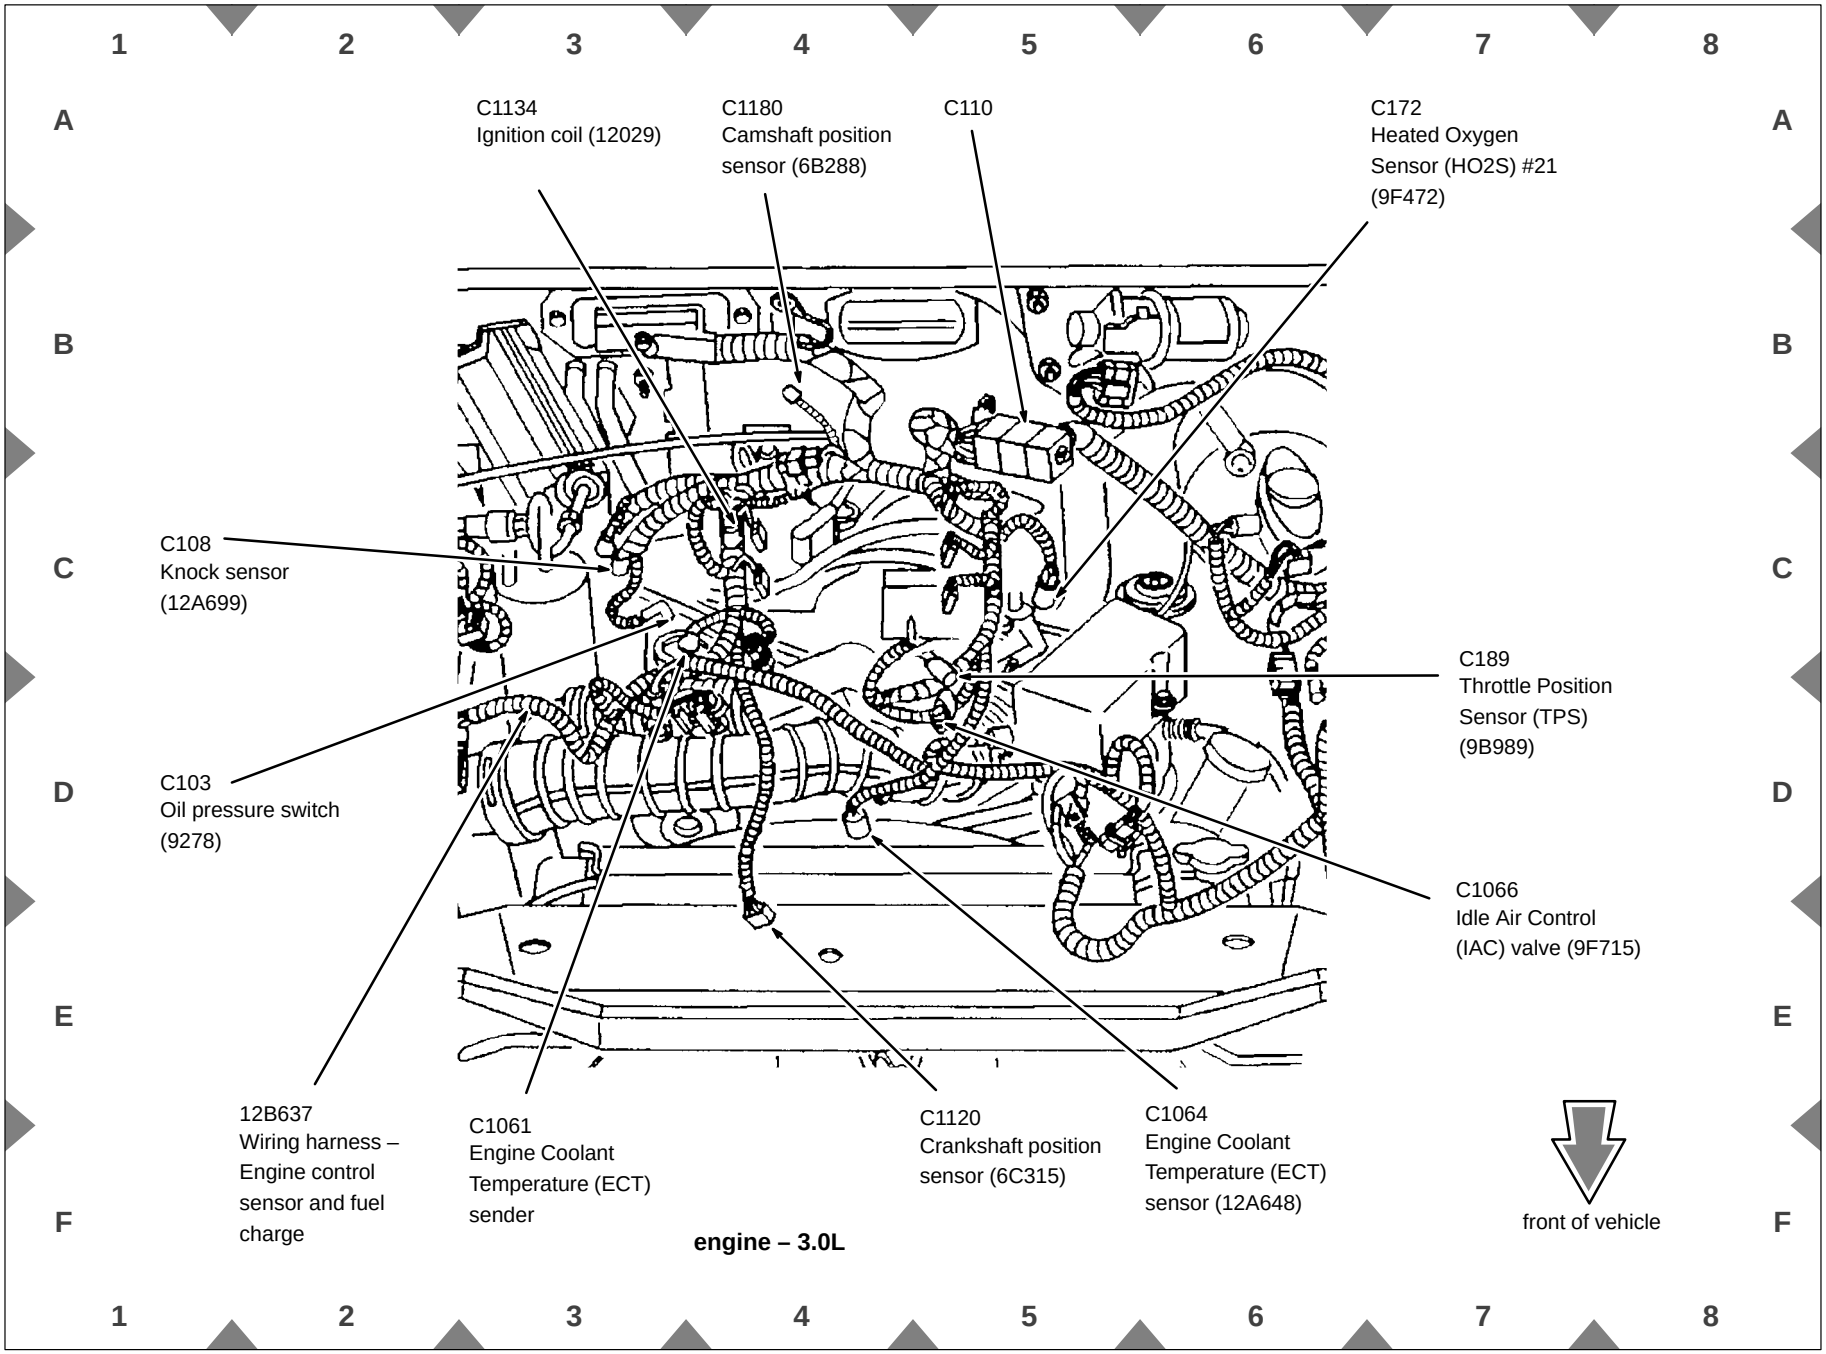
1
2
3
4
5
6
7
8
A
B
C
D
E
F
C1134
Ignition coil (12029)
C1180
Camshaft position sensor (6B288)
C110
C172
Heated Oxygen Sensor (HO2S) #21 (9F472)
C108
Knock sensor (12A699)
C189
Throttle Position Sensor (TPS) (9B989)
C103
Oil pressure switch (9278)
C1066
Idle Air Control (IAC) valve (9F715)
12B637
Wiring harness – Engine control sensor and fuel charge
C1061
Engine Coolant Temperature (ECT) sender
C1120
Crankshaft position sensor (6C315)
C1064
Engine Coolant Temperature (ECT) sensor (12A648)
front of vehicle

**engine – 3.0L**