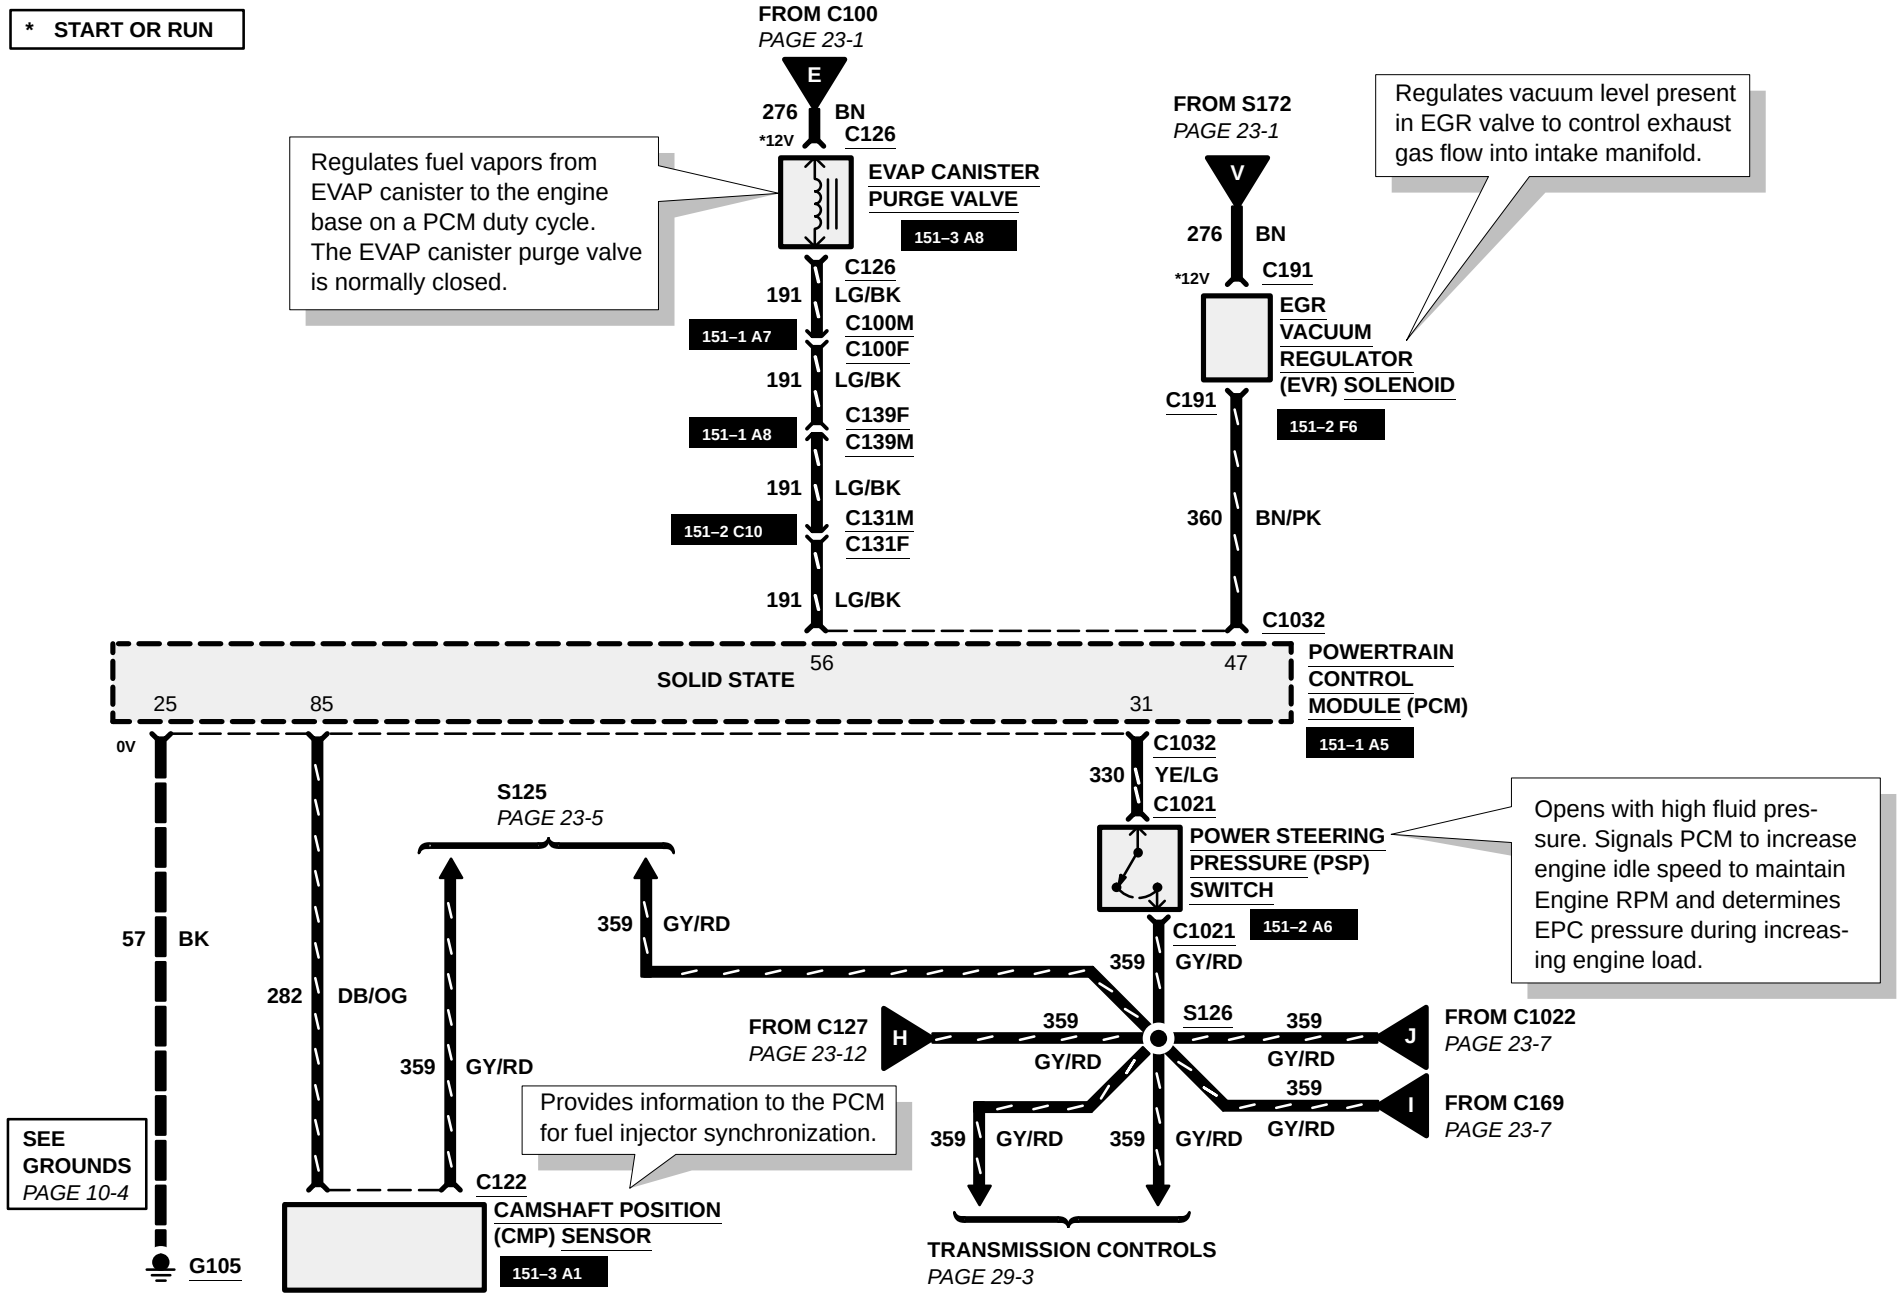
* START OR RUN
FROM C100
PAGE 23-1
E
276
*12V
BN
C126
EVAP CANISTER PURGE VALVE
151–3 A8
Regulates fuel vapors from EVAP canister to the engine base on a PCM duty cycle. The EVAP canister purge valve is normally closed.
C126
191
LG/BK
C100M
C100F
151–1 A7
191
LG/BK
C139F
C139M
151–1 A8
191
LG/BK
C131M
C131F
151–2 C10
191
LG/BK
FROM S172
PAGE 23-1
V
276
BN
*12V
C191
EGR VACUUM REGULATOR (EVR) SOLENOID
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold.
C191
151–2 F6
360
BN/PK
C1032
SOLID STATE
56
47
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5
25
85
31
0V
C1032
330
YE/LG
C1021
S125
PAGE 23-5
POWER STEERING PRESSURE (PSP) SWITCH
151–2 A6
Opens with high fluid pressure. Signals PCM to increase engine idle speed to maintain Engine RPM and determines EPC pressure during increasing engine load.
359
GY/RD
C1021
359
GY/RD
57
BK
282
DB/OG
359
GY/RD
FROM C127
PAGE 23-12
H
359
GY/RD
S126
359
GY/RD
J
FROM C1022
PAGE 23-7
359
GY/RD
I
FROM C169
PAGE 23-7
Provides information to the PCM for fuel injector synchronization.
359
GY/RD
359
GY/RD
SEE GROUNDS
PAGE 10-4
C122
CAMSHAFT POSITION (CMP) SENSOR
151–3 A1
G105
TRANSMISSION CONTROLS
PAGE 29-3