C433 (BK)

14405

A31
Fuel tank unit

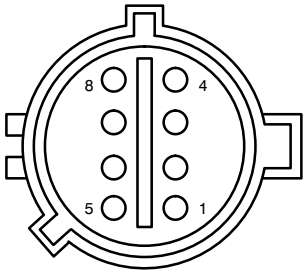

F08052

Pin	Circuit	Circuit Function
1	791 (RD/PK)	Fuel tank pressure transducer sensor
2	359 (GY/RD)	signal, return
3	351 (BN/WH)	Reference, voltage
4	–	not used
5	29 (YE/WH)	Fuel pump/fuel gauge sender
6	57 (BK)	Ground
7	787 (PK/BK)	Fuel pump, Power
8	396 (BK/OG)	Ground

C435 (GY)

14405

B113
Fuel tank pressure transducer sensor

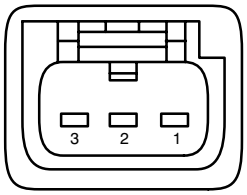

F03161

Pin	Circuit	Circuit Function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	791 (RD/PK)	Fuel tank pressure transducer sensor

C439

14405

E201
Trailer tow connector

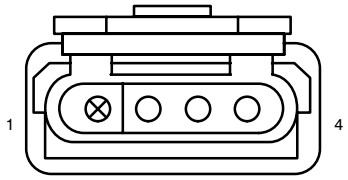

F04211

Pin	Circuit	Circuit Function
1	206 (WH)	Trailer tow connector, Ground
2	962 (BN/WH)	Trailer tow relay, switched output
3	52 (YE)	Turn lamps, feed, left rear
4	64 (DG)	Turn lamps, feed, right rear

C450

14405

Y131
Evaporative emission (EVAP) canister vent valve

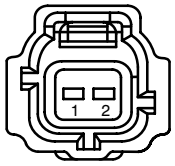

F02101

Pin	Circuit	Circuit Function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C451 (GY)

13A409

E105
Reversing lamp, left

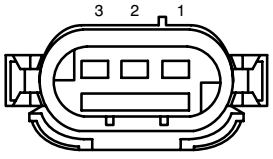

F03099

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse