C128

12A581

B22
Mass Air Flow
(MAF) sensor
(12B579)

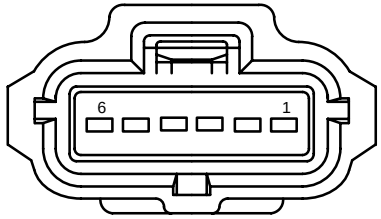

F06077

Pin	Circuit	Circuit function
1	–	not used
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
6	–	not used

C129

12B637

9D930

B213
Intake Air Tempera-
ture (IAT) sensor
(12A697)

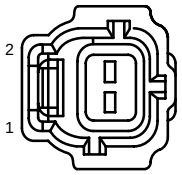

F02101

Pin	Circuit	Circuit function
1	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
2	359 (GY/RD)	signal, return

C130

12A581

N412
A/C clutch cycling
pressure switch
(19D594)

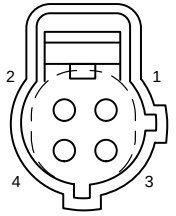

F04253

Pin	Circuit	Circuit function
1	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
2	–	not used
3	–	not used
4	347 (BK/YE)	Powertrain Control Module (PCM) (12A650), to, A/C clutch cycling pressure switch (19D594)

C131

12A581

H1
Horn (13832)

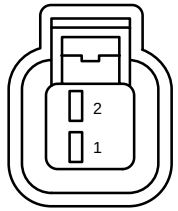

F02069

Pin	Circuit	Circuit function
1	6 (YE/LG)	Horn relay, switched power, output
2	57 (BK)	Ground

C132

12A581

B203
Ambient air temper-
ature sensor
(19E702)

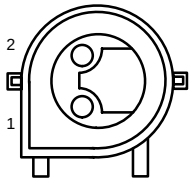

F02177

Pin	Circuit	Circuit function
1	470 (PK/BK)	Sensor signal return (reference/ground)
2	767 (LB/OG)	Ambient air temperature sensor (19E702), feed