## C788

### 14K024

N74
Heater mode switch




F04027

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-FA27 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 15S-FA23 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 3 | 15S-FA17 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 4 | 15S-FA13 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected), switched |

## C789

### 14K024

M3
Heater blower motor

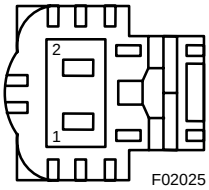


F02025

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-FA18 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 2 | 31S-FA18 (BK/RD) | Ground, switched |

## C798

### 14014

N22
Liftgate/decklid switch

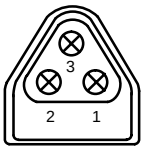


F03005

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-GL20A (BK/RD) | Ground, switched |
| 2 | 31S-LB26 (BK/OG) | Ground, switched |
| 3 | 31-LB26 (BK) | Ground |

## C803

### 9H589

B41
Camshaft position sensor

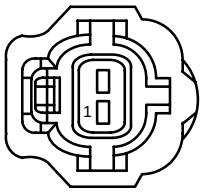


F02027

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-RJ3 (WH/VT) | Sensor signal |
| 2 | 9-RJ3 (BN/WH) | Sensor signal return (reference/ground) |

## C807

### 14A584

M75
Mirror motor, driver side

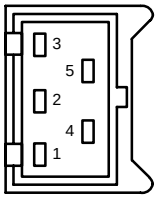


F05012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-HB37 (GN/BK) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 2 | 33-AD6 (YE) | Switched between: Battery voltage, Ground or Open |
| 3 | 31-HB37 (BK) | Ground |
| 4 | 32-AD7 (WH/RD) | Switched between: Battery voltage, Ground or Open |
| 5 | 32-AD8 (WH/BU) | Switched between: Battery voltage, Ground or Open |