C415 (GY)

12A522

A147
Powertrain control module (PCM)

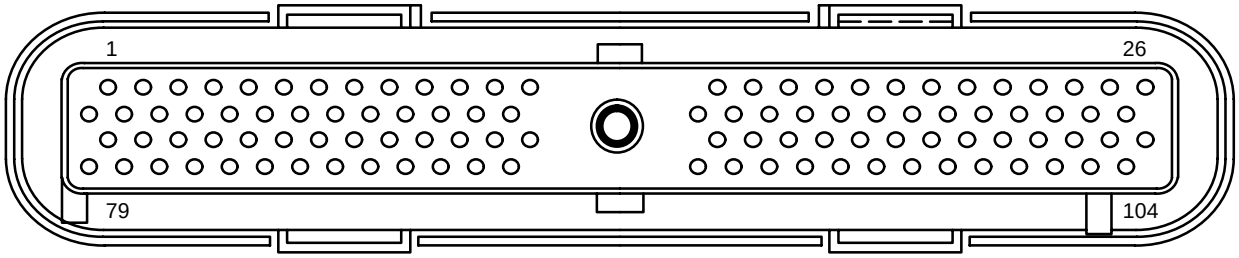

F104001

Pin	Circuit	Circuit Function
1	15S-TA24 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	8-RJ16 (WH/RD)	Sensor signal
4	15S-TA38A (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	–	not used
6	–	not used
7	15S-TA42 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15S-TA41 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	8-RJ1 (WH/BK)	Sensor signal
10	–	not used
11	15S-TA40 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
12	91S-RS3 (BK/WH)	Ground, switched
13	29-RE14 (OG/BK)	Module programming signal
14	–	not used
15	5-EG9 (BU/BK)	Data link, bus negative
16	4-EG9 (GY/OG)	Data link, bus positive
17	31S-PA17 (BK/WH)	Ground, switched
18	–	not used

Pin	Circuit	Circuit Function
19	10-GL37 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
20	31S-RL12 (BK/BU)	Ground, switched
21	8-RJ4 (WH/RD)	Sensor signal
22	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)
23	91-RE8E (BK/YE)	Ground (clean ground)
24	91-RE8A (BK/YE)	Ground
25	31-RE8 (BK)	Ground
26	31S-RR1 (BK/OG)	Ground, switched
27	31S-BB16 (BK/RD)	Ground, switched
28	8-RE22 (WH/VT)	Sensor signal
29	15S-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
30	–	not used
31	91S-CE6 (BK/YE)	Ground, switched
	8-CE6 (WH)	Sensor signal
	8-CE10 (WH/VT)	Sensor signal (X–direction, forward, upward)
32	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
33	9-RJ29 (BN/BU)	Sensor signal return (reference/ground)
34	8-TA27 (WH/VT)	Sensor signal
35	8-RJ15 (WH/RD)	Sensor signal
36	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)

-47

Pin	Circuit	Circuit Function
37	8-TA36 (WH/GN)	Sensor signal
	8-RJ11 (WH/GN)	Sensor signal
38	8-RJ33 (WH/VT)	Sensor signal
	8-RJ5 (WH)	Sensor signal
39	8-RJ17 (WH/VT)	Sensor signal
40	15-RE16 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
41	15S-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
42	31S-GL6 (BK/OG)	Ground, switched
43	8-GH9 (WH/BU)	Sensor signal
44	15S-TA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
45	31S-RL27 (BK/RD)	Ground, switched
46	31S-PA19 (BK/GN)	Ground, switched
47	91S-PA25 (BK/GN)	Ground, switched
48	–	not used
49	5-EC7 (BU/RD)	Data link, bus negative
50	4-EC7 (GY/RD)	Data link, bus positive
51	91-RE8B (BK/YE)	Ground
52	31S-RR2 (BK/GN)	Ground, switched
53	8-GL37 (WH/GN)	Sensor signal
54	31S-RE32 (BK/WH)	Ground, switched
	31S-RH5 (BK/BU)	Ground, switched
55	30-RE8 (RD)	Voltage supplied at all times (not over-load protected)

Pin	Circuit	Circuit Function
56	31S-RL25 (BK/BU)	Ground, switched
57	8-RJ18 (WH/BK)	Sensor signal
58	8-RJ29 (WH/BU)	Sensor signal
59	4-EB6 (GY)	Data link, bus positive
60	8-RJ14 (WH)	Sensor signal
61	–	not used
62	–	not used
63	–	not used
64	15S-TA37 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	8-BB6 (WH)	Sensor signal
65	8-RJ7 (WH/BU)	Sensor signal
66	–	not used
67	–	not used
68	31S-PA7 (BK/BU)	Ground, switched
69	31S-FA11 (BK/YE)	Ground, switched
70	31S-RL10 (BK/WH)	Ground, switched
71	15-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
72	5-EB6 (BU)	Data link, bus negative
73	15S-TA23 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31S-AA43 (BK/WH)	Ground (power return), switched
74	–	not used
75	31S-PA17 (BK/WH)	Ground (power return), switched
76	9-RE8A (BN)	Sensor signal return (reference/ground)
	8-RJ3 (WH/VT)	Sensor signal
	91-RE8E (BK/YE)	Ground (clean ground)
77	91-RE8 (BK/YE)	Ground
78	–	not used
79	–	not used
80	–	not used
81	91S-TA17 (BK/RD)	Ground, switched

-48

Pin	Circuit	Circuit Function
82	15S-TA63 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
83	31S-RL9 (BK/YE)	Ground, switched
84	–	not used
85	8-RJ3 (WH/VT)	Sensor signal
	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)
86	8-PA13 (WH/RD)	Sensor signal
87	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
88	8-RJ22 (WH/BU)	Sensor signal
89	8-RJ28 (WH)	Sensor signal
90	7-RE8 (YE)	DC voltage supplied at all times (sensor)
91	9-RE8 (BN)	Sensor signal return (reference/ground)
92	15S-RE13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
93	91S-RJ14 (BK/YE)	Ground, switched
94	–	not used
95	31S-RL13 (BK/OG)	Ground, switched
96	31S-RL11 (BK/YE)	Ground, switched
97	15-RE8A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
98	–	not used
99	15S-TA64 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
100	91S-RJ15 (BK/BU)	Ground, switched
101	–	not used
102	15S-TA65 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
103	91-RE8C (BK/YE)	Ground
104	–	not used