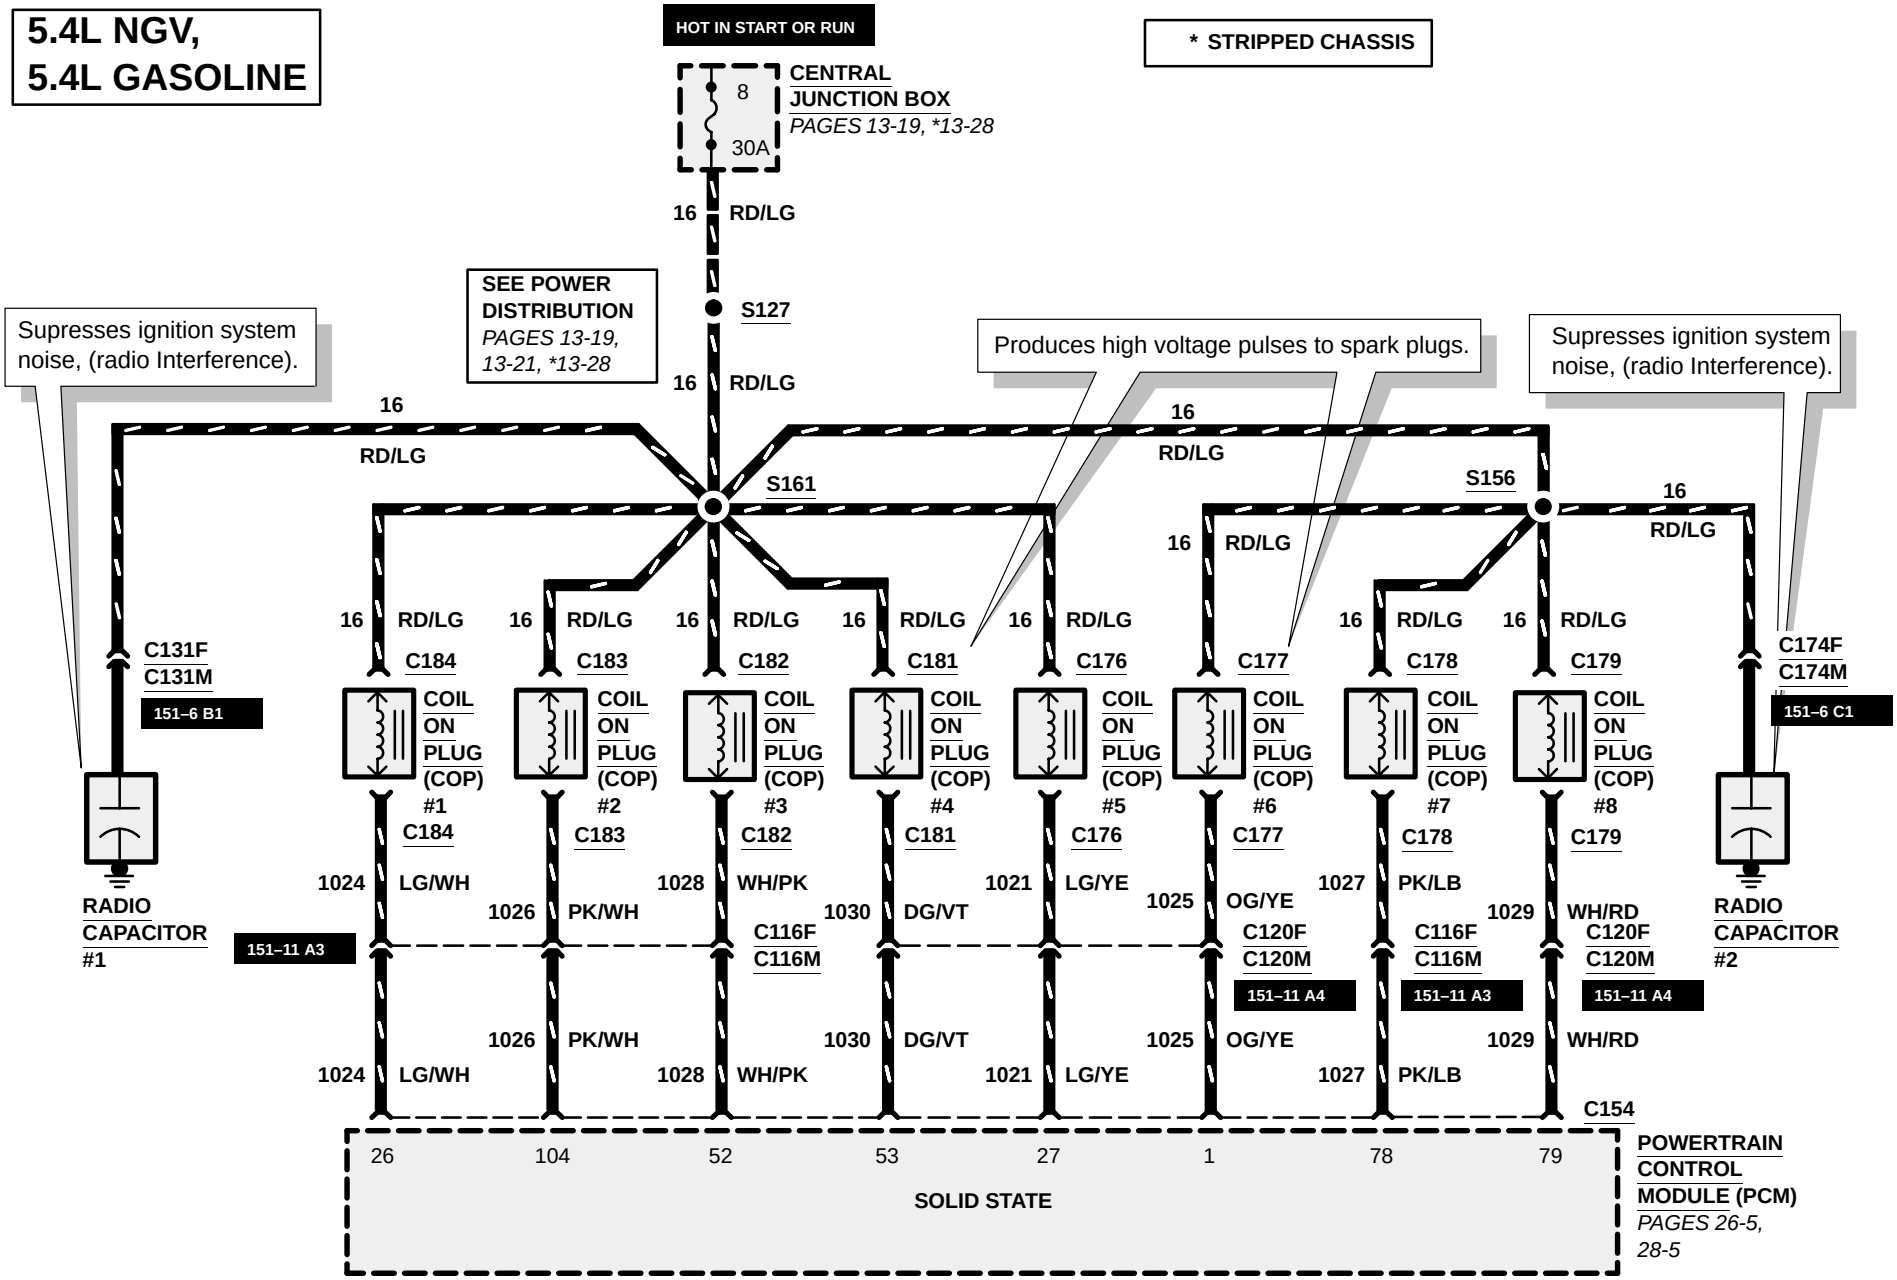
5.4L NGV,
5.4L GASOLINE
HOT IN START OR RUN
* STRIPPED CHASSIS
CENTRAL JUNCTION BOX
PAGES 13-19, *13-28
8
30A
16 RD/LG
SEE POWER DISTRIBUTION
PAGES 13-19, 13-21, *13-28
S127
Supresses ignition system noise, (radio Interference).
Produces high voltage pulses to spark plugs.
Supresses ignition system noise, (radio Interference).
S161
S156
C131F
C131M
151–6 B1
C174F
C174M
151–6 C1
C184
C183
C182
C181
C176
C177
C178
C179
COIL ON PLUG (COP)
#1
#2
#3
#4
#5
#6
#7
#8
1024 LG/WH
1026 PK/WH
1028 WH/PK
1030 DG/VT
1021 LG/YE
1025 OG/YE
1027 PK/LB
1029 WH/RD
RADIO CAPACITOR #1
RADIO CAPACITOR #2
151–11 A3
C116F
C116M
C120F
C120M
151–11 A4
C154
26
104
52
53
27
1
78
79
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 26-5, 28-5