DIESEL

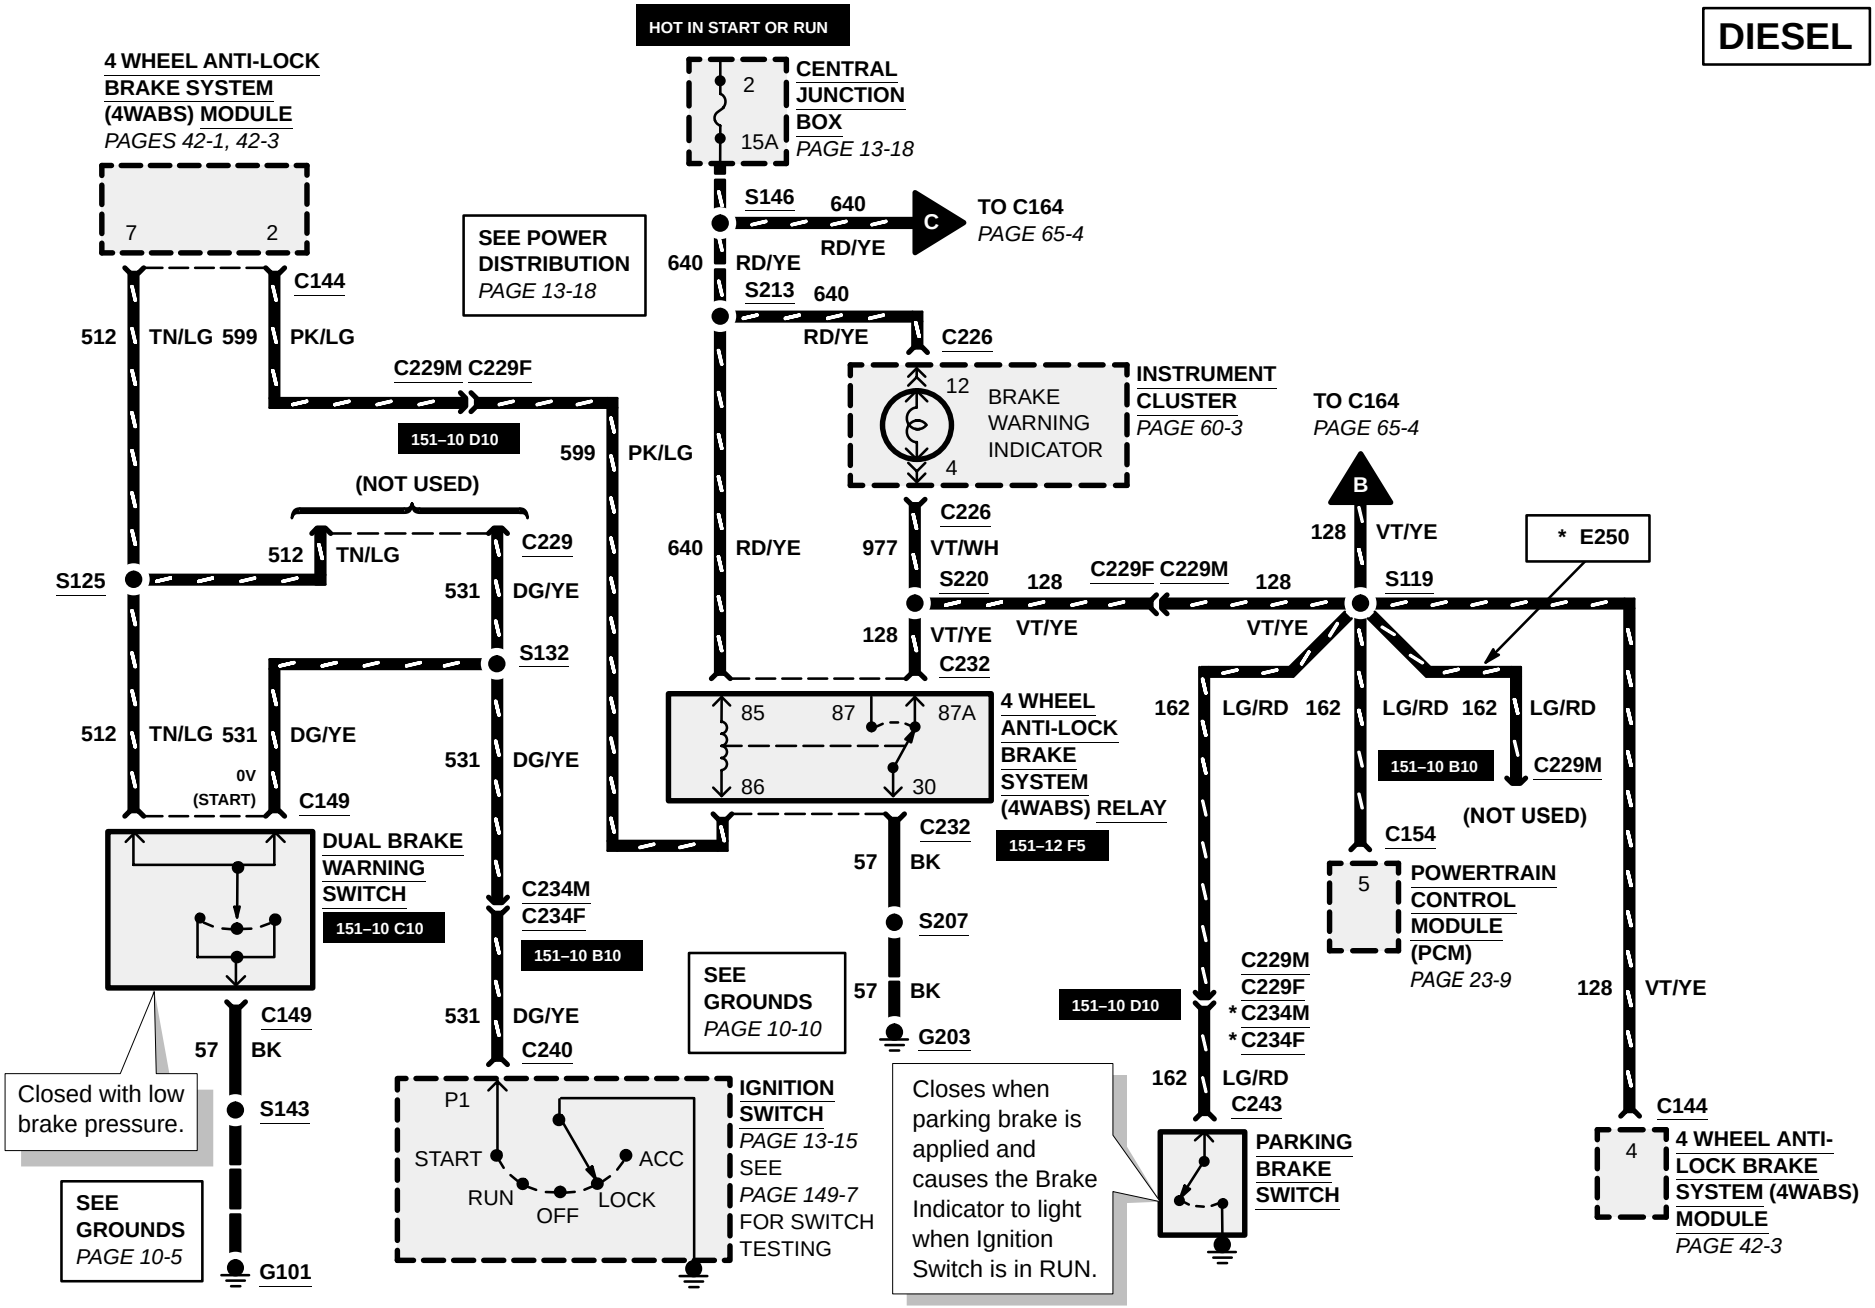
HOT IN START OR RUN
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGES 42-1, 42-3
7
2
C144
512 TN/LG
599 PK/LG
C229M C229F
151–10 D10
599 PK/LG
(NOT USED)
512 TN/LG
C229
531 DG/YE
S125
S132
512 TN/LG
531 DG/YE
0V (START)
C149
531 DG/YE
DUAL BRAKE WARNING SWITCH
151–10 C10
C234M
C234F
151–10 B10
C149
57 BK
S143
G101
Closed with low brake pressure.
SEE GROUNDS
PAGE 10-5
531 DG/YE
C240
P1
START
ACC
RUN
LOCK
OFF
IGNITION SWITCH
PAGE 13-15
SEE
PAGE 149-7
FOR SWITCH TESTING
2
15A
CENTRAL JUNCTION BOX
PAGE 13-18
SEE POWER DISTRIBUTION
PAGE 13-18
S146
640 RD/YE
C
TO C164
PAGE 65-4
640 RD/YE
S213
640 RD/YE
C226
12
4
BRAKE WARNING INDICATOR
INSTRUMENT CLUSTER
PAGE 60-3
640 RD/YE
C226
977 VT/WH
S220
128 VT/YE
C232
85
87
87A
86
30
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) RELAY
151–12 F5
C232
57 BK
S207
57 BK
G203
SEE GROUNDS
PAGE 10-10
Closes when parking brake is applied and causes the Brake Indicator to light when Ignition Switch is in RUN.
TO C164
PAGE 65-4
B
128 VT/YE
S119
128 VT/YE
C229F C229M
128 VT/YE
* E250
162 LG/RD
162 LG/RD
151–10 B10
C229M
(NOT USED)
C154
5
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-9
C229M
C229F
*C234M
*C234F
151–10 D10
162 LG/RD
C243
PARKING BRAKE SWITCH
128 VT/YE
C144
4
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-3