## C274a

**14A005**

A262
Central security
module

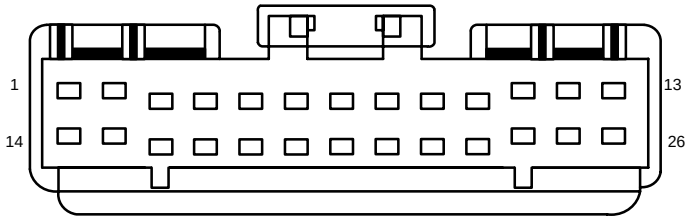


F26014

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 163 (RD/OG) | Driver door unlock relay, switched power |
| 2 | – | not used |
| 3 | 70 (LB/WH) | ISO Bus |
| 4 | – | not used |
| 5 | 78 (LB/YE) | Key pad button 1/2, output |
| 6 | 79 (LG/RD) | Key pad button 3/4, output |
| 7 | 122 (YE) | Key pad button 7/8, output |
| 8 | 123 (RD) | Key pad button 9/0, output |
| 9 | – | not used |
| 10 | 1 (DB) | Horn switch, input |
| 11 | 999 (LB/WH) | GEM/RAP door ajar, signal |
| 12 | 140 (BK/PK) | Voltage supplied in reverse |
| 13 | 6 (YE/LG) | Horn (13832), switched power, output |

| Pin | Circuit | Circuit function |
|---|---|---|
| 14 | 57 (BK) | Ground |
| 15 | 124 (BN) | Key pad common |
| 16 | – | not used |
| 17 | – | not used |
| 18 | – | not used |
| 19 | 121 (YE/BK) | Key pad button 5/6, output |
| 20 | – | not used |
| 21 | – | not used |
| 22 | – | not used |
| 23 | – | not used |
| 24 | 460 (YE/LB) | Voltage supplied at all times (overload protected) |
| 25 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 26 | 810 (RD/LG) | Brake pedal position switch (13480), input |