C1945

14K024

A102
Passive anti–theft transceiver module

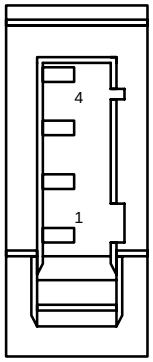

F04116

Pin	Circuit	Circuit Function
1	15-GL37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	91-GL37 (BK/GN)	Ground
3	10-GL37 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
4	8-GL37 (WH/GN)	Sensor signal

C1960 (YE)

14014

B119
Side air bag sensor, left



F02058

Pin	Circuit	Circuit Function
1	9-JA41 (BN)	Sensor signal return (reference/ground)
2	8-JA41 (WH)	Sensor signal

C1961 (YE)

14014

B118
Side air bag sensor, right



F02058

Pin	Circuit	Circuit Function
1	9-JA43 (BN/WH)	Sensor signal return (reference/ground)
2	8-JA43 (WH/VT)	Sensor signal

C1958 (GY)

14014

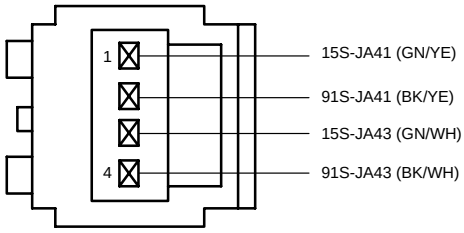

F04148

14K024

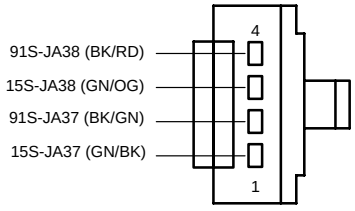

F04146

C1962 (YE)

14014

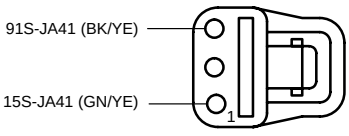

F03035

14K155

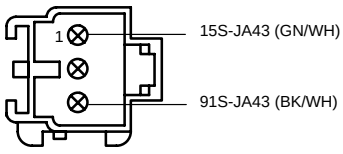

F03062