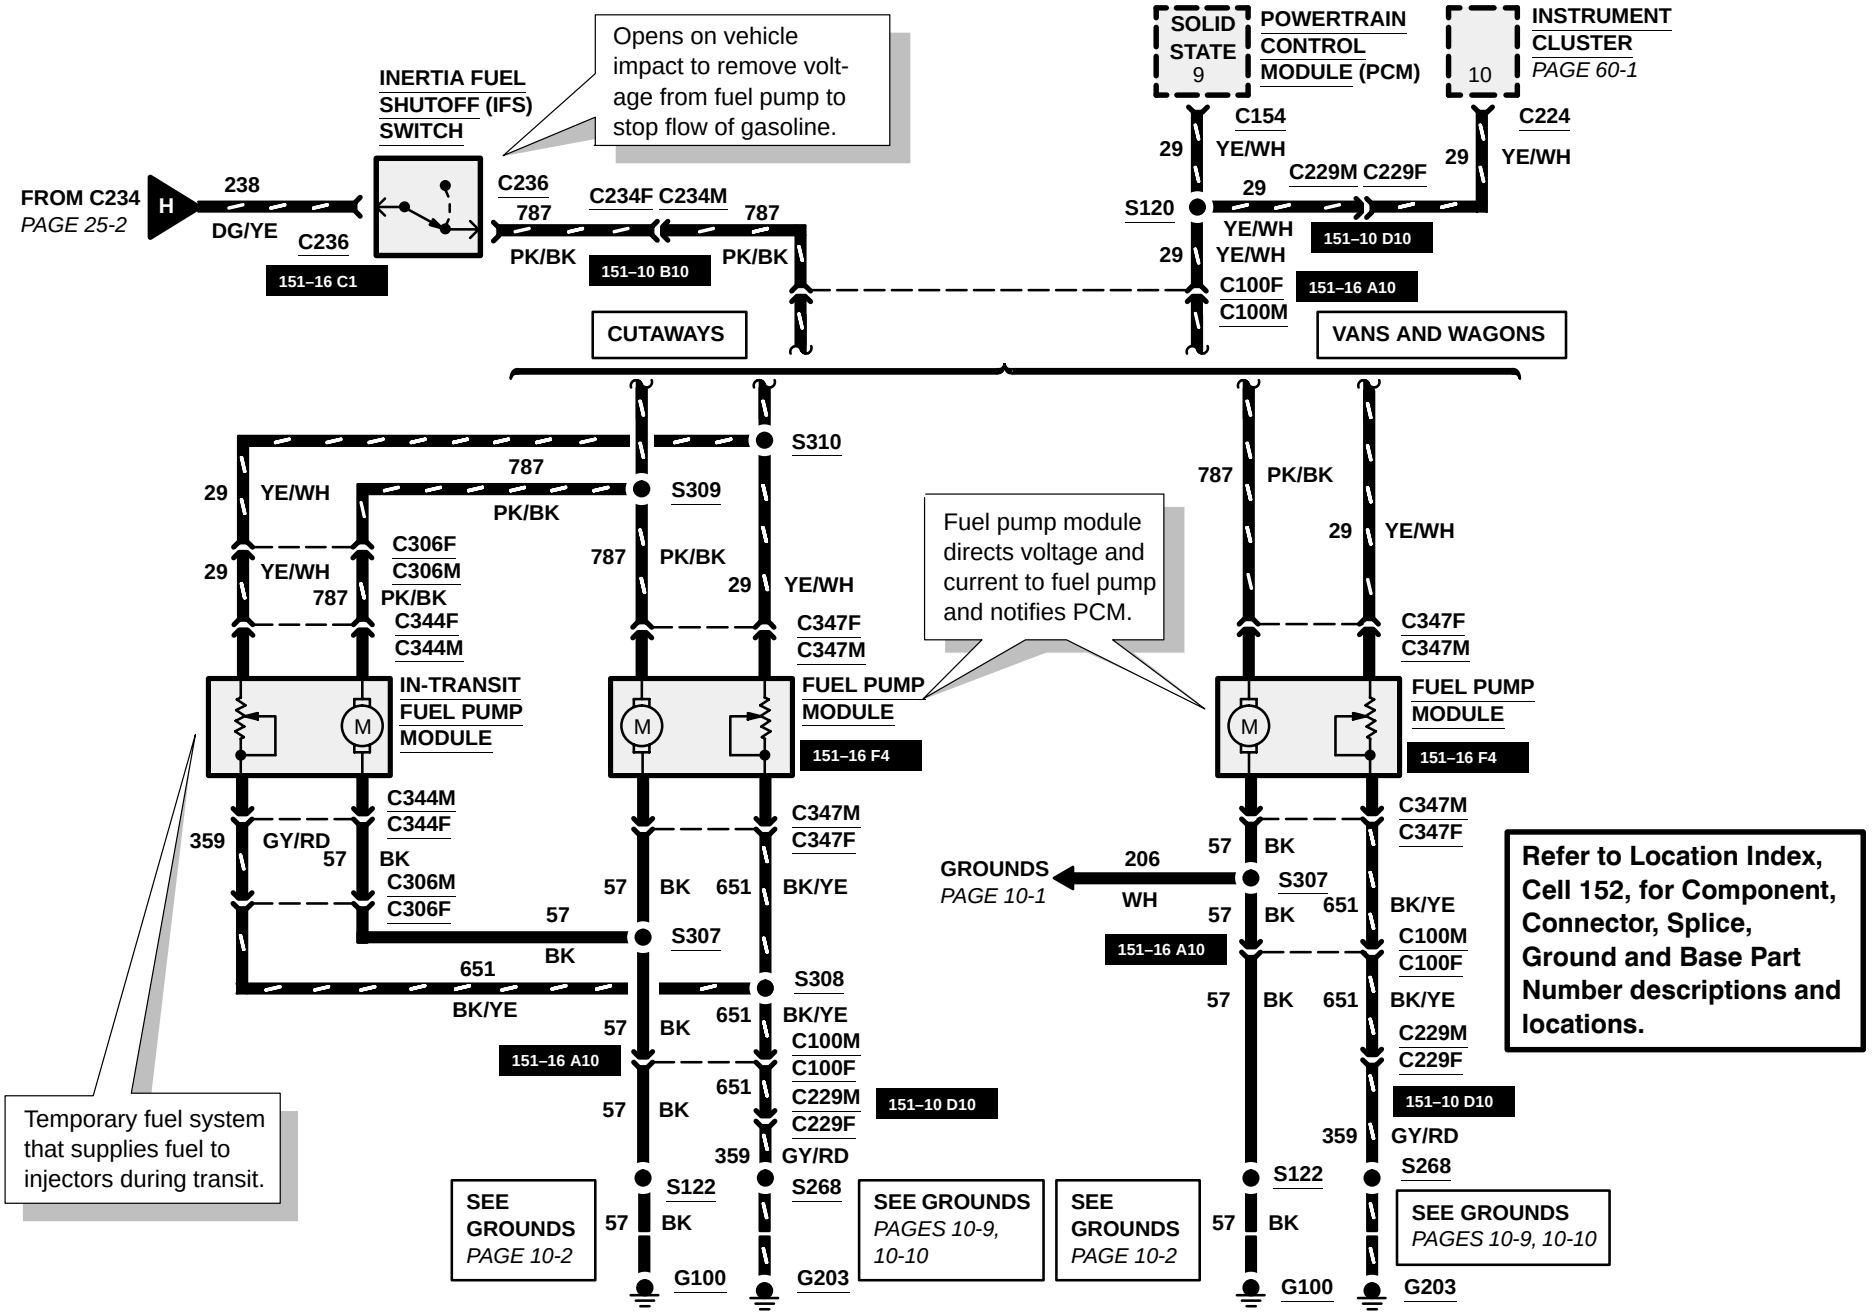
Opens on vehicle impact to remove voltage from fuel pump to stop flow of gasoline.
INERTIA FUEL SHUTOFF (IFS) SWITCH
FROM C234 PAGE 25-2
H
238
DG/YE
C236
151–16 C1
C236
787
PK/BK
C234F C234M
787
PK/BK
151–10 B10
SOLID STATE 9
POWERTRAIN CONTROL MODULE (PCM)
10
INSTRUMENT CLUSTER PAGE 60-1
C154
29
YE/WH
C224
29
YE/WH
C229M C229F
29
S120
YE/WH
151–10 D10
29
YE/WH
C100F
C100M
151–16 A10
CUTAWAYS
VANS AND WAGONS
S310
787
29
YE/WH
S309
PK/BK
C306F
C306M
29
YE/WH
787
PK/BK
787
PK/BK
C344F
C344M
29
YE/WH
C347F
C347M
IN-TRANSIT FUEL PUMP MODULE
FUEL PUMP MODULE
151–16 F4
Fuel pump module directs voltage and current to fuel pump and notifies PCM.
787
PK/BK
29
YE/WH
C347F
C347M
FUEL PUMP MODULE
151–16 F4
C344M
C344F
359
GY/RD
57
BK
C306M
C306F
C347M
C347F
57
BK
651
BK/YE
57
S307
BK
651
BK/YE
S308
C347M
C347F
GROUNDS PAGE 10-1
206
WH
57
BK
S307
57
BK
651
BK/YE
151–16 A10
C100M
C100F
57
BK
651
BK/YE
C229M
C229F
151–10 D10
359
GY/RD
S268
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.
Temporary fuel system that supplies fuel to injectors during transit.
SEE GROUNDS PAGE 10-2
57
BK
S122
G100
SEE GROUNDS PAGES 10-9, 10-10
G203
SEE GROUNDS PAGE 10-2
57
BK
S122
G100
SEE GROUNDS PAGES 10-9, 10-10
G203