
## C2156

**14401**

Warning buzzer/ chime module

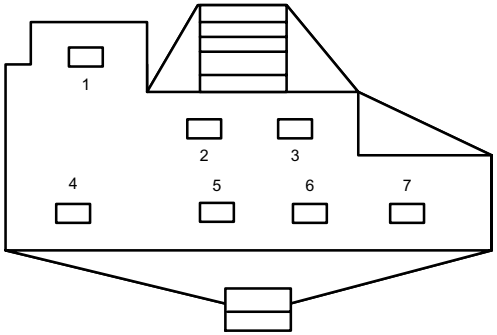



| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 14 (BN) | Power, Exterior lamps |
| 2 | 159 (RD/PK) | Door ajar switch, left front, signal |
| 3 | 85 (BN/LB) | Safety belt buckle switch (10B924), input |
| 4 | 158 (BK/PK) | Key warning switch (11A127), input |
| 5 | 57 (BK) | Ground |
| 6 | 112 (BK/YE) | Safety belt indicator, control |
| 7 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |

## C2157

**14401**

Wiper Control Module (WCM)

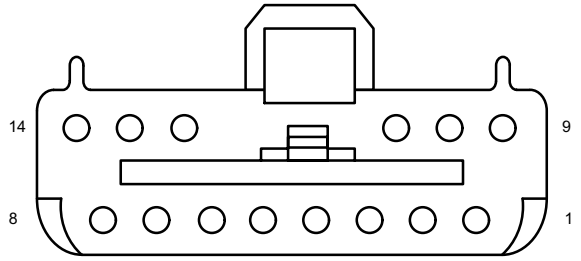


| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 589 (OG) | Wiper/washer switch, wiper speed circuit |
| 2 | 65 (DG) | Voltage in Run or Accessory (overload protected) |
| 3 | 57 (BK) | Ground |
| 4 | 941 (BK/WH) | Windshield washer pump motor (17618), feed |
| 5 | 57 (BK) | Ground |
| 6 | – | not used |
| 7 | 993 (BN/WH) | Wiper Control Module (WCM), feed, to, Wiper/washer switch |
| 8 | 56 (DB/OG) | Wiper Control Module (WCM), output, Low |
| 9 | 590 (DB/WH) | Wiper/washer switch, Intermittent wiper circuit |
| 10 | 61 (YE/RD) | Ground |
| 11 | 65 (DG) | Voltage in Run or Accessory (overload protected) |
| 12 | – | not used |
| 13 | 28 (BK/PK) | wiper park position signal |
| 14 | 58 (WH) | Wiper Control Module (WCM), output, High |