C603

14630

M242
Door lock actuator,
right front

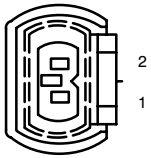

F02116

Pin	Circuit	Circuit function
1	1383 (RD)	Door lock, output
2	1384 (LB)	Door unlock, output

C606

14630

E178
Door entry lamp,
right front (13776)

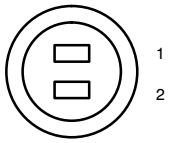

F02086

Pin	Circuit	Circuit function
1	1334 (OG/WH)	puddle lamp, control
2	1458 (VT/WH)	Fused battery feed, SSP 4 relay, to, right rear, Lamp

C605

14630

N205
Door lock switch,
passenger side
(14028)

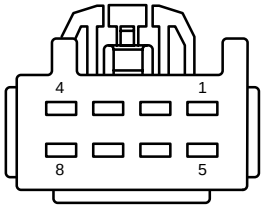

F08217

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	1297 (YE/RD)	Passenger front door lock switch, Door unlock, input
4	1205 (BK)	Ground
5	194 (PK)	Voltage in Run or Accessory (overload protected)
6	–	not used
7	1296 (OG/BK)	Passenger front door lock switch, Door lock, input
8	–	not used

C610

14630

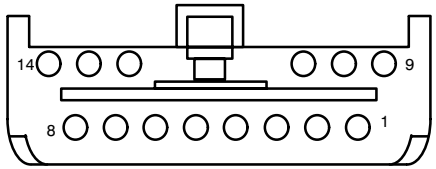

F14002

14A005

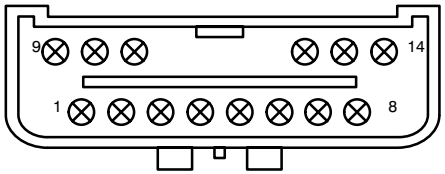

F14008

(1) 543 (DG)
(2) 1545 (OG)
(3) 1384 (LB)
(4) 1383 (RD)
(5) 1297 (YE/RD)
(6) 1296 (OG/BK)
(7) 1315 (LB/PK)
(8) 59 (DG/VT)
(9) 1547 (RD)
(10) 1340 (DG)
(11) 1334 (OG/WH)
(12) 1458 (VT/WH)
(13) 194 (PK)
(14) 544 (VT)