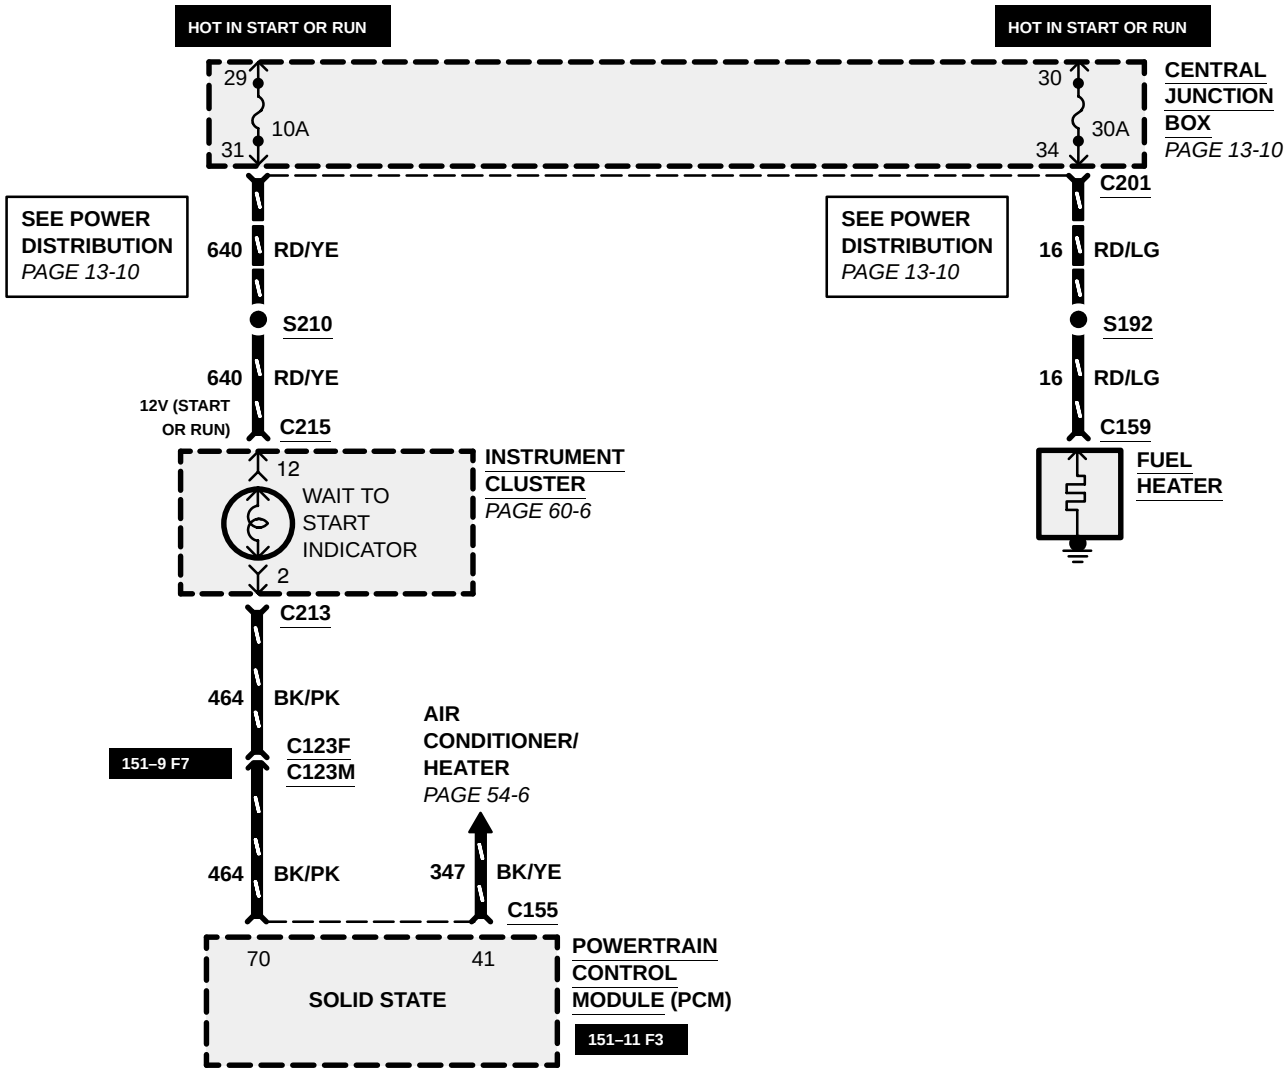
HOT IN START OR RUN
HOT IN START OR RUN
29
10A
31
30
30A
34
CENTRAL JUNCTION BOX
PAGE 13-10
C201
SEE POWER DISTRIBUTION
PAGE 13-10
640 RD/YE
S210
640 RD/YE
12V (START OR RUN)
C215
SEE POWER DISTRIBUTION
PAGE 13-10
16 RD/LG
S192
16 RD/LG
C159
FUEL HEATER
12
WAIT TO START INDICATOR
2
INSTRUMENT CLUSTER
PAGE 60-6
C213
464 BK/PK
C123F
C123M
151–9 F7
AIR CONDITIONER/ HEATER
PAGE 54-6
464 BK/PK
347 BK/YE
C155
70
41
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3